


TAILLIGHT DOES NOT LIGHT UP

WIRING DIAGRAM

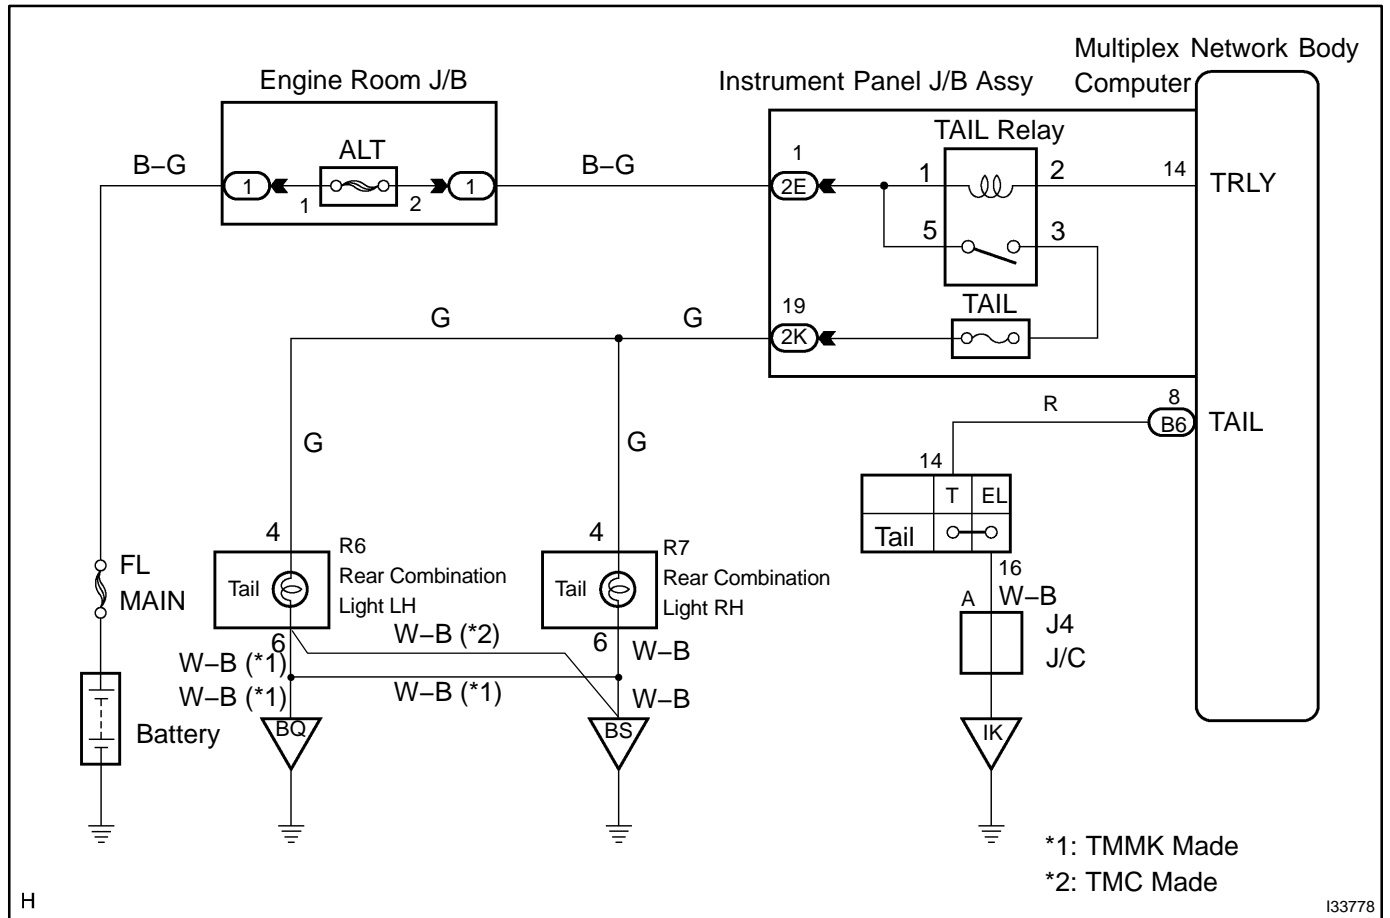


H

I33778

INSPECTION PROCEDURE

1 INSPECT TAIL LAMP RELAY

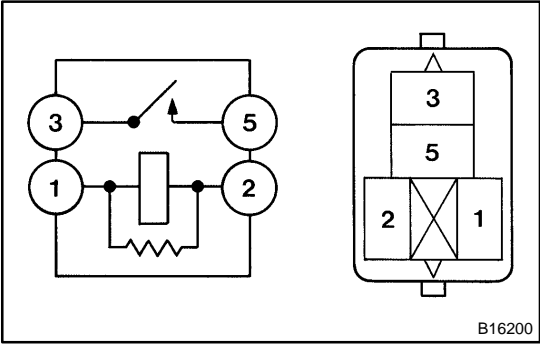

(a) Inspect relay continuity.


Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

NG REPLACE TAIL LAMP RELAY

OK

REPAIR OR REPLACE HARNESS AND CONNECTOR(BETWEEN INSTRUMENT PANEL J/B ASSY AND TAIL RELAY)

2 INSPECT HEADLAMP DIMMER SWITCH ASSY(TAIL)

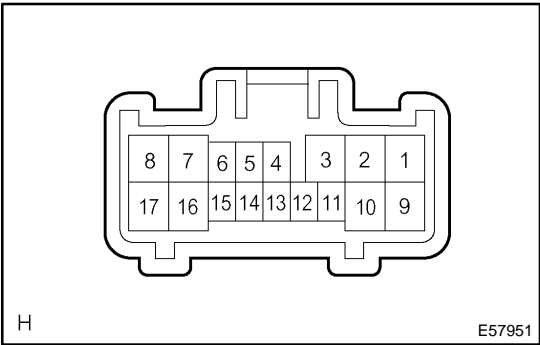

(a) Inspect light control switch continuity.
(1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	–	No continuity
TAIL	14 – 16	Continuity

NG REPLACE HEADLAMP DIMMER SWITCH ASSY

OK

CHECK AND REPLACE INSTRUMENT PANEL JUNCTION BLOCK ASSY