

CD CANNOT BE INSERTED/PLAYED OR CD IS EJECTED RIGHT AFTER INSERTION

INSPECTION PROCEDURE

1 CHECK THE CD

(a) Check if another audio CD can be inserted.

- (1) Check if the CD is a normal audio CD, and that the CD has no cracks, scratches, deformations, dirt, or other defects.

Standard: The CD is a normal audio CD without any problems.

HINT:


- Translucent or deformed CDs cannot be played.
- CD-ROMs (even those with music) and CD-R discs cannot be played.
- A copy protected CD should not be used.
- An adaptor is not necessary to play 3.2 inch (8 cm) CDs.

NG

REPLACE THE CD

OK

2 CHECK CD INSERTION

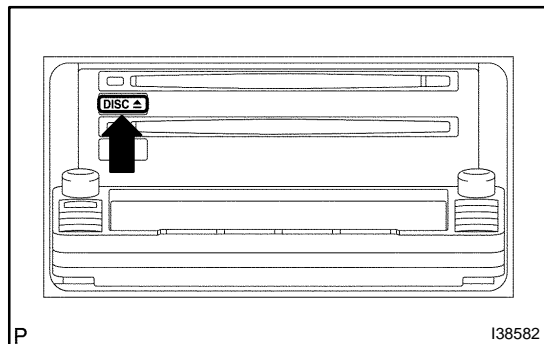

P

I38582

(a) Check that a CD is correctly inserted.

- (1) Check that the "DISC" indicator near the disc slot comes on.
- (2) Check that the CD has not been inserted up side down.

Standard: CD is inserted correctly.

NG


INSERT THE CD CORRECTLY

OK

3 CHECK THE CD

- (a) Check for dirt on the CD surface.

Standard: The CD is clean.

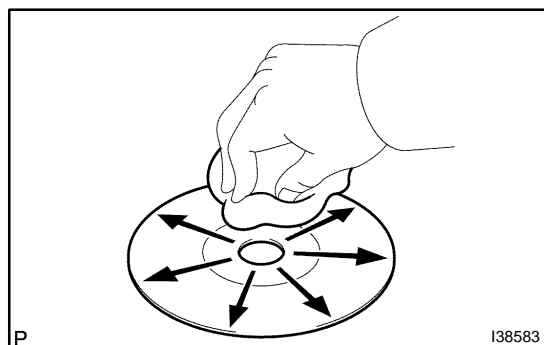

HINT:

If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.

NOTICE:

Do not use conventional record cleaner or anti-static preservative.

NG

CLEAN THE CD

OK

4 CHECK USING ANOTHER CD

- (a) Check using another CD.
(1) Check if the problem recurs using another CD.

Standard: The problem does not recur.

OK

REPLACE THE CD

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1914)**