


HOOD SUPPORT ROD REPLACEMENT

7509I-01

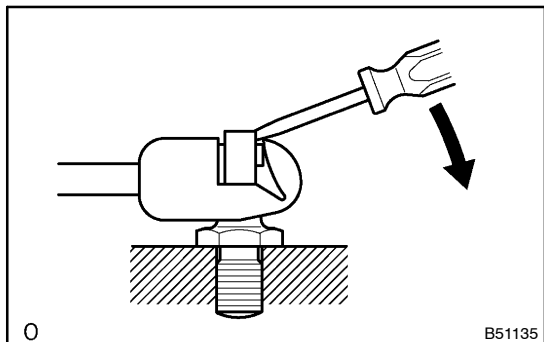

1. REMOVE HOOD SUPPORT ROD

- (a) Using a screwdriver to hold the left spring, disengage the upper and lower parts of the support rod, and then remove the hood support rod.

NOTICE:

Removal should be done while the hood is being held up.

2. INSTALL HOOD SUPPORT ROD

NOTICE:

- Install a metal socket onto the hood but a resinous one onto the body.
- After the installation, make sure that the socket is securely attached.