


Key Reminder

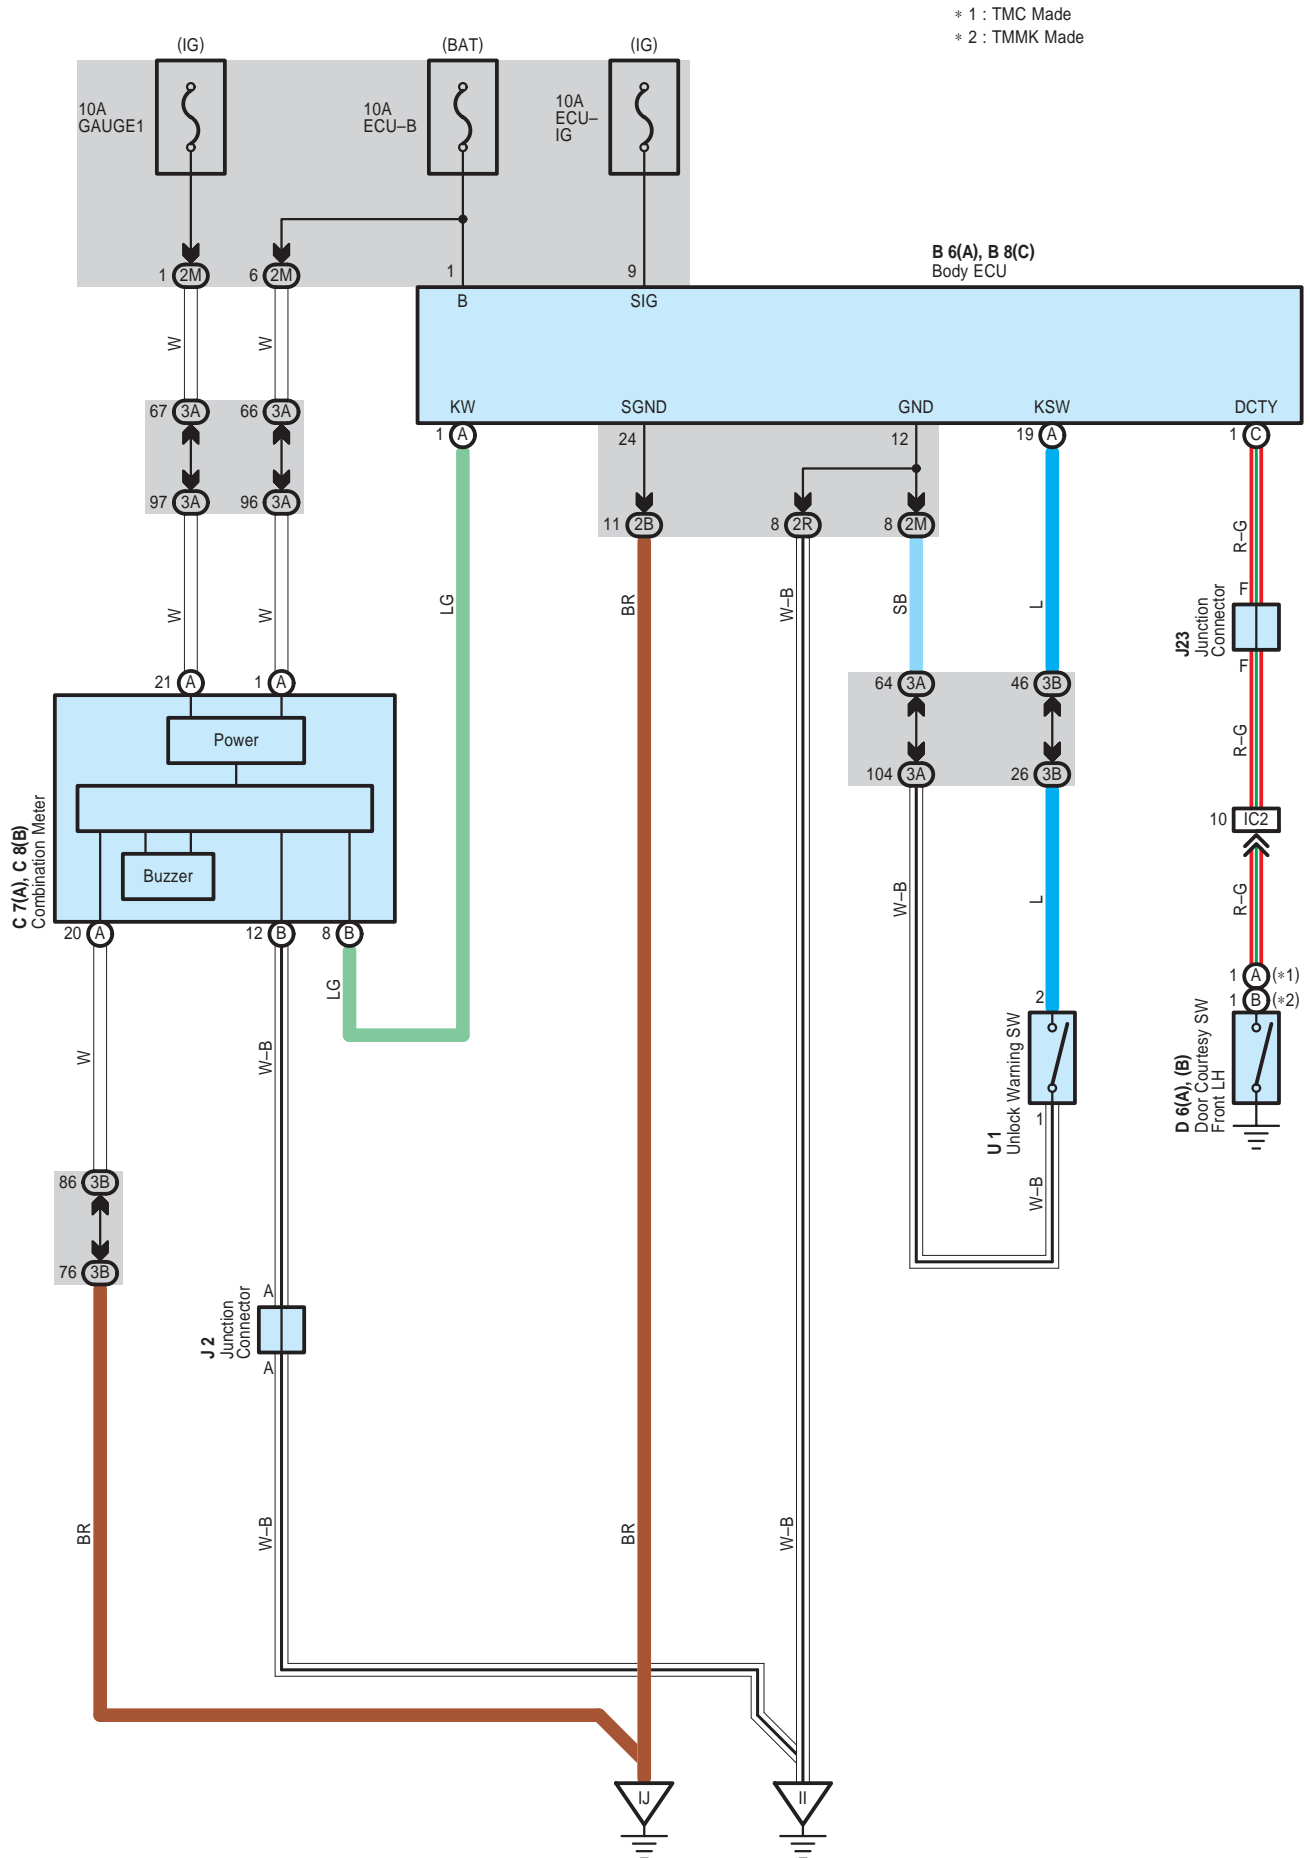

System Outline

Key Reminder System

With the ignition key inserted in the key cylinder (Unlock warning SW on), the ignition SW still off and driver's door open (Door courtesy SW on), when a signal is input to TERMINAL (C) 1 of the body ECU, the body ECU operates, current flows from TERMINAL (A) 1 of the ECU to TERMINAL (B) 8 of the combination meter to GROUND and key reminder buzzer sounds.

○ : Parts Location

Code			See Page			Code			See Page		
B6	A	42				C8	B	42	J2	43	
B8	C	42				D6	A	44	J23	43	
C7	A	42					B	44	U1	43	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M	29	
2R		
3A	34	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	50	Instrument Panel Wire and Floor Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
II	50	Cowl Side Panel LH
IJ	50	Instrument Panel Brace LH