

Removal & Installation and Disassembly & Reassembly

1. REMOVE OXYGEN SENSOR

- (a) Disconnect the oxygen sensor connector.
- (b) Remove the oxygen sensor.

2. REMOVE EXHAUST PIPE NO.1 SUPPORT BRACKET

- (a) Remove the 2 nuts and support bracket.

3. REMOVE EXHAUST PIPE NO.1 SUPPORT BRACKET

- (a) Remove the 2 bolts and support bracket.

4. REMOVE EXHAUST PIPE ASSY FRONT

5. REMOVE FLOOR PANEL BRACE REAR


- (a) Remove the 2 bolts and floor panel brace rear.

6. REMOVE EXHAUST PIPE ASSY CENTER

7. REMOVE EXHAUST PIPE DAMPER(A/T TRANSAXLE)

8. REMOVE TAIL PIPE ASSY

9. INSTALL TAIL PIPE ASSY

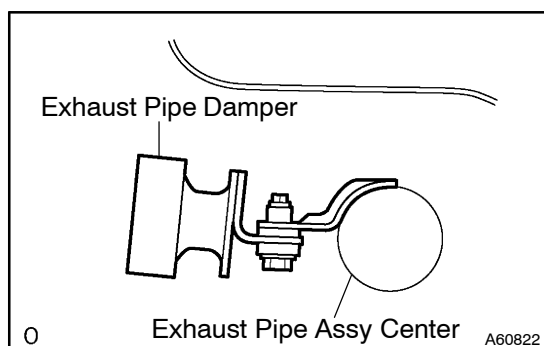

10. INSTALL EXHAUST PIPE DAMPER(A/T TRANSAXLE)

- (a) Install the exhaust pipe damper with the 2 bolts.

Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)

HINT:

Be careful not to install the damper in the wrong direction.

11. INSTALL EXHAUST PIPE ASSY CENTER

- (a) Install a new gasket and the center pipe to the tail pipe.

Torque: 56 N·m (571 kgf·cm, 41 ft·lbf)

12. INSTALL FLOOR PANEL BRACE REAR

Torque: 19.5 N·m (199 kgf·cm, 14 ft·lbf)


13. INSTALL EXHAUST PIPE ASSY FRONT

- (a) Install a new gasket, install front pipe to center pipe.

Torque: 56 N·m (571 kgf·cm, 41 ft·lbf)

- (b) Install a new gasket and the front pipe to exhaust manifold converter.

Torque: 62 N·m (633 kgf·cm, 46 ft·lbf)

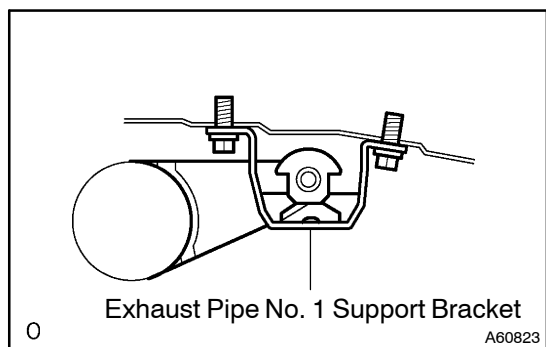**14. INSTALL EXHAUST PIPE NO.1 SUPPORT BRACKET**

- (a) Install the exhaust pipe No. 1 support bracket with the 2 bolts.

Torque: 33 N·m (337 kgf·cm, 24 ft·lbf)

HINT:

Be careful not to install the damper in the wrong direction.

15. INSTALL EXHAUST PIPE NO.1 SUPPORT BRACKET

Torque: 33 N·m (337 kgf·cm, 24 ft·lbf)

16. INSTALL OXYGEN SENSOR

Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)

17. CHECK EXHAUST GAS LEAK