

NAVIGATION ANTENNA ASSY


REPLACEMENT

6709N-01

HINT:

COMPONENTS: [See page 67-1](#)

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE SPARE WHEEL COVER ASSY
3. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1
([See page 76-5](#))
4. REMOVE REAR FLOOR FINISH PLATE
([See page 76-5](#))
5. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER LH
([See page 76-5](#))
6. ☐ REMOVE REAR SEAT CUSHION ASSY ([See page 72-21](#))
7. ☐ REMOVE REAR SEAT BACK ASSY RH ([See page 72-21](#))
8. REMOVE REAR SEAT BACK ASSY LH
9. ☐ REMOVE REAR SIDE SEAT BACK ASSY RH ([See page 72-21](#))
10. REMOVE REAR SIDE SEAT BACK ASSY LH
11. REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG)
([See page 76-21](#))
12. REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)
13. REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG)
([See page 76-21](#))
14. REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)
15. REMOVE REAR SEAT SHOULDER BELT COVER RH
([See page 61-13](#))
16. REMOVE PACKAGE TRAY TRIM PANEL ASSY
([See page 67-7](#))
17. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER
([See page 61-13](#))
18. REMOVE REAR SEAT INNER W/CENTER BELT ASSY RH
([See page 61-13](#))
19. REMOVE REAR SEAT INNER W/CENTER BELT ASSY LH
([See page 61-13](#))
20. REMOVE ROOM PARTITION BOARD LH
([See page 67-7](#))
21. REMOVE ROOM PARTITION BOARD RH
([See page 67-7](#))
22. REMOVE NAVIGATION ANTENNA ASSY
 - (a) Disconnect the connector.

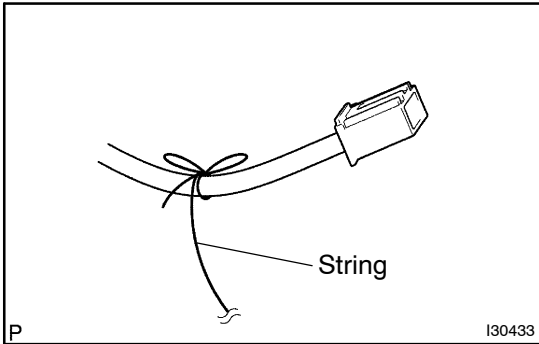


- (b) Tie the string at the tip of the cable of the navigation antenna assy.

(c) Remove the screw.

(d) Remove the 2 clamps and navigation antenna assy.

NOTICE:

As the string is used at the time of installation, remain it putting through the luggage room and the room side.

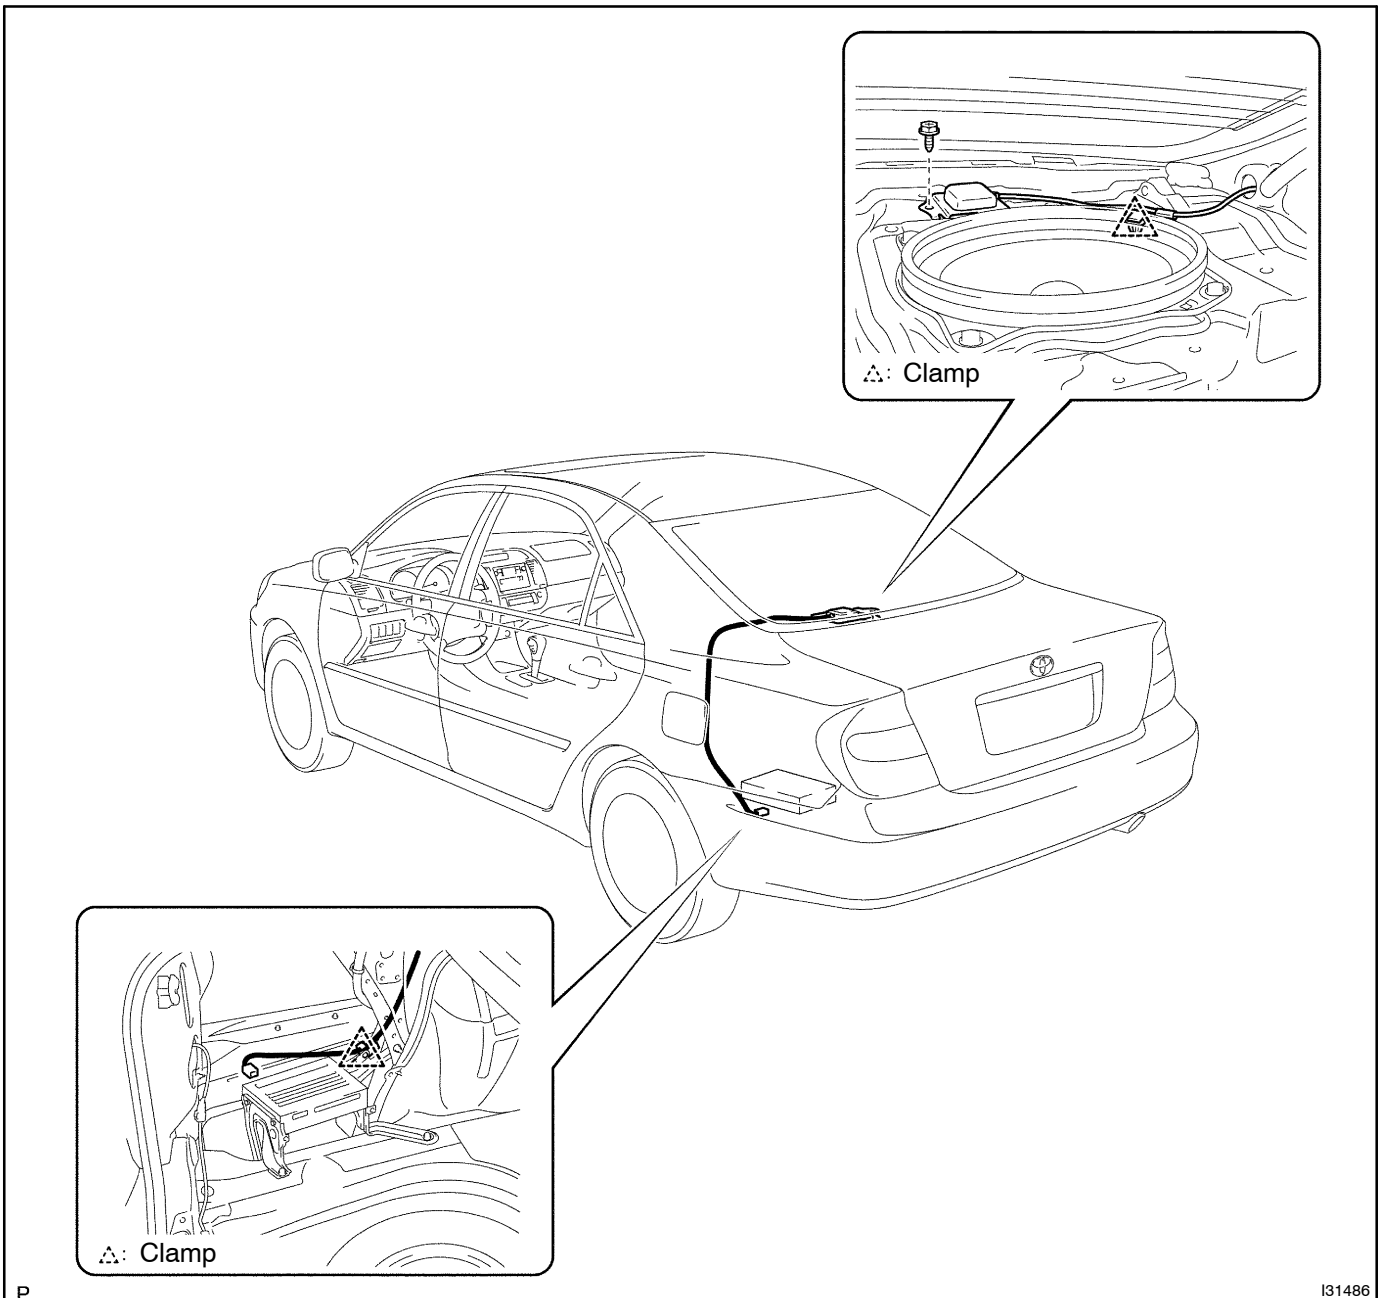

23. INSTALL NAVIGATION ANTENNA ASSY

- (a) Detach the string put through the luggage room and the room side from the connector and attach it with a new navigation antenna assy.
- (b) Using this string put the navigation antenna assy through the luggage room and the room side.

NOTICE:

To prevent the connector from being damaged, wrap protective tape around the tip of connector of the navigation antenna assy.

- (c) Install the navigation antenna assy with screw and 2 clamps.
- (d) Connect the connector.

24. INSTALL REAR SEAT INNER W/CENTER BELT ASSY LH

(See page 61-13)

25. INSTALL REAR SEAT 3 POINT TYPE BELT ASSY OUTER

(See page 61-13)

26. INSTALL REAR SEAT INNER W/CENTER BELT ASSY RH

(See page 61-13)

27. INSTALL REAR SIDE SEAT BACK ASSY LH

(See page 72-21)

28. INSTALL REAR SIDE SEAT BACK ASSY RH

(See page 72-21)

29. INSTALL REAR SEAT BACK ASSY RH (See page 72-21)**30. INSTALL REAR SEAT BACK ASSY LH**