

PARKING BRAKE CABLE ASSY NO.4


REPLACEMENT

3305C-01

HINT:


COMPONENTS: [See page 33-3](#)

1. REMOVE CONSOLE PANEL UPPER REAR
([See page 71-10](#))
 2. REMOVE CONSOLE BOX CARPET
([See page 71-10](#))
 3. REMOVE RR CONSOLE BOX ([See page 71-10](#))
 4. REMOVE CONSOLE BOX MOUNTING BRACKET NO.2
- (a) Remove the 2 bolts and console box mounting bracket No.2.
5. REMOVE YAWRATE SENSOR(W/ VSC)
([See page 32-53](#))

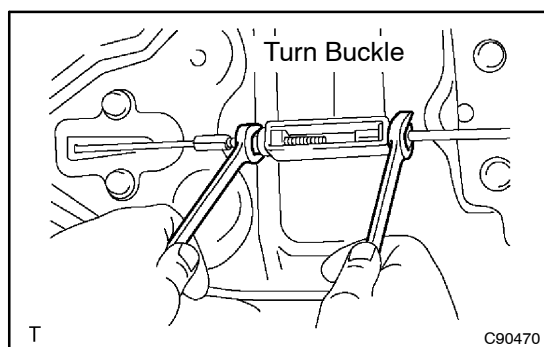


6. REMOVE PARKING BRAKE CABLE ASSY NO.4

- (a) Loosen the turn buckle, disconnect the parking brake cable assy No.4 from the parking brake cable assy No.1.
- (b) Disconnect the parking brake cable assy No.4 from the parking brake equalizer.

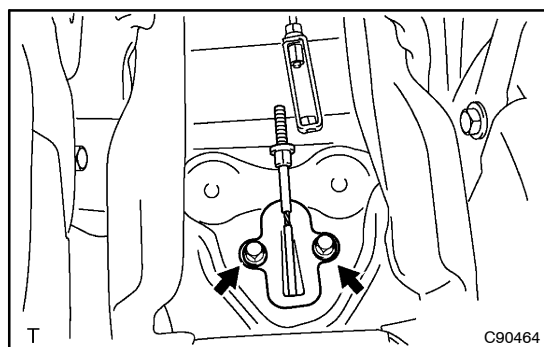


- (c) Remove the 2 bolts and parking brake cable assy No.4.

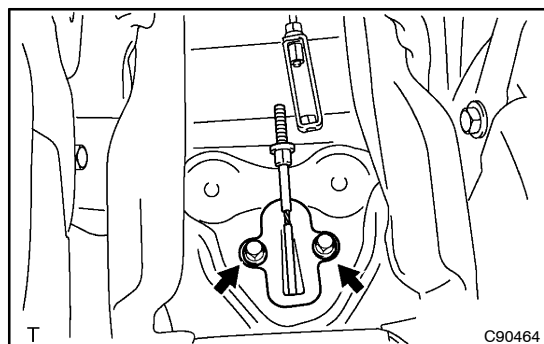

7. INSTALL PARKING BRAKE CABLE ASSY NO.4

- (a) Install the parking brake cable No.4 with the 2 bolts.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)
- (b) Connect the parking brake cable assy No.4 to the parking brake equalizer.

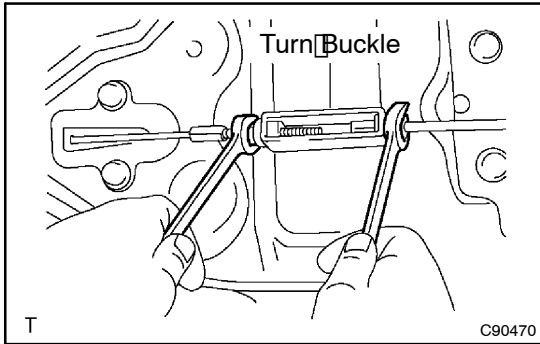

- (c) Tighten the turn buckle, connect the parking brake cable assy No.4 to the parking brake cable assy No.1.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lb)

8. INSTALL YAWRATE SENSOR(W/VSC)
(See page 32-53)

9. INSTALL CONSOLE BOX MOUNTING BRACKET NO.2

- (a) Install the console box mounting bracket No.2 with the 2 bolts.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lb)

10. INSTALL RR CONSOLE BOX (See page 71-10)

11. INSTALL CONSOLE BOX CARPET
(See page 71-10)

12. INSTALL CONSOLE PANEL UPPER REAR
(See page 71-10)

13. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (See page 33-2)

14. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION(W/VSC) (See page 05-511)