


# TRANSMITTER BATTERY REPLACEMENT

## HINT:

Installation is in the reverse order of the removal. But the installation is indicated only when it has a point.

### 1. REMOVE TRANSMITTER SUB-ASSY MODULE SET DOOR CONTROL (See page 73-11)

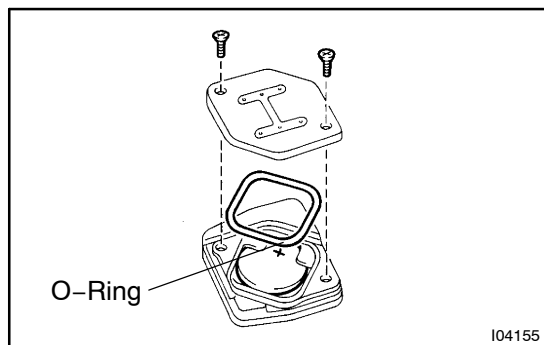


### 2. REMOVE TRANSMITTER BATTERY

- Using a screwdriver, remove the 2 screws and cover.
- Remove the transmitter battery (lithium battery).

#### NOTICE:

- Do not push the terminals with a finger.
- If prying up the battery (lithium battery) forcibly to remove it, the terminals are deformed.

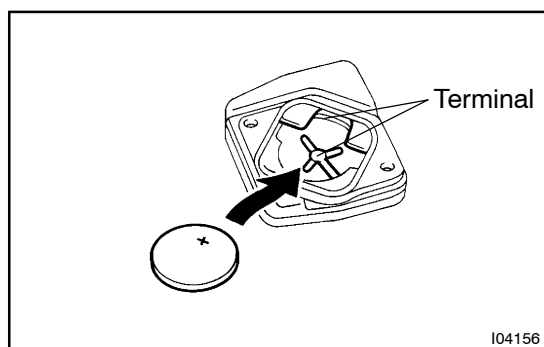

### 3. INSTALL TRANSMITTER BATTERY

- Install the transmitter battery (lithium battery), as shown in the illustration.

#### NOTICE:

Face the battery upward and, take care not to deform the terminals.

- Check that O-ring is not distorted or slipped off, and install the cover.

- Using a screwdriver, tighten the 2 screws.

#### NOTICE:

When the screws are loose, it might cause faulty contact of battery (lithium battery) and terminals.