


# FRONT FLOOR FOOTREST REPLACEMENT

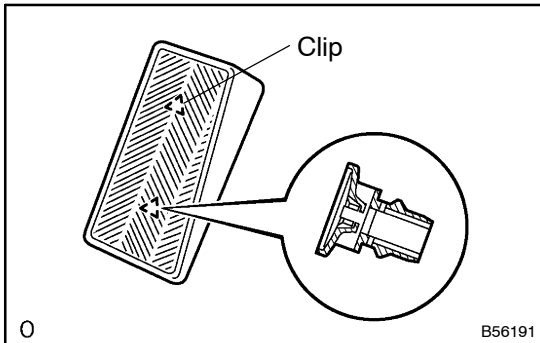

## 1. REMOVE FRONT FLOOR FOOTREST

- (a) Holding the floor mat, disengage the clips from the upper with a screwdriver to remove the front floor footrest.

### HINT:

Tape the screwdriver tip before use.

### NOTICE:

**Warm the inside of the vehicle well before removal.**

- (b) Disengage the footrest clips, and then remove the 2 clips from the front floor footrest.

## 2. INSTALL FRONT FLOOR FOOTREST

- (a) Install the footrest clips by engaging the claws with the front floor footrest.
- (b) Before installation, check that the part to be engaged with the clips of front floor footrest is not damaged.

### NOTICE:

**If it is damaged, replace it with a new one.**