


CAMRY REPAIR MANUAL (RM915E)

INSPECTION PROCEDURE

1 CHECK WIRE HARNESS(DLC3 - AIRBAG SENSOR ASSY CENTER)

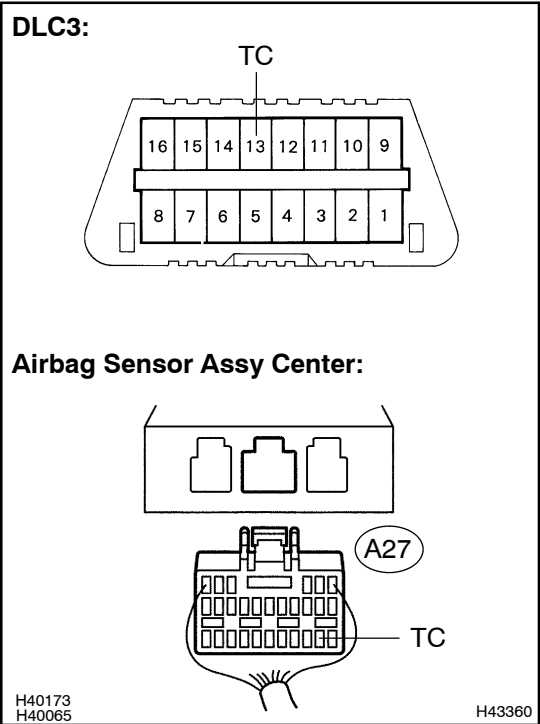

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the airbag sensor assy center connector.
- (c) Measure the resistance according to the value(s) in the table below.


Standard:

Tester connection	Condition	Specified condition
DLC3 (TC) - A27-19 (TC)	Always	Below 1 Ω

NG REPAIR OR REPLACE WIRE HARNESS(TC of DLC3 - TC of AIRBAG SENSOR ASSY CENTER)

OK

2 CHECK WIRE HARNESS(CG of DLC3 - BODY GROUND)

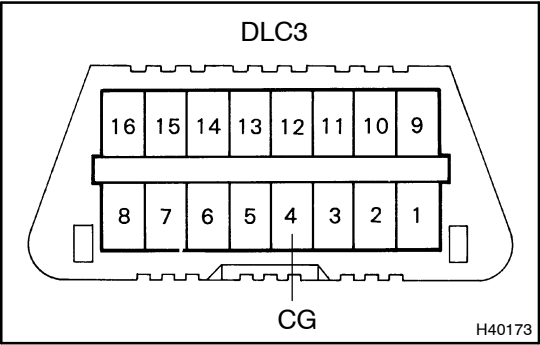

- (a) Measure the resistance according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
DLC3 (CG) - Body ground	Always	Below 1 Ω

NG REPAIR OR REPLACE WIRE HARNESS(CG of DLC3 - BODY GROUND)

OK

3

CHECK WIRE HARNESS(TC of AIRBAG SENSOR ASSY CENTER - BODY GROUND)

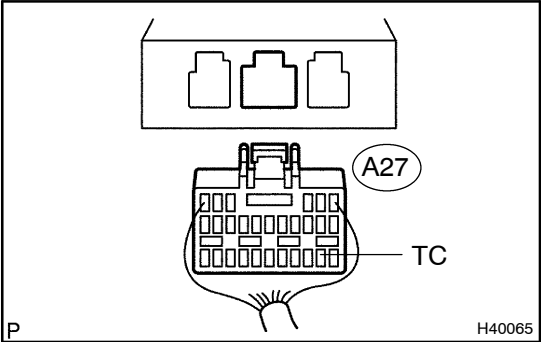

(a) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
A27-19 (TC) - Body ground	Always	1 MΩ or Higher

NG

REPAIR OR REPLACE WIRE HARNESS AND EACH ECU

OK

REPLACE AIR BAG SENSOR ASSY CENTER