


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Instrument Panel

[RHD]

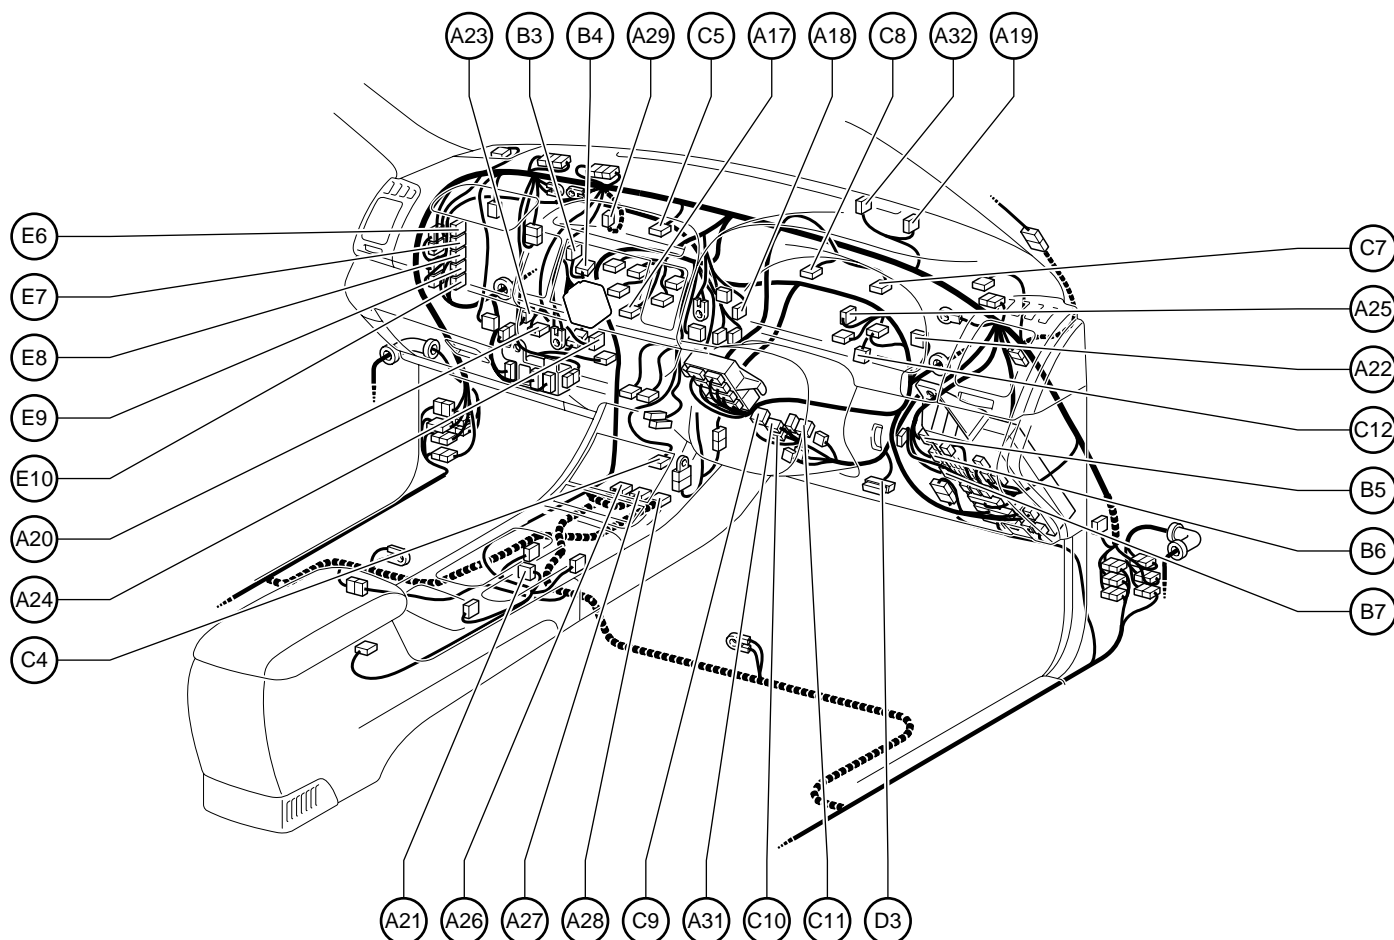

- A17 A/C Control Assembly
- A18 A/C Room Temp. Sensor
- A19 A/C Solar Sensor
- A20 A/C Thermistor
- A21 A/T Shift Lever Illumination  
O/D Main SW
- A22 Accelerator Position Sensor
- A23 Air Inlet Control Servo Motor
- A24 Air Mix Control Servo Motor
- A25 Air Vent Mode Control Servo Motor
- A26 Airbag Sensor Assembly
- A27 Airbag Sensor Assembly
- A28 Airbag Sensor Assembly
- A29 Airbag Squib (Front Passenger Airbag Assembly)
- A31 Airbag Squib (Steering Wheel Pad)
- A32 Automatic Light Control Sensor

- B 3 Blower Motor
- B 4 Blower Motor Controller
- B 5 Body ECU
- B 6 Body ECU
- B 7 Body ECU

- C 4 Cigarette Lighter  
Cigarette Lighter Illumination
- C 5 Clock
- C 7 Combination Meter
- C 8 Combination Meter
- C 9 Combination SW
- C10 Combination SW
- C11 Combination SW
- C12 Cruise Control Clutch SW

- D 3 DLC3

- E 6 Engine and ECT ECU (A/T)  
Engine ECU (M/T)
- E 7 Engine and ECT ECU (A/T)  
Engine ECU (M/T)
- E 8 Engine and ECT ECU (A/T)  
Engine ECU (M/T)
- E 9 Engine and ECT ECU (A/T)  
Engine ECU (M/T)
- E10 Engine and ECT ECU (A/T)  
Engine ECU (M/T)