


CD SOUND SKIPS

HINT:

The sound may skip when driving on an unpaved road.

INSPECTION PROCEDURE

1 DISC CLEANING

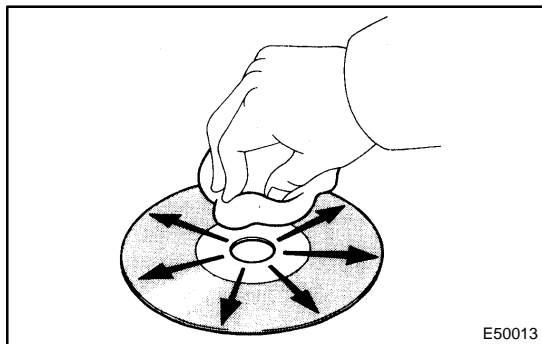

(a) Disc cleaning

- (1) If the disc gets dirty, clean the disc by wiping the surface from the center to outside in a radial direction with a soft cloth.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

OK: Malfunction disappears.

OK

DISC IS DIRTY

NG

2 REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with another and recheck.

- (1) Replace the CD with another normal one to see if the same trouble occurs again.

OK: Malfunction disappears.

OK

CD IS FAULTY

NG

3 CHECK RADIO RECEIVER ASSEMBLY INSTALLATION

(a) Check the radio receiver assembly installation condition.

- (1) Check that the radio receiver assembly is installed properly.

OK: Installed properly.

NG

INSTALL RADIO RECEIVER ASSEMBLY PROPERLY

OK

4 DID TEMPERATURE IN CABIN CHANGE RAPIDLY?

- (a) Did the temperature in the cabin change rapidly?
(1) Check whether or not a rapid temperature change occurred in the cabin.

OK: A rapid temperature change occurred.

HINT:

A rapid temperature change creates condensation inside the CD player, which may prevent the CD from being played.

NG

REPLACE RADIO RECEIVER ASSY (SEE PAGE 67-4)

OK

CONDENSATION DUE TO TEMPERATURE CHANGE (LET IT SIT FOR A WHILE BEFORE USING)