


# PARKING BRAKE CONTROL PEDAL ASSY OVERHAUL

33059-01

HINT:


COMPONENTS: [See page 71-7](#) and [33-3](#)

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL  
([See page 71-10](#))
2. REMOVE COMBINATION METER ASSY  
([See page 71-10](#))
3. REMOVE FRONT DOOR SCUFF PLATE LH  
([See page 71-10](#))
4. REMOVE COWL SIDE TRIM SUB-ASSY LH  
([See page 71-10](#))
5. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER  
([See page 71-10](#))

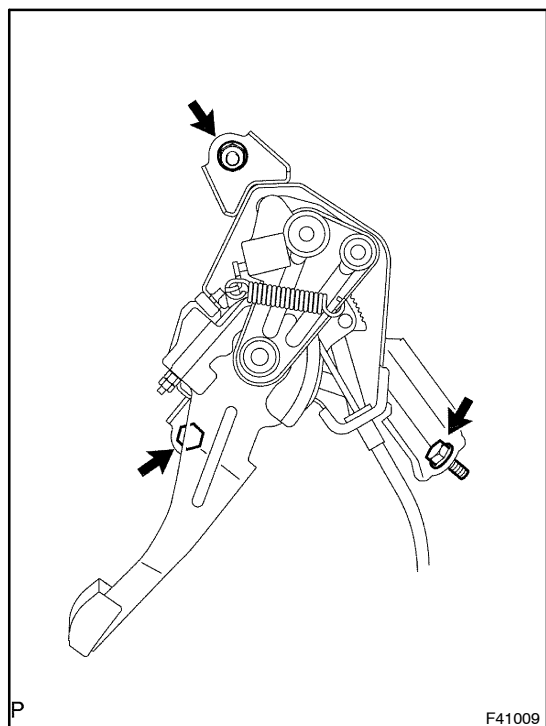

## 6. REMOVE PARKING BRAKE CONTROL PEDAL ASSY

- (a) Disconnect the parking brake switch connector.
- (b) Remove the 2 bolts, nut and parking brake control pedal Assy.

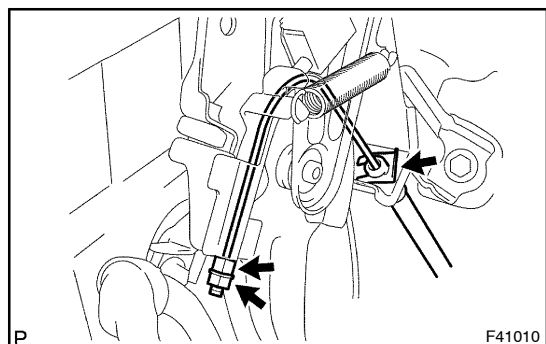

## 7. REMOVE PARKING BRAKE CABLE ASSY NO.1


- (a) Remove the lock nut, adjusting nut, clip and parking brake Assy No.1.

**8. REMOVE PARKING BRAKE SWITCH ASSY**


- (a) Remove the screw and parking brake switch assy.

**9. REMOVE TENSION SPRING****10. REMOVE RETURN SPRING DAMPER****11. REMOVE PARKING PEDAL PAD****12. INSTALL PARKING PEDAL PAD****13. INSTALL RETURN SPRING DAMPER****14. INSTALL TENSION SPRING****15. INSTALL PARKING BRAKE SWITCH ASSY**

- (a) Install the parking brake switch assy with the screw.

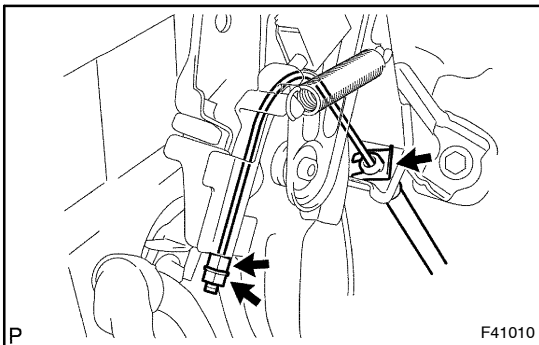**16. INSTALL PARKING BRAKE CABLE ASSY NO.1**

- (a) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut.

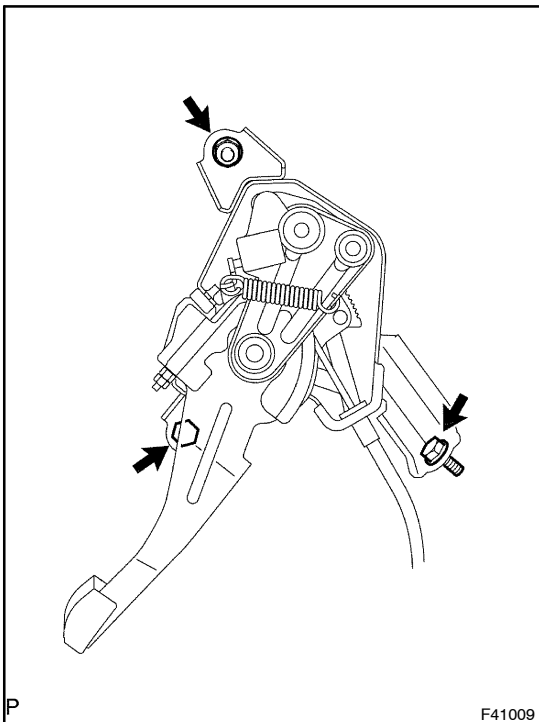**17. INSTALL PARKING BRAKE CONTROL PEDAL ASSY**

- (a) Install the parking brake control pedal assy with the 2 bolts and nut.

**Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)**

- (b) Connect the parking brake switch connector.

18. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER  
(See page 71-10)
19. INSTALL COWL SIDE TRIM SUB-ASSY LH  
(See page 71-10)
20. INSTALL FRONT DOOR SCUFF PLATE LH  
(See page 71-10)
21. INSTALL COMBINATION METER ASSY  
(See page 71-10)
22. INSTALL INSTRUMENT CLUSTER FINISH PANEL  
(See page 71-10)
23. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (See page 33-2)