


W/HOLDER ANTENNA ASSY REPLACEMENT

6709H-01

HINT:


COMPONENTS: [See page 67-1](#)

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE SPARE WHEEL COVER ASSY
3. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSY RH
4. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1
([See page 76-5](#))
5. REMOVE REAR FLOOR FINISH PLATE
([See page 76-5](#))
6. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER RH
([See page 76-5](#))

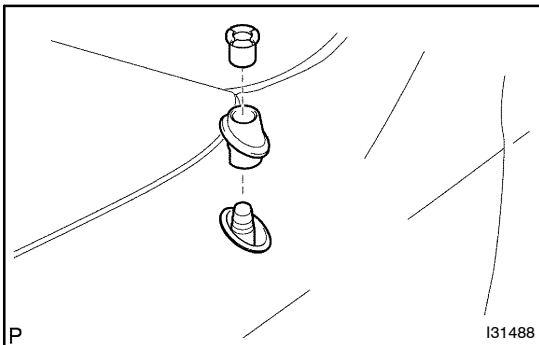


7. REMOVE W/HOLDER ANTENNA ASSY

- (a) Remove the antenna nut and antenna ornament.

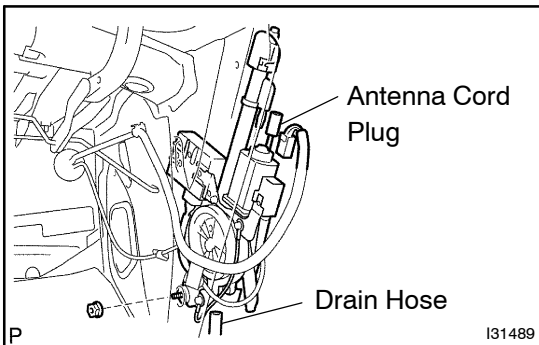

- (b) Disconnect the connector and antenna cord plug from the w/ holder antenna assy.
- (c) Disconnect the drain hose.
- (d) Remove the nut and w/ holder antenna assy.

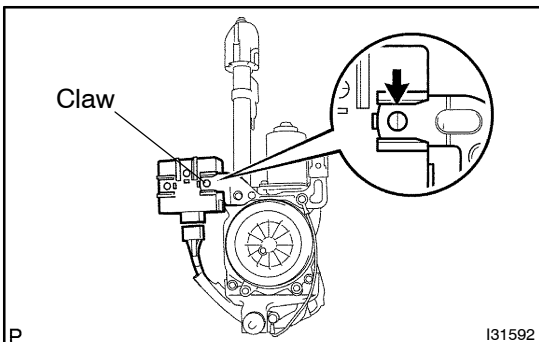

8. REMOVE MOTOR ANTENNA CONTROL RELAY

- (a) Disconnect the connector.
- (b) Release the claw, remove the motor antenna control relay from the w/ holder antenna assy.