


LUGGAGE COMPARTMENT DOOR


ADJUSTMENT

1. INSPECT LUGGAGE COMPARTMENT DOOR PANEL SUB-ASSY

- (a) Check that the clearance is within the standard value.

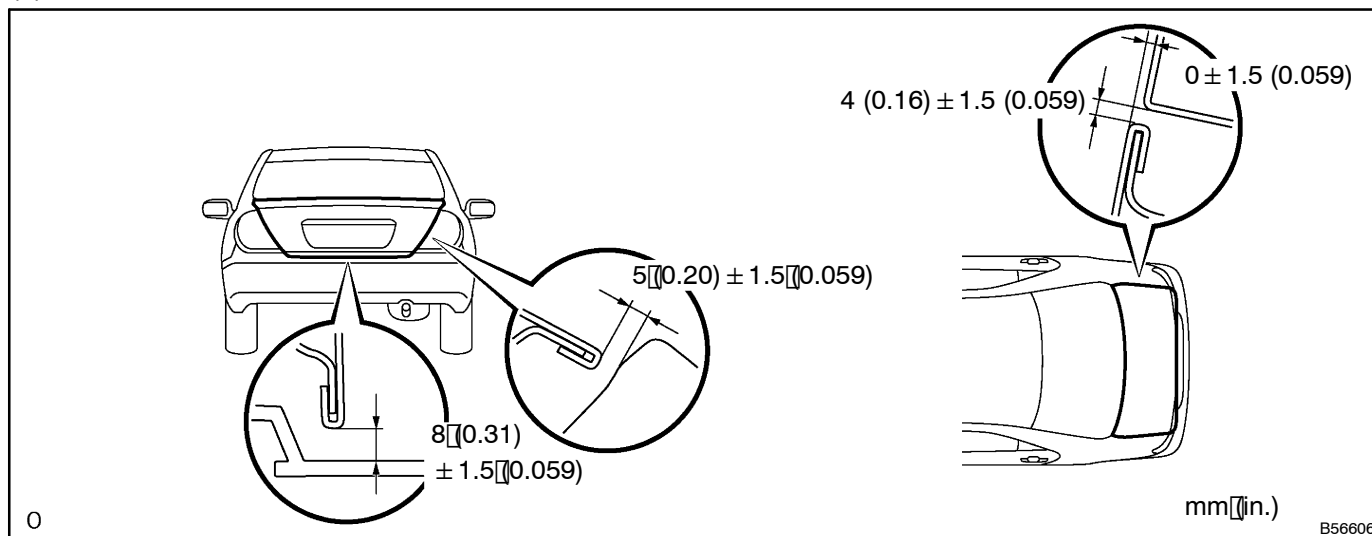


2. REMOVE LUGGAGE COMPARTMENT DOOR COVER (See page 76-5)
3. REMOVE LUGGAGE COMPARTMENT FLOOR MAT (See page 76-5)
4. REMOVE SPARE WHEEL COVER ASSY (See page 76-5)
5. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSY RH (See page 76-5)
6. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1 (See page 76-5)
7. REMOVE REAR FLOOR FINISH PLATE (See page 76-5)

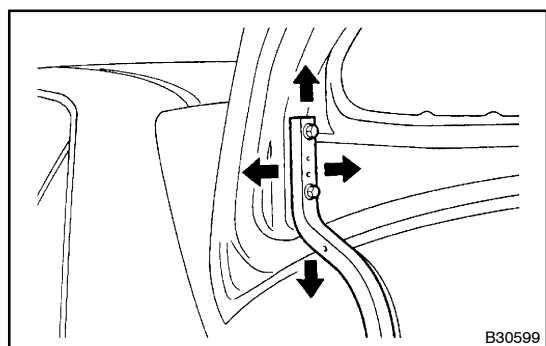

8. ADJUST LUGGAGE COMPARTMENT DOOR PANEL SUB-ASSY

- (a) For forward/rearward and right/left adjustments, loosen the bolts.
- (b) For a vertical adjustment of the door front end, increase or decrease the number of the washers between the hinge and door.

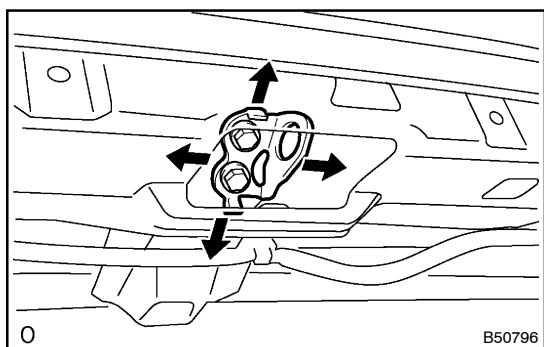

- (c) Using a hammer and a brass bar, tap the striker to adjust it.