


■ DAYTIME RUNNING LIGHT SYSTEM

This system, which is directly connected to the high-beam headlights, is designed to automatically activate them the daytime in order to keep the vehicle highly visible to other vehicles.

This system is controlled by the Body ECU.

► Wiring Diagram ◀

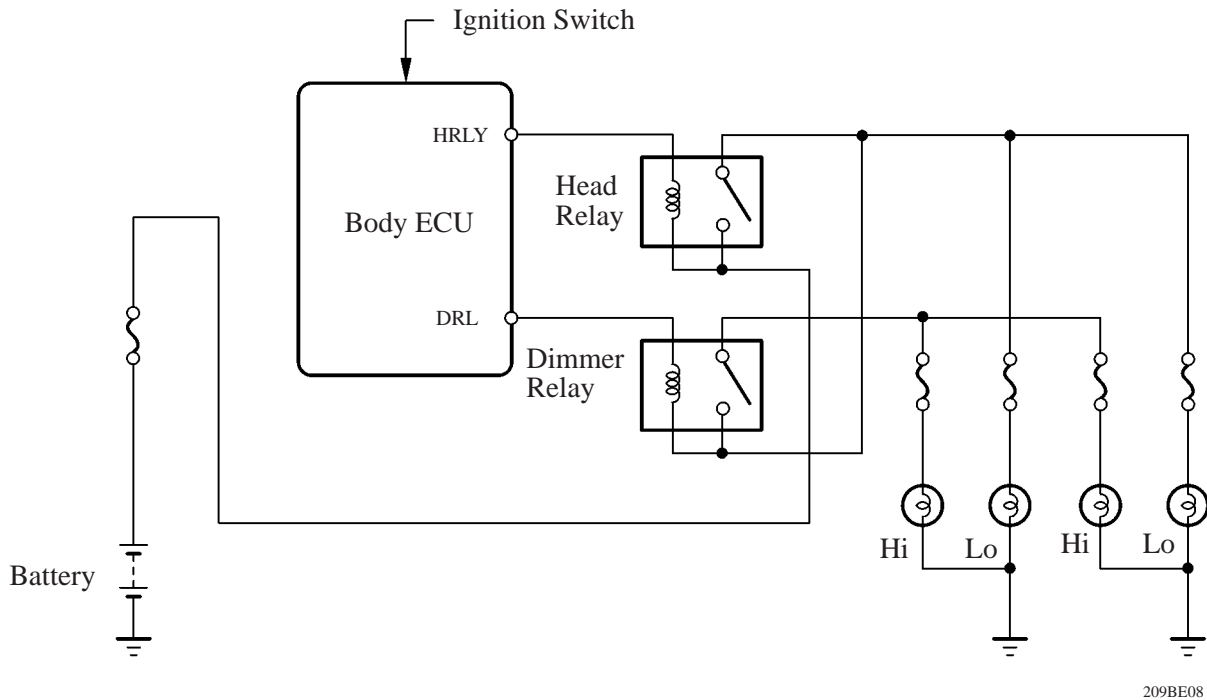

■ AUTOMATIC LIGHT CONTROL SYSTEM

- When the light control switch at the AUTO position, the automatic light control sensor detects the ambient light and automatically turns the headlights and taillights ON or OFF accordingly.
- This system is controlled by the Body ECU.

■ LIGHT AUTO TURN-OFF SYSTEM

- When the ignition key is turned from ON or ACC to LOCK position and driver's door is opened with the taillights and headlights on, this system automatically turns them off.
- This system is controlled by the Body ECU.

■ ILLUMINATED ENTRY SYSTEM

- When a door is unlocked through a key operation or transmitter operation, or if a door is opened or closed, the illuminated entry system turns ON the interior light and the ignition key illumination.
- If the ignition switch is turned to the ACC or ON position or if all doors are locked during the 15 seconds in which these lights are ON, they will immediately turn OFF.
- This system is controlled by the Body ECU.