


GYRO ERROR

INSPECTION PROCEDURE

1 NAVIGATION CHECK MODE (VEHICLE SENSORS CHECK)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-56).

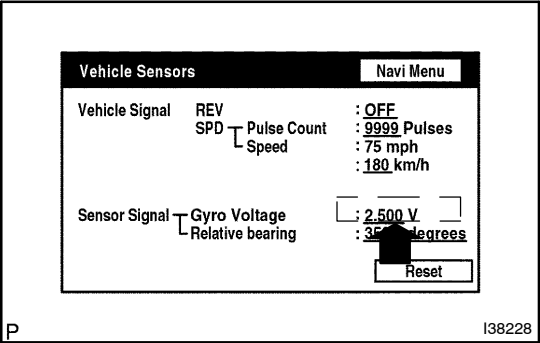

(b) Check the gyro voltage.
Standard: 0.1 to 4.5 V

NG REPLACE RADIO AND NAVIGATION ASSY
(SEE PUB. NO. RM915E, PAGE 67-4)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART
(SEE PAGE 05-44)