


## HOOD SUPPORT ROD REPLACEMENT

75095-02

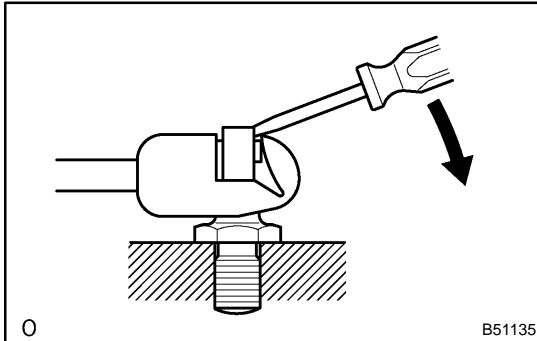

### 1. REMOVE HOOD SUPPORT ROD

- (a) Using a screwdriver to hold the left spring, disengage the upper and lower parts of the support rod, and then remove the hood support rod.

#### NOTICE:

Removal should be done while the hood is being held up.

### 2. INSTALL HOOD SUPPORT ROD

#### NOTICE:

- Install a metal socket onto the hood except a resinous one onto the body.
- After the installation, make sure that the socket is securely attached.