


## Connector Joining Wire Harness and Wire Harness

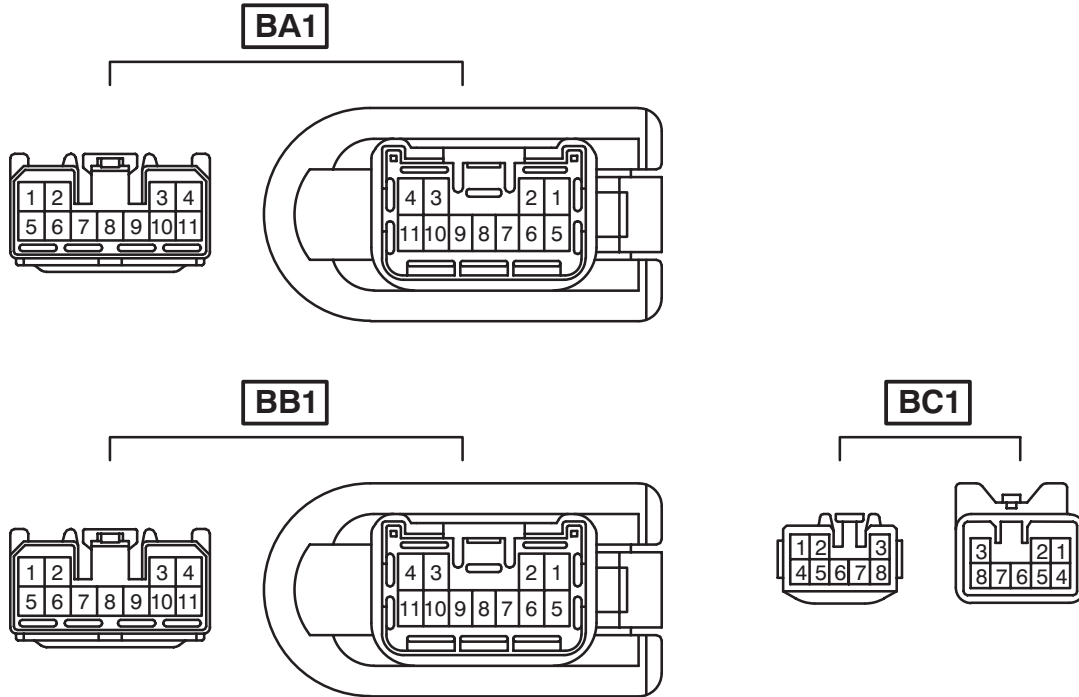

| Code | Joining Wire Harness and Wire Harness (Connector Location)                |
|------|---|
| BA1  | Rear Door LH Wire and Floor Wire (Left Center Pillar)                     |
| BB1  | Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)               |
| BC1  | Floor No.4 Wire and Floor No.2 Wire (Behind the Rear Passenger's Seat RH) |