

REPLACEMENT

HINT:


Installation is the reverse order of the removal. But the installation is indicated only when it has a point.

1. REMOVE ENGINE UNDER COVER LH

- Remove the 4 screws.
- Using a screwdriver, remove the 4 clips and engine under cover.

2. REMOVE ENGINE UNDER COVER RH

- Remove the 3 screws.
- Using a screwdriver, remove the 3 clips and engine under cover.

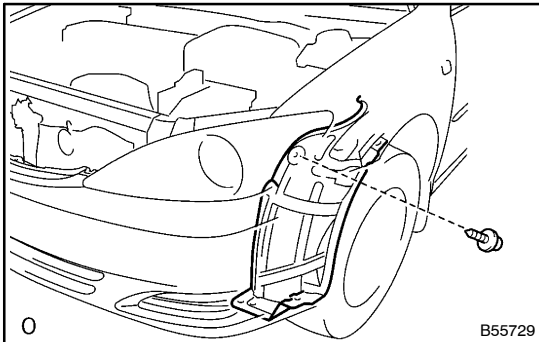


3. REMOVE FRONT FENDER LINER LH

- Remove the screw and a part of the front fender liner LH.

HINT:

Remove the screw and the front fender liner LH within the range that the front bumper cover can be removed.

4. REMOVE FRONT FENDER LINER RH

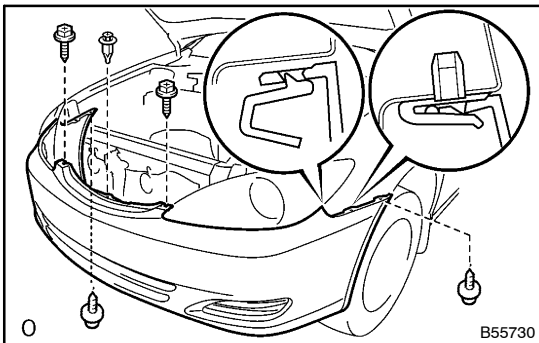

5. REMOVE FRONT BUMPER COVER

- Remove the 2 screws and 2 bolts.
- Using a clip remover, remove the clip.
- Disconnect the hooks and remove the front bumper cover.
- Disengage fog lamp connectors (on fog lamp option only).

6. REMOVE FRONT BUMPER ENERGY ABSORBER

7. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY

- Disconnect the cooler thermistor connector and wire harness clips.
- Remove the 6 bolts and reinforcement.

8. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY UPPER

- Remove the 8 bolts, 4 nuts and front bumper reinforcement sub-assy upper.

9. REMOVE FOG LAMP ASSY LH (See page 65-13)

10. REMOVE FOG LAMP ASSY (See page 65-13)

11. REMOVE COOLER (AMBIENT TEMP. SENSOR) THERMISTOR

12. REMOVE FRONT BUMPER EXTENSION MOUNTING BRACKET

- Remove the 2 screws and front bumper extension mounting bracket.

13. REMOVE FRONT BUMPER COVER LOWER

- Disengage the hooks and remove the front bumper cover lower.

14. REMOVE FRONT BUMPER HOLE COVER RH

- (a) Disengage the hooks and remove the front bumper hole cover.

15. REMOVE FRONT BUMPER HOLE COVER LH**16. INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSY**

- (a) Install the front bumper reinforcement with 6 bolts.

Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)

