


## Connector Joining Wire Harness and Wire Harness

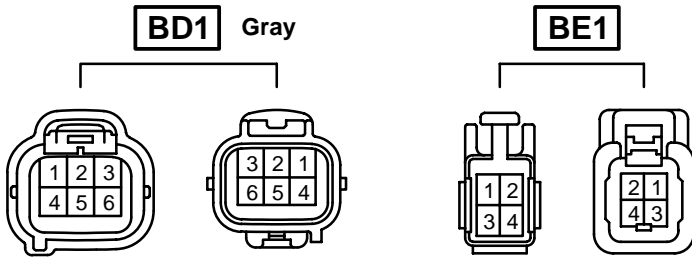

Code	Joining Wire Harness and Wire Harness (Connector Location)
BD1	Floor Wire and Front Seat LH Wire (Under the Driver's Seat)
BE1	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)