


ABS WARNING LIGHT CIRCUIT (REMAINS ON)

CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the ABS warning light while at the same time prohibiting ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

WIRING DIAGRAM

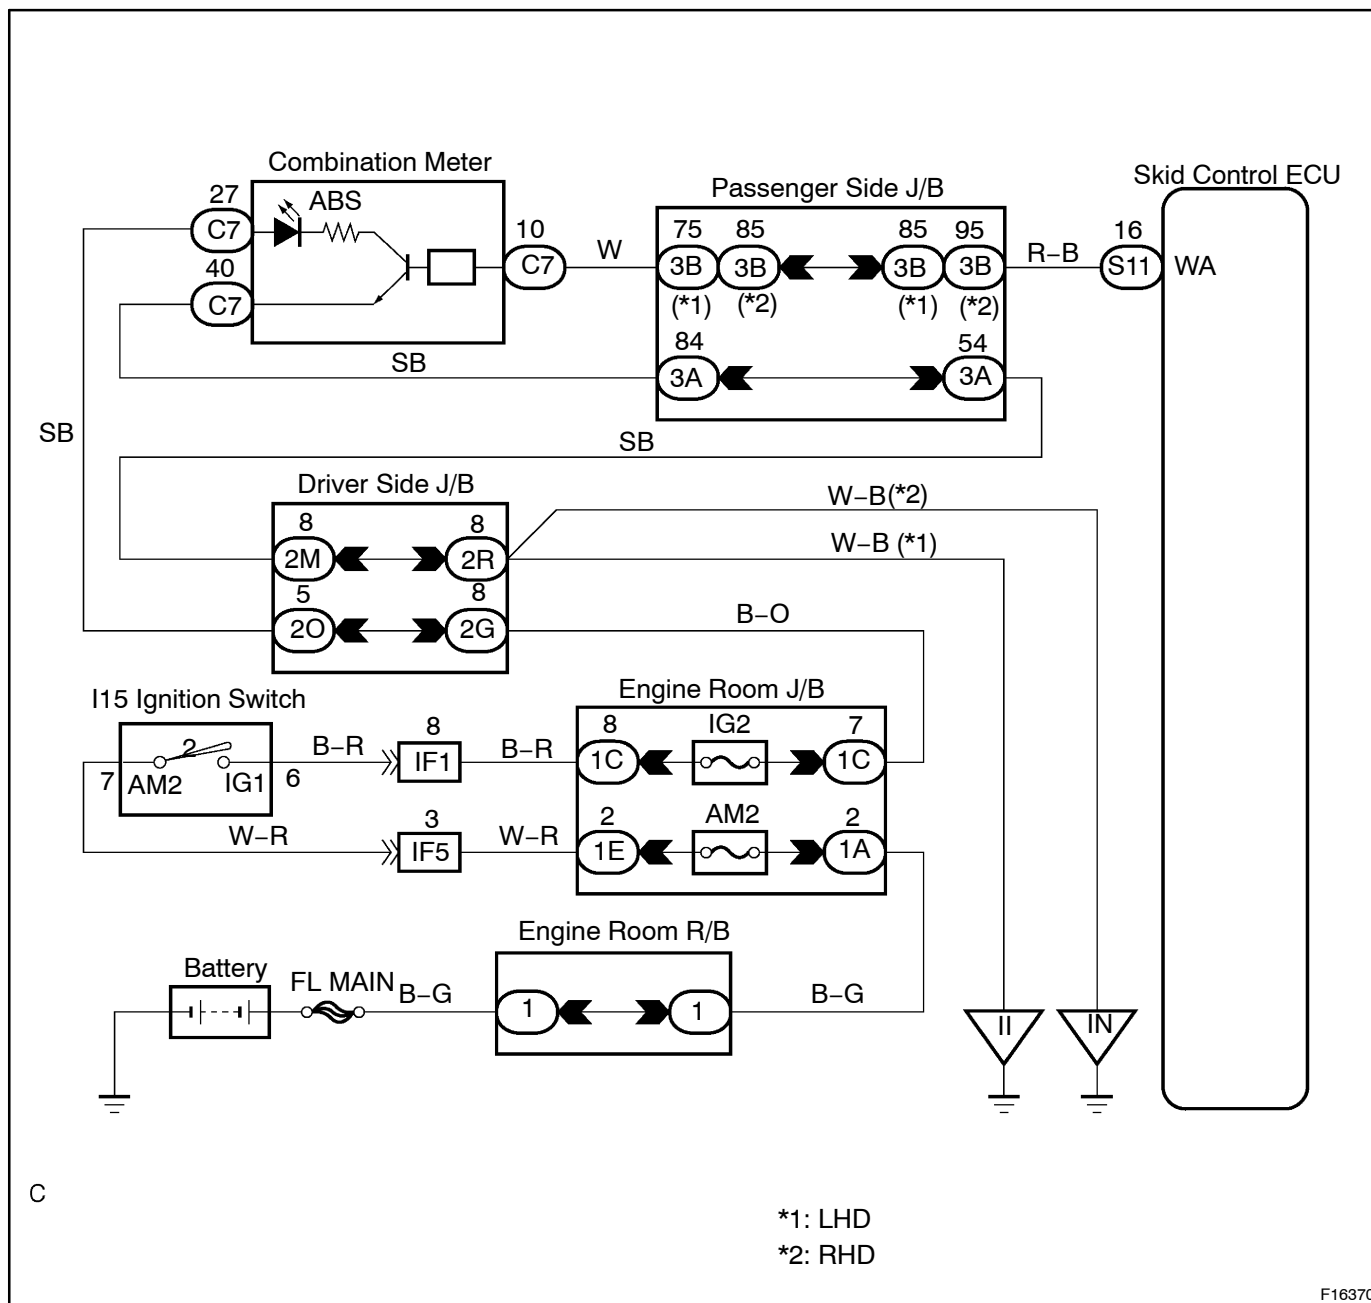

F16370

INSPECTION PROCEDURE

1 RECONFIRM DTC (See page 05-451)

A	Normal Code
B	Malfunction Code

B REPAIR CIRCUIT INDICATED BY OUTPUT CODE

A

2 CHECK HARNESS AND CONNECTOR (DLC3 - SKID CONTROL ECU ASSY) (See page 01-31)

NG REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY