


OVERHAUL

HINT:


COMPONENTS: See page 55-15

1. REMOVE AIR CONDITIONER CONTROL ASSEMBLY (See page 71-10)

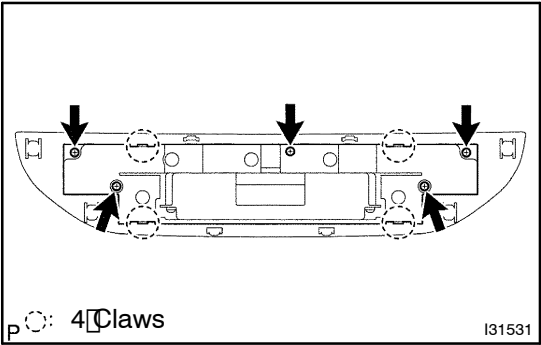

2. REMOVE HEATER CONTROL HOUSING SUB-ASSY


(a) Release the 4 fitting claws, remove the 5 screws.

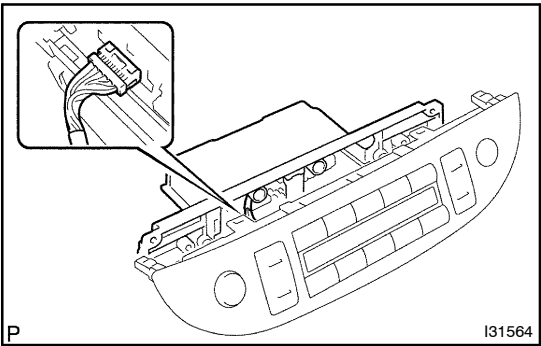

(b) Disconnect the connector, remove the heater control housing sub-assy.


3. REMOVE AIR CONDITIONING CONTROL BULB

(a) Remove the air conditioning control bulb from the heater control base sub-assy.

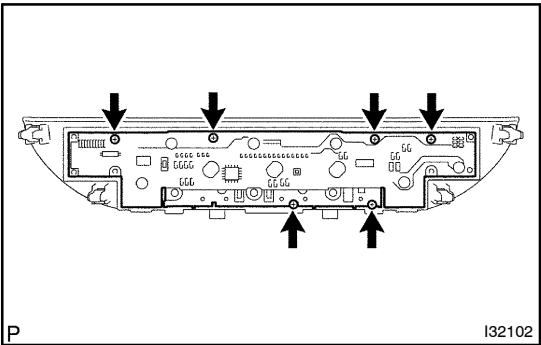

4. REMOVE HEATER CONTROL BASE SUB-ASSY

(a) Remove the 6 screws and heater control base sub-assy.

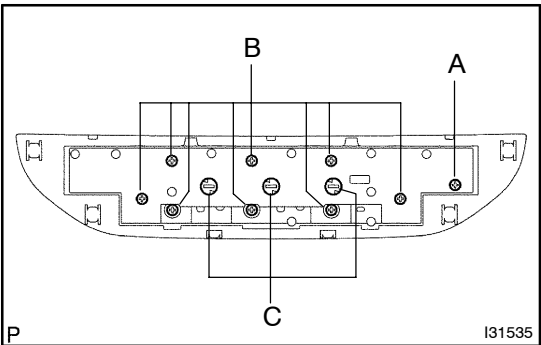

5. INSTALL AIR CONDITIONING CONTROL BULB

(a) Install the air conditioning control bulb to the heater control base sub-assy.

Bulb position:

| Position | Part No.      |
|----------|---------------|
| A        | 90010 - 03054 |
| B        | 90010 - 03055 |
| C        | 90010 - 03056 |