


## REPLACEMENT

### HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
  - On the RH side, use the same procedures as on the LH side.
1. **REMOVE FRONT SEAT ASSEMBLY RH**  
(Power Seat Type: See page 72-23, Manual Seat Type: See page 72-15)
  2. **REMOVE FRONT SEAT ASSEMBLY LH**  
(Power Seat Type: See page 72-23, Manual Seat Type: See page 72-15)
  3. **REMOVE BENCH TYPE REAR SEAT CUSHION ASSY** (See page 72-32)
  4. **REMOVE REAR SIDE SEAT BACK ASSY RH** (See page 72-32)
  5. **REMOVE REAR SIDE SEAT BACK ASSY LH** (See page 72-32)
  6. **REMOVE SEPARATE TYPE REAR SEAT BACK ASSY RH** (See page 72-32)
  7. **REMOVE SEPARATE TYPE REAR SEAT BACK ASSY LH** (See page 72-32)
  8. **REMOVE CONSOLE PANEL UPPER REAR** (See page 71-16)
  9. **REMOVE RR CONSOLE BOX** (See page 71-16)
  10. **REMOVE CONSOLE PANEL UPPER** (See page 71-16)
  11. **REMOVE CONSOLE BOX FRONT** (See page 71-16)
  12. **REMOVE CONSOLE BOX DUCT NO.1** (See page 55-34)
  13. **REMOVE AIR DUCT REAR NO.1** (See page 55-34)
  14. **REMOVE AIR DUCT REAR NO.2** (See page 55-34)
  15. **REMOVE FLOOR SHIFT SHIFT LEVER ASSY (MANUAL TRANSAXLE)** (See Page 41-5)
  16. **REMOVE FLOOR SHIFT ASSY (AUTOMATIC TRANSAXLE)** (See Page 40-54)

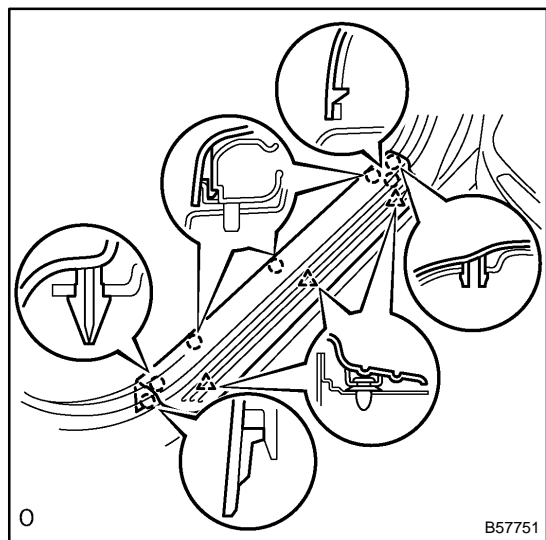

### 17. REMOVE FRONT DOOR SCUFF PLATE RH


- (a) Using a screwdriver, remove the front door scuff plate.

#### HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

### 18. REMOVE FRONT DOOR SCUFF PLATE LH

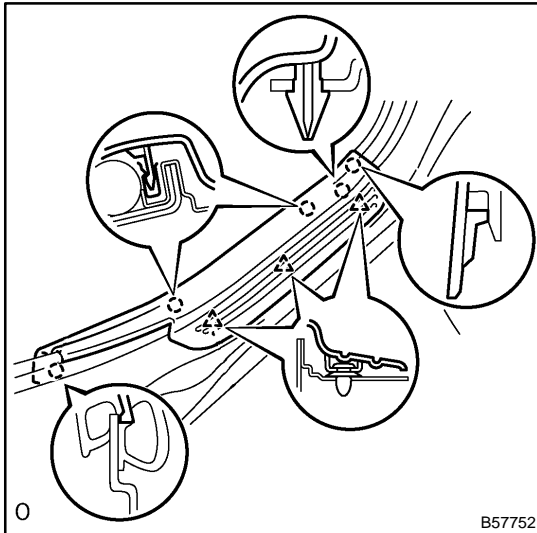
**19. REMOVE REAR DOOR SCUFF PLATE RH**

- (a) Using a screwdriver, remove the rear door scuff plate.

HINT:


Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

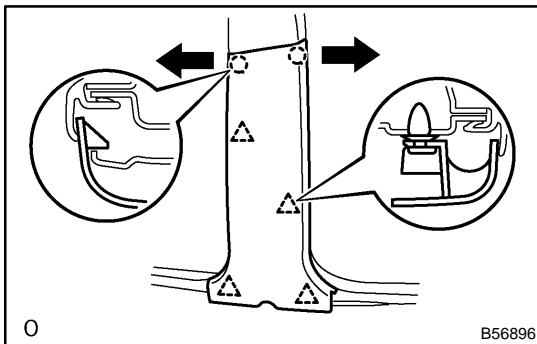**20. REMOVE REAR DOOR SCUFF PLATE LH****21. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH****22. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH****23. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****24. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH****25. REMOVE CENTER PILLAR GARNISH LOWER RH**

- (a) Pull the center pillar lower garnish upward to remove it.

- (b) Employ the same manner described above to the other side.

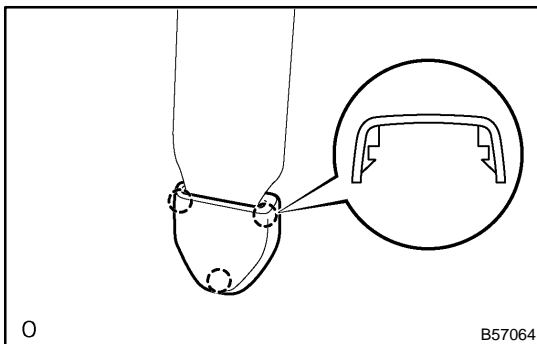
**26. REMOVE CENTER PILLAR GARNISH LOWER LH****27. REMOVE CENTER PILLAR GARNISH UPPER RH**

- (a) Using a screwdriver, remove the lap belt outer anchor cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and front seat outer belt floor anchor.

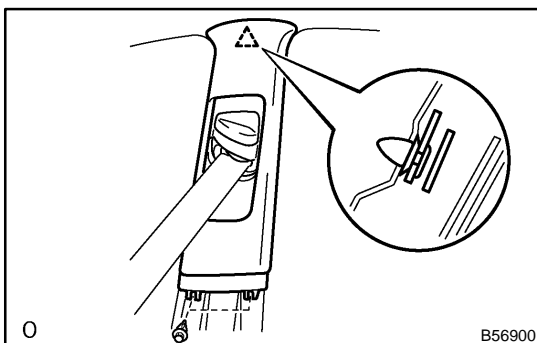

- (c) Remove the 2 clips


- (d) Using a screwdriver, remove the center pillar upper garnish.

HINT:

Tape the screwdriver tip before use.

- (e) Employ the same manner described above to the other side.

**28. REMOVE CENTER PILLAR GARNISH UPPER LH**

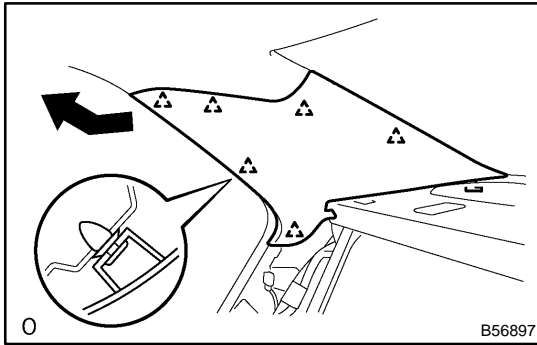


### 29. REMOVE ROOF SIDE GARNISH INNER RH (W/O CURTAIN SHIELD AIR BAG)

- (a) Using a screwdriver, remove the roof side garnish inner.  
HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

### 30. REMOVE ROOF SIDE GARNISH INNER LH (W/O CURTAIN SHIELD AIR BAG)

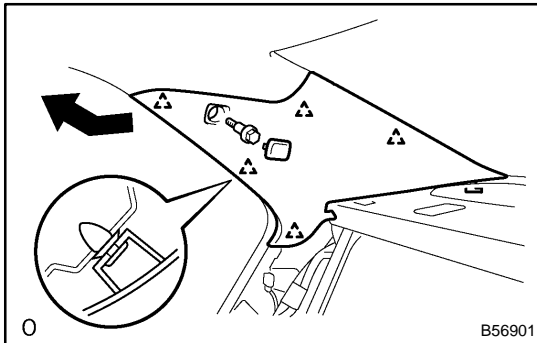

### 31. REMOVE ROOF SIDE GARNISH INNER RH (W/ CURTAIN SHIELD AIR BAG)

- (a) Using a screwdriver, remove the roof side garnish inner cover.  
HINT:

Tape the screwdriver tip before use.


- (b) Remove the bolt.

- (c) Using a screwdriver, remove the roof side garnish inner.

HINT:

Tape the screwdriver tip before use.

### 32. REMOVE ROOF SIDE GARNISH INNER LH (W/ CURTAIN SHIELD AIR BAG)

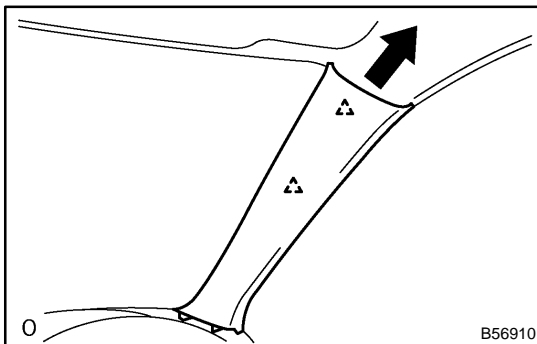

### 33. REMOVE FRONT PILLAR GARNISH RH (W/O CURTAIN SHIELD AIR BAG)


- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

### 34. REMOVE FRONT PILLAR GARNISH LH (W/O CURTAIN SHIELD AIR BAG)

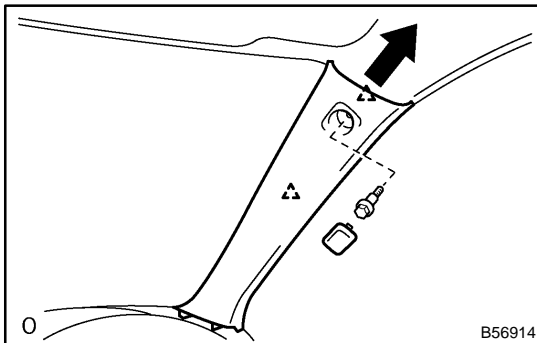

### 35. REMOVE FRONT PILLAR GARNISH RH (W/ CURTAIN SHIELD AIR BAG)

- (a) Using a screwdriver, remove the front pillar garnish cover.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the bolt.

- (c) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

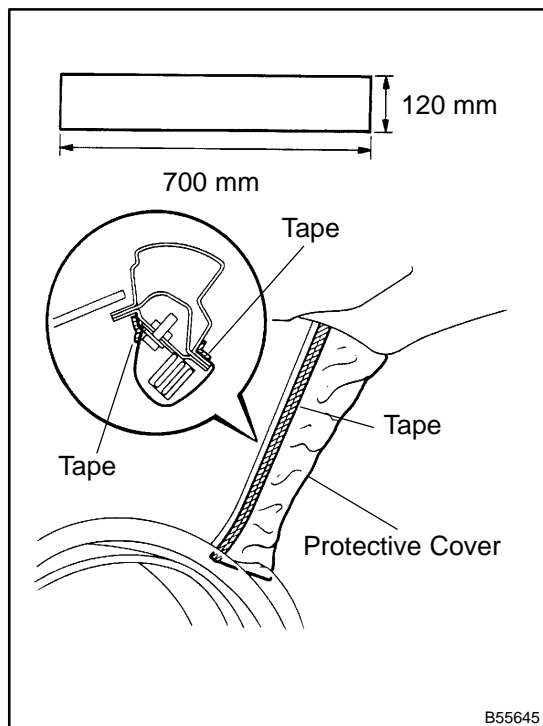

(d) Protect the curtain shield airbag.


**NOTICE:**

**Cover the curtain shield airbag with the protection cover as soon as the front pillar garnish is removed.**

(1) Cover the airbag with cloth or nylon of 700 mm (27.56 in.) × 120 mm (4.72 in.) and fix the ends of the cover with tape, as shown in the illustration.

(e) Employ the same manner described above to the other side.

**36. REMOVE FRONT PILLAR GARNISH LH (W/ CURTAIN SHIELD AIR BAG)**

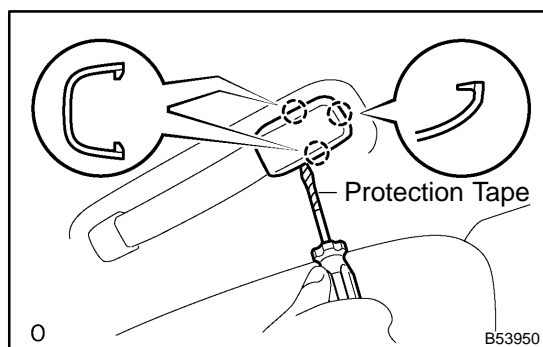


**37. REMOVE ASSIST GRIP SUB-ASSY**

(a) Using a screwdriver, remove the assist grip cover.

**HINT:**

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

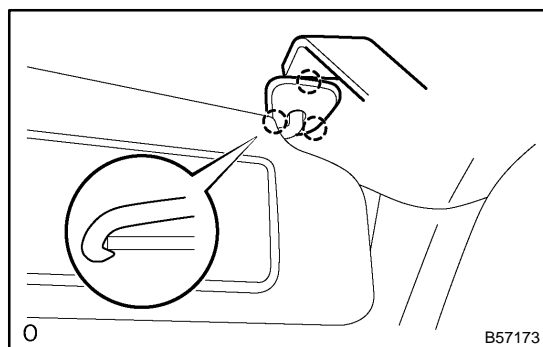

**38. REMOVE RH VISOR ASSY**


(a) Using a moulding remover, remove the visor bracket cover.

**HINT:**

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

**39. REMOVE LH VISOR ASSY**

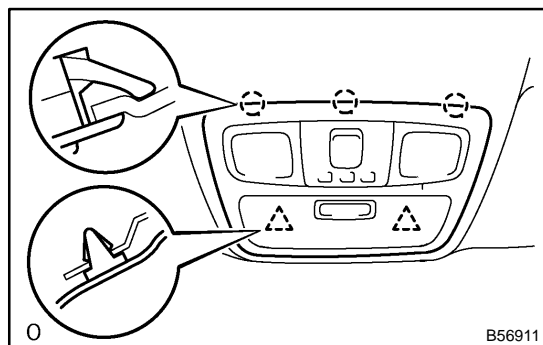


**40. REMOVE ROOF CONSOLE BOX ASSY**


(a) Using a screwdriver, remove the roof console box then disconnect the connector.

**HINT:**

Tape the screwdriver tip before use.

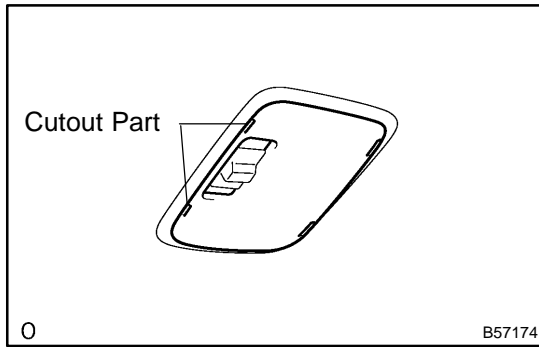**41. REMOVE ROOM LAMP ASSY NO.1**


- (a) Using a screwdriver, remove the lens.

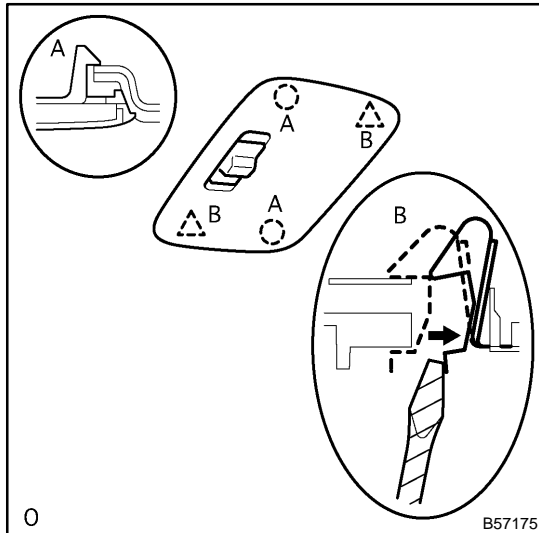

- (b) Using a screwdriver, remove the room lamp assembly No.1 then disconnect the connector.


HINT:

Tape the screwdriver tip before use.

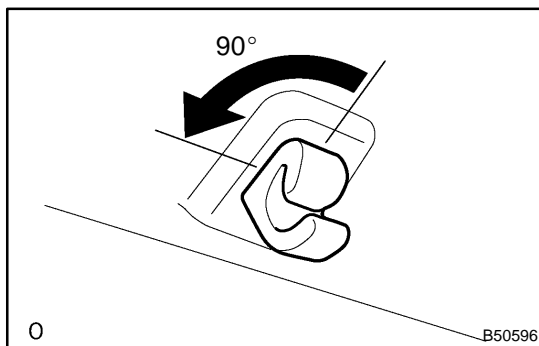
**42. REMOVE VISOR HOLDER**

- (a) Remove the holder of the sun visor by turning it to the left.


**43. REMOVE SUN ROOF OPENING TRIM MOULDING (W/ SLIDING ROOF)**

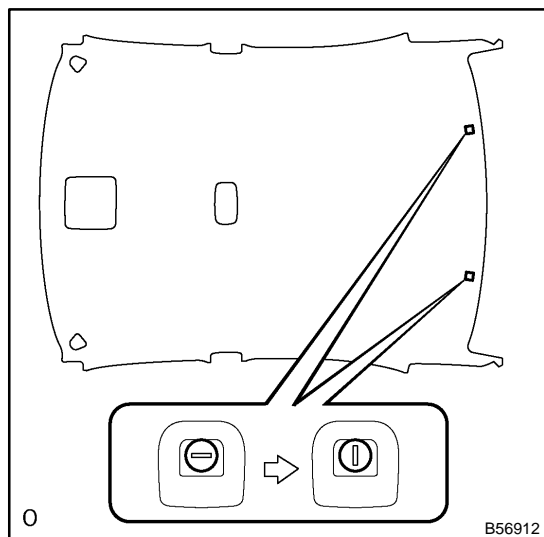**44. REMOVE ROOF HEADLINING ASSY**

- (a) Remove the 2 sunshade trim holders.
- (b) w/ Erector chromic inner mirror:  
Remove the inner rear view mirror cover.
- (c) Tear off the tape on the adhered part of the wire harness.

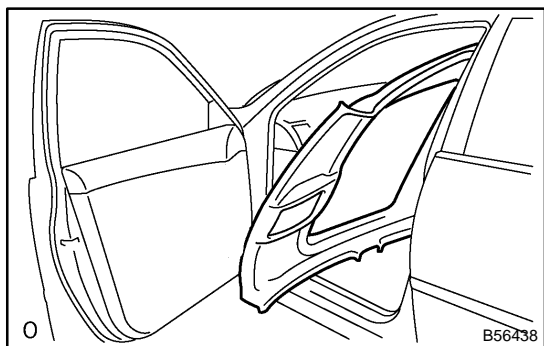

- (d) Remove the headlining assembly from the passenger's door.

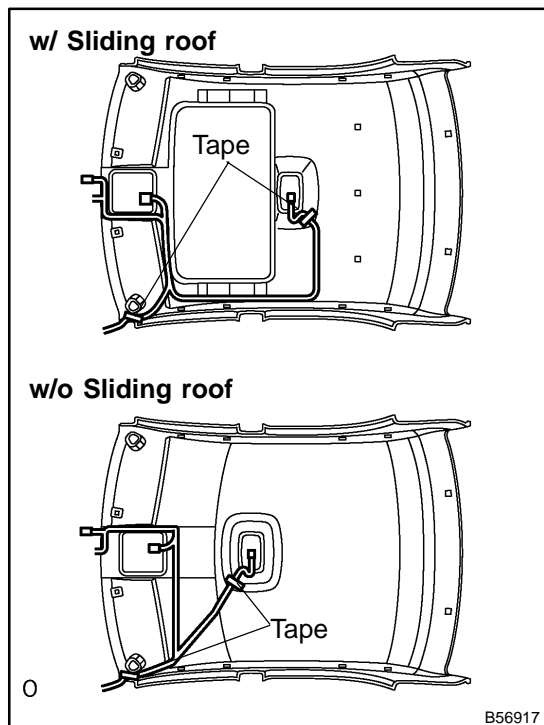**45. INSTALL ROOF HEADLINING ASSY**

- (a) Align the markings, then install the wire harness with tape.

**HINT:**

Be careful for dirt or foreign objects not to stick to the adhered part when peeling the double-stick tape.

- (b) Attach the roof wire harness across the adhered part

**NOTICE:**

Roof wire harness should be attached securely.

**46. INSTALL FRONT SEAT ASSEMBLY LH**

(Power Seat Type: See page 72-23, Manual Seat Type: See page 72-15)

**47. INSTALL FRONT SEAT ASSEMBLY RH**

(Power Seat Type: See page 72-23, Manual Seat Type: See page 72-15)