


FRONT DIFFERENTIAL OIL SEAL (U151E)

REPLACEMENT

4010X-06


1. REMOVE FRONT WHEELS
 2. REMOVE ENGINE UNDER COVER RH
 3. REMOVE ENGINE UNDER COVER LH
 4. DRAIN AUTOMATIC TRANSAXLE FLUID
 - (a) Remove the drain plug, gasket and drain the ATF.
 - (b) Install a new gasket and the drain plug.

Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
 5. REMOVE FRONT DRIVE SHAFT ASSY RH (SEE PAGE 30-8)
 6. REMOVE FRONT DRIVE SHAFT ASSY LH (SEE PAGE 30-8)
- SST 09520-01010, 09520-24010 (09520-32040)

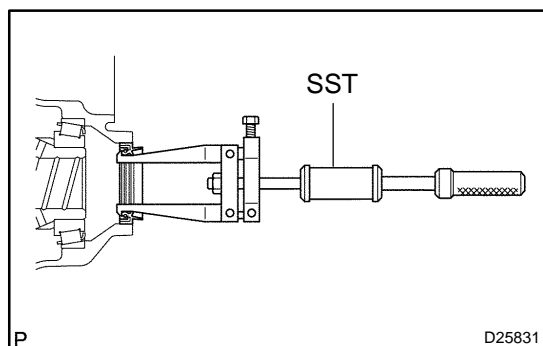


7. REMOVE TRANSAXLE HOUSING OIL SEAL

- (a) Using SST, pull out the oil seal.
- SST 09308-00010

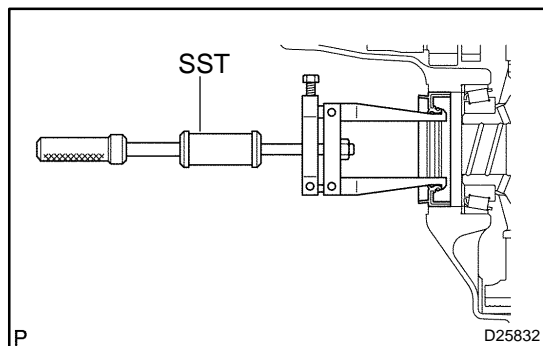


8. REMOVE DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST, pull out the oil seal.
- SST 09308-00010

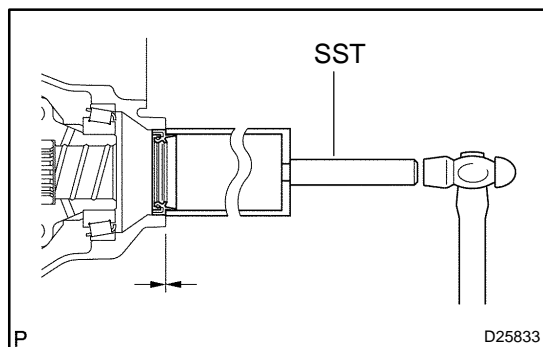

9. INSTALL DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.
- SST 09316-60011 (09316-00011)
- Oil seal drive in depth:**
 $0 \pm 0.5 \text{ mm}$ ($0 \pm 0.020 \text{ in.}$)
- (b) Coat the lip of the oil seal with MP grease.

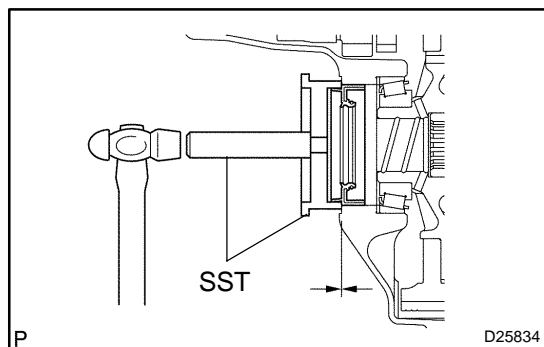**10. INSTALL TRANSAXLE HOUSING OIL SEAL**

- (a) Using SST and a hammer, drive in a new oil seal.
SST 09223-15020, 09950-70010 (09951-07150)
Oil seal drive in depth:
 $0 \pm 0.5 \text{ mm}$ ($0 \pm 0.020 \text{ in.}$)
- (b) Coat the lip of the oil seal with MP grease.

11. **INSTALL FRONT DRIVE SHAFT ASSY LH (SEE PAGE 30-8)**
12. **INSTALL FRONT DRIVE SHAFT ASSY RH (SEE PAGE 30-8)**
13. **INSTALL ENGINE UNDER COVER LH**
14. **INSTALL ENGINE UNDER COVER RH**
15. **INSTALL FRONT WHEELS**
16. **ADD AUTOMATIC TRANSAXLE FLUID**
Fluid type: ATF type T-IV
Capacity: 3.5 liters (3.7 US qts, 3.1 Imp. qts)
17. **INSPECT AUTOMATIC TRANSAXLE FLUID (SEE PAGE 40-2)**