



## REPLACEMENT

### 1. REMOVE DRIVE BELT (See page 14-5)

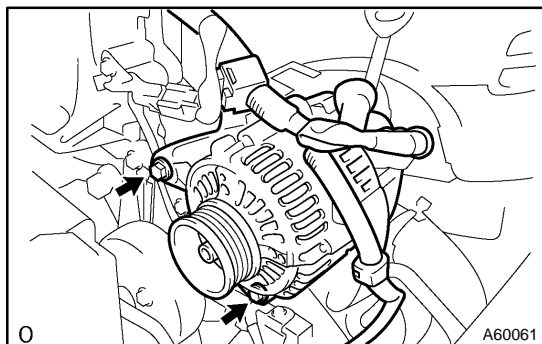

### 2. REMOVE GENERATOR ASSY

- (a) Disconnect the engine wire as shown in the illustration.
- (b) Remove the 2 bolts and generator.

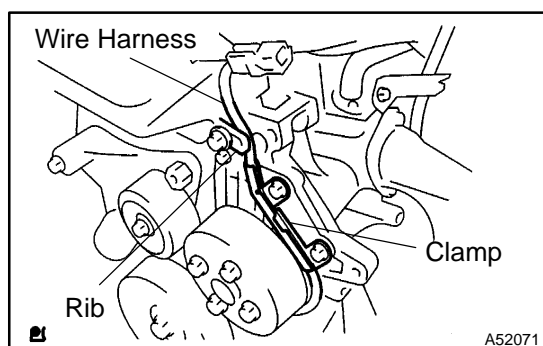

### 3. INSTALL GENERATOR ASSY

- (a) Confirm that the wire harness of the crankshaft position sensor is placed as shown in the illustration.
- (b) Install the generator.

#### Torque:

**21 N·m (214 kgf·cm, 15 ft·lbf) for M8**

**52 N·m (530 kgf·cm, 38 ft·lbf) for M10**

**9 N·m (92 kgf·cm, 80 in·lbf) for wiring harness clamp**

**9.8 N·m (100 kgf·cm, 7 ft·lbf) for generator wire**

#### NOTICE:

Be careful not to put the wire harness in when install the generator.

### 4. INSTALL DRIVE BELT (See page 14-5)

### 5. INSPECT DRIVE BELT (See page 19-14)