


## OVERHAUL

### HINT:


- COMPONENTS: SEE PAGE 65-7.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

### 1. REMOVE FRONT BUMPER ASSY (SEE PAGE 76-2)

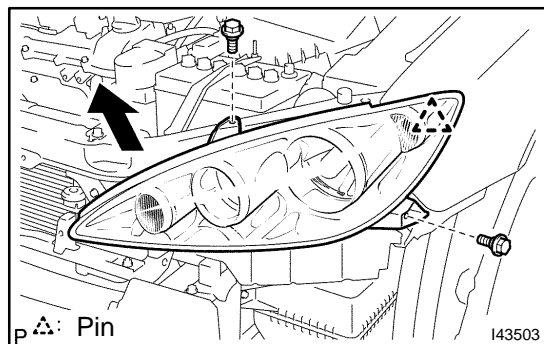


### 2. REMOVE HEADLAMP ASSY LH

- Remove the 2 bolts and disengage the pin.
- Pull the headlamp assy LH in the direction indicated by the arrow and remove the headlamp assy LH.

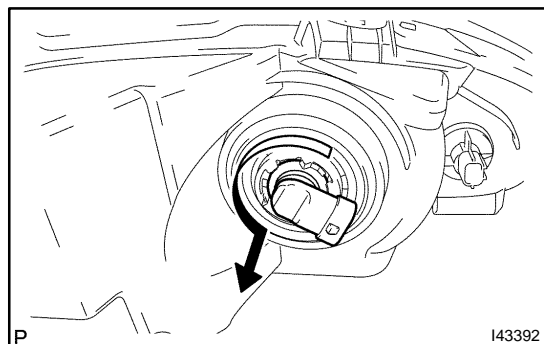


### 3. REMOVE HEADLAMP, NO.2 BULB

- Turn in the direction indicated by the arrow and remove the headlamp, No.2 bulb.

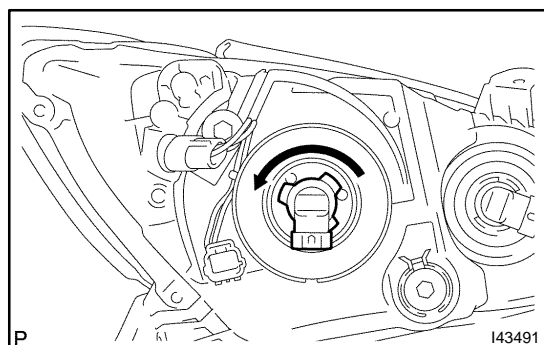


### 4. REMOVE HEADLAMP, NO.1 BULB

- Turn in the direction indicated by the arrow and remove the headlamp, No.1 bulb.

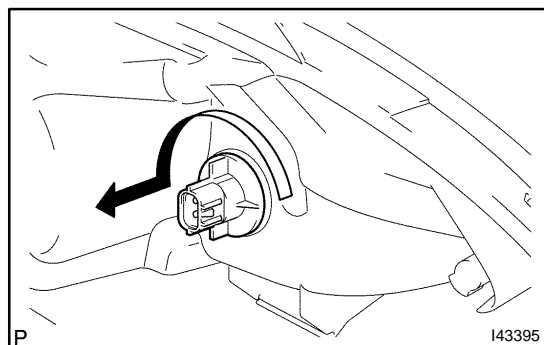


### 5. REMOVE FRONT TURN SIGNAL LAMP BULB

- Turn in the direction indicated by the arrow and remove the socket plug assy and the front turn signal lamp bulb as a unit.

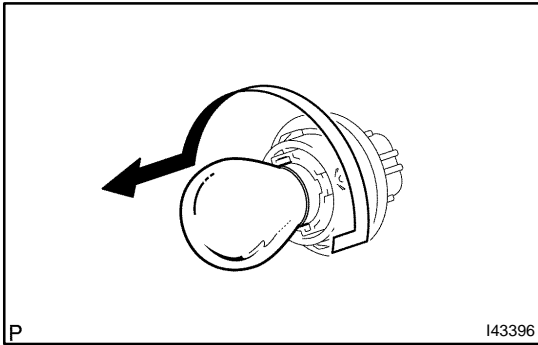

- (b) Turn in the direction indicated by the arrow and remove the front turn signal lamp bulb.
- (c) Remove the socket plug Assy.

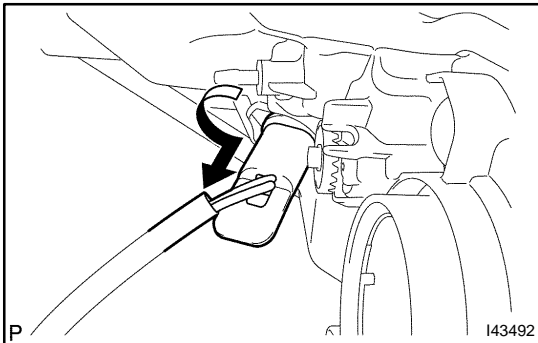

#### 6. REMOVE CLEARANCE LAMP BULB

- (a) Turn in the direction indicated by the arrow and remove the headlamp housing RH and the clearance lamp bulb as a unit.
- (b) Remove the clearance lamp bulb from the headlamp housing RH.

- 7. VEHICLE PREPARATION FOR HEADLAMP AIM ADJUSTMENT (SEE PAGE 65-10)
- 8. PREPARATION FOR HEADLAMP AIMING (Using a screen) (SEE PAGE 65-10)
- 9. HEADLAMP AIMING INSPECTION (SEE PAGE 65-10)
- 10. HEADLAMP AIMING ADJUSTMENT (SEE PAGE 65-10)
- 11. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-17)
- 12. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65-17)
- 13. FOG LAMP AIMING INSPECTION (SEE PAGE 65-17)
- 14. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65-17)