


## TERMINALS OF ECU

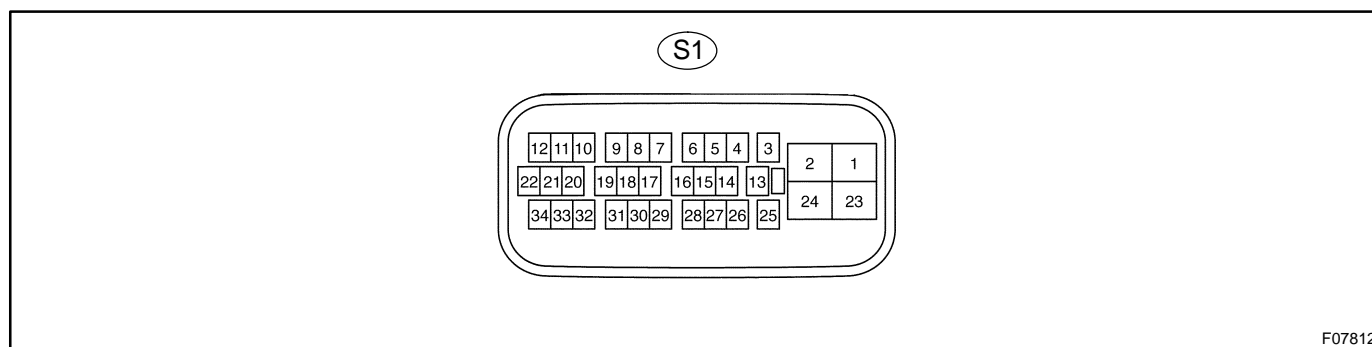

F07812

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
+BS (S1-1) – GND (S1-2, 24)	W – W-B	Always	11 to 14
FL+ (S1-9) – FL- (S1-8)	BR – Y	IG switch ON, slowly turn left front wheel	AC generation
STP (S1-10) – GND (S1-2, 24)	G-W – W-B	Stop lamp switch ON	10 to 14
		Stop lamp switch OFF	Below 1.0
RL+ (S1-11) – RL- (S1-12)	R – G	IG switch ON, slowly turn left rear wheel	AC generation
WA (S1-13) – GND (S1-2, 24)	R-B – W-B	IG switch ON, ABS warning light ON	10 to 14
		IG switch ON, ABS warning light OFF	Below 2.0
D/G (S1 – 14) – GND (S1-2, 24)	O – W-B	IG switch ON	10 to 14
Ts (S1 – 15) – GND (S1-2, 24)	LG-B – W-B	IG switch ON	10 to 14
Tc (S1-16) – GND (S1-2, 24)	P-B – W-B	IG switch ON	10 to 14
PKB (S1-18) – GND (S1-2, 24)	R-W – W-B	IG switch ON, parking switch ON	Below 1.0
		IG switch ON, parking switch OFF	10 to 14
+BM (S1-23) – GND (S1-2, 24)	L – W-B	Always	11 to 14
IG (S1-25) – GND (S1-2, 24)	Y-R – W-B	IG switch ON	10 to 14
FR+ (S1-31) – FR- (S1-30)	W – B	IG switch ON, slowly turn right front wheel	AC generation
RR+ (S1-33) – RR- (S1-34)	P – L	IG switch ON, slowly turn right rear wheel	AC generation
BRL (S1-32) – GND (S1-2, 24)	R-Y – W-B	IG switch ON, brake warning light ON	10 to 14
		IG switch ON, brake warning light OFF	Below 2.0