


CENTER STOP LAMP ASSY REPLACEMENT

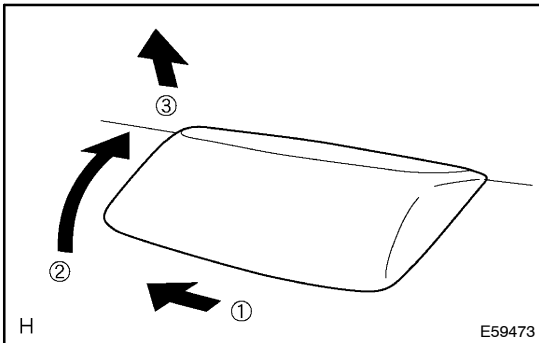

1. REMOVE CENTER STOP LAMP ASSY(W/O REAR SPOILER LED)


- (a) Pull out the center stop light assy shown in the illustration.
- (b) Disconnect the connector.

2. REMOVE LUGGAGE COMPARTMENT DOOR COVER(W/ REAR SPOILER LED)

(See [page 76-7](#))

3. REMOVE REAR SPOILER SUB-ASSY(W/ REAR SPOILER LED)

(See [page 76-7](#))

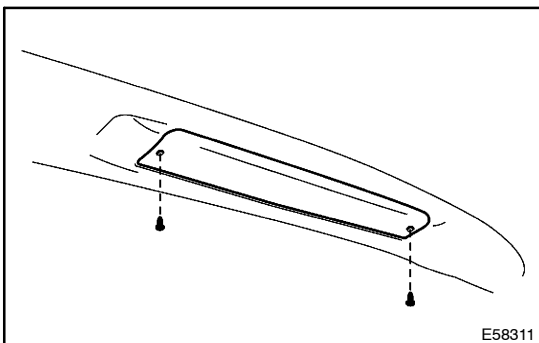

4. REMOVE CENTER STOP LAMP ASSY(W/ REAR SPOILER LED)

- (a) Remove the 2 screws and center stop light assy.

5. INSTALL REAR SPOILER SUB-ASSY(W/ REAR SPOILER LED)

(See [page 76-7](#))