

GENERATOR ASSY (1AZ-FE)


REPLACEMENT

1909F-01

1. REMOVE FAN AND GENERATOR V-BELT


(See page 14-1)

SST 09249-63010

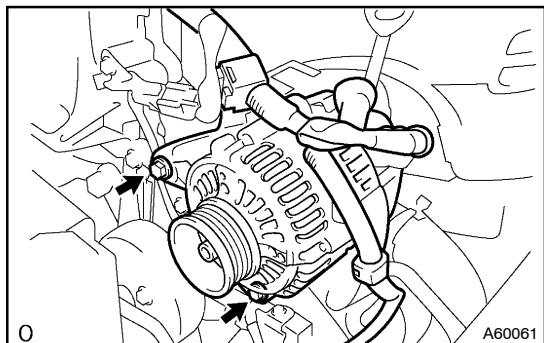

2. REMOVE GENERATOR ASSY

- (a) Disconnect the engine wire as shown in the illustration.
- (b) Remove 2 bolts and alternator assembly.

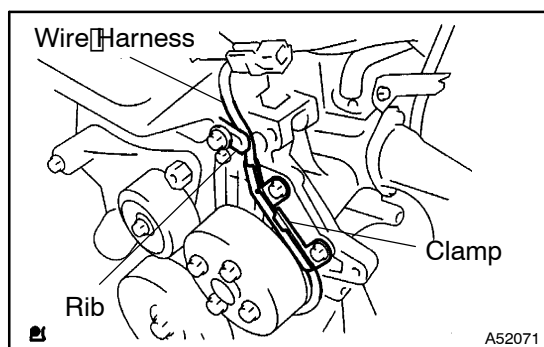

3. INSTALL GENERATOR ASSY

- (a) Confirm the wire harness of the crank position sensor is placed as shown in the illustration.
- (b) Install the alternator assembly.

Torque:

M8 21 N·m (214 kgf·cm, 15 ft·lbf)

M10 52 N·m (530 kgf·cm, 38 ft·lbf)

Wiring harness clamp 8.4 N·m (85 kgf·cm, 74 in·lbf)

Alternator wire 9.8 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Be careful not to put the wire harness in when install the alternator.

4. INSTALL FAN AND GENERATOR V-BELT

(See page 14-1)

SST 09249-63010