


SPEED SIGNAL ERROR

INSPECTION PROCEDURE

1 NAVIGATION CHECK MODE (VEHICLE SENSORS CHECK)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-56).

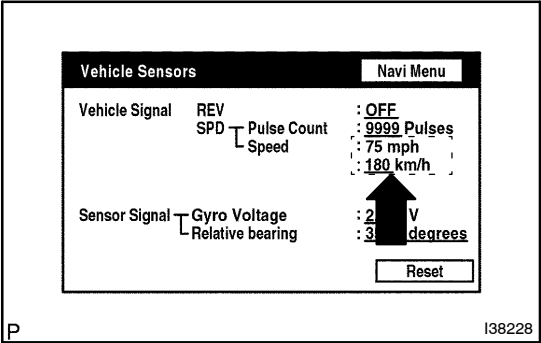

(b) While driving, compare the "SPD" indicator to the reading on the speedometer. Check if these readings are almost the same.

Standard: The readings are almost the same.

OK **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67-4)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-44)