



# RAIN SENSOR REPLACEMENT

66051-01

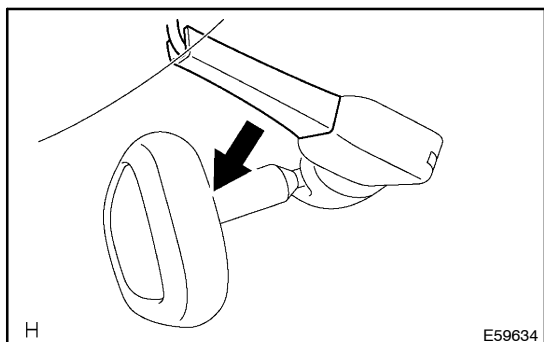


## 1. REMOVE RAIN SENSOR

- (a) Release the rain sensor cover as shown in the illustration.

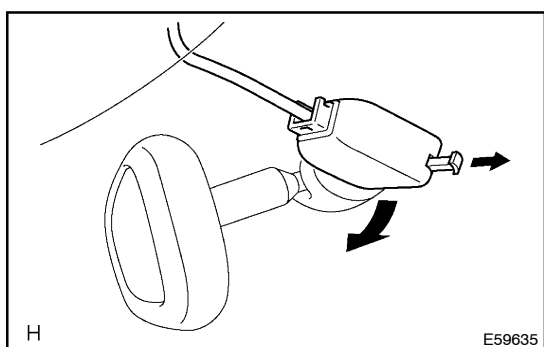

- (b) Pull out the stopper as shown in the illustration, and release the lock.

- (c) Disconnect the connector and remove the rain sensor.

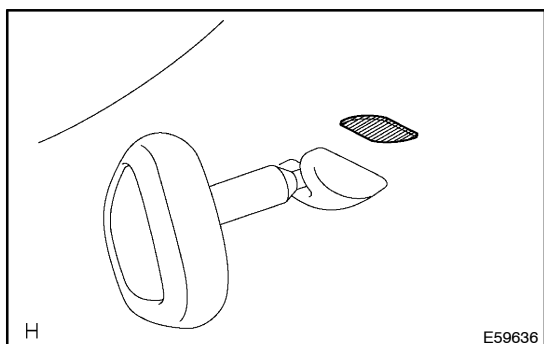

## 2. INSTALL RAIN SENSOR

- (a) Connect the connector, install the rain sensor and rain sensor cover.

### NOTICE:

- Check if the rain sensor tape remains on the windshield glass after removing the rain sensor. If it remains, remove it.
- Clean the glass with cloth, etc..
- The rain sensor tape is reusable, however, in case it is dirty or damaged, replace the rain sensor and rain sensor tape with new ones.
- Attach rain sensor tape so that bubbles do not enter between windshield glass and rain sensor tape, or rain sensor tape and rain sensor.