



COMPONENTS

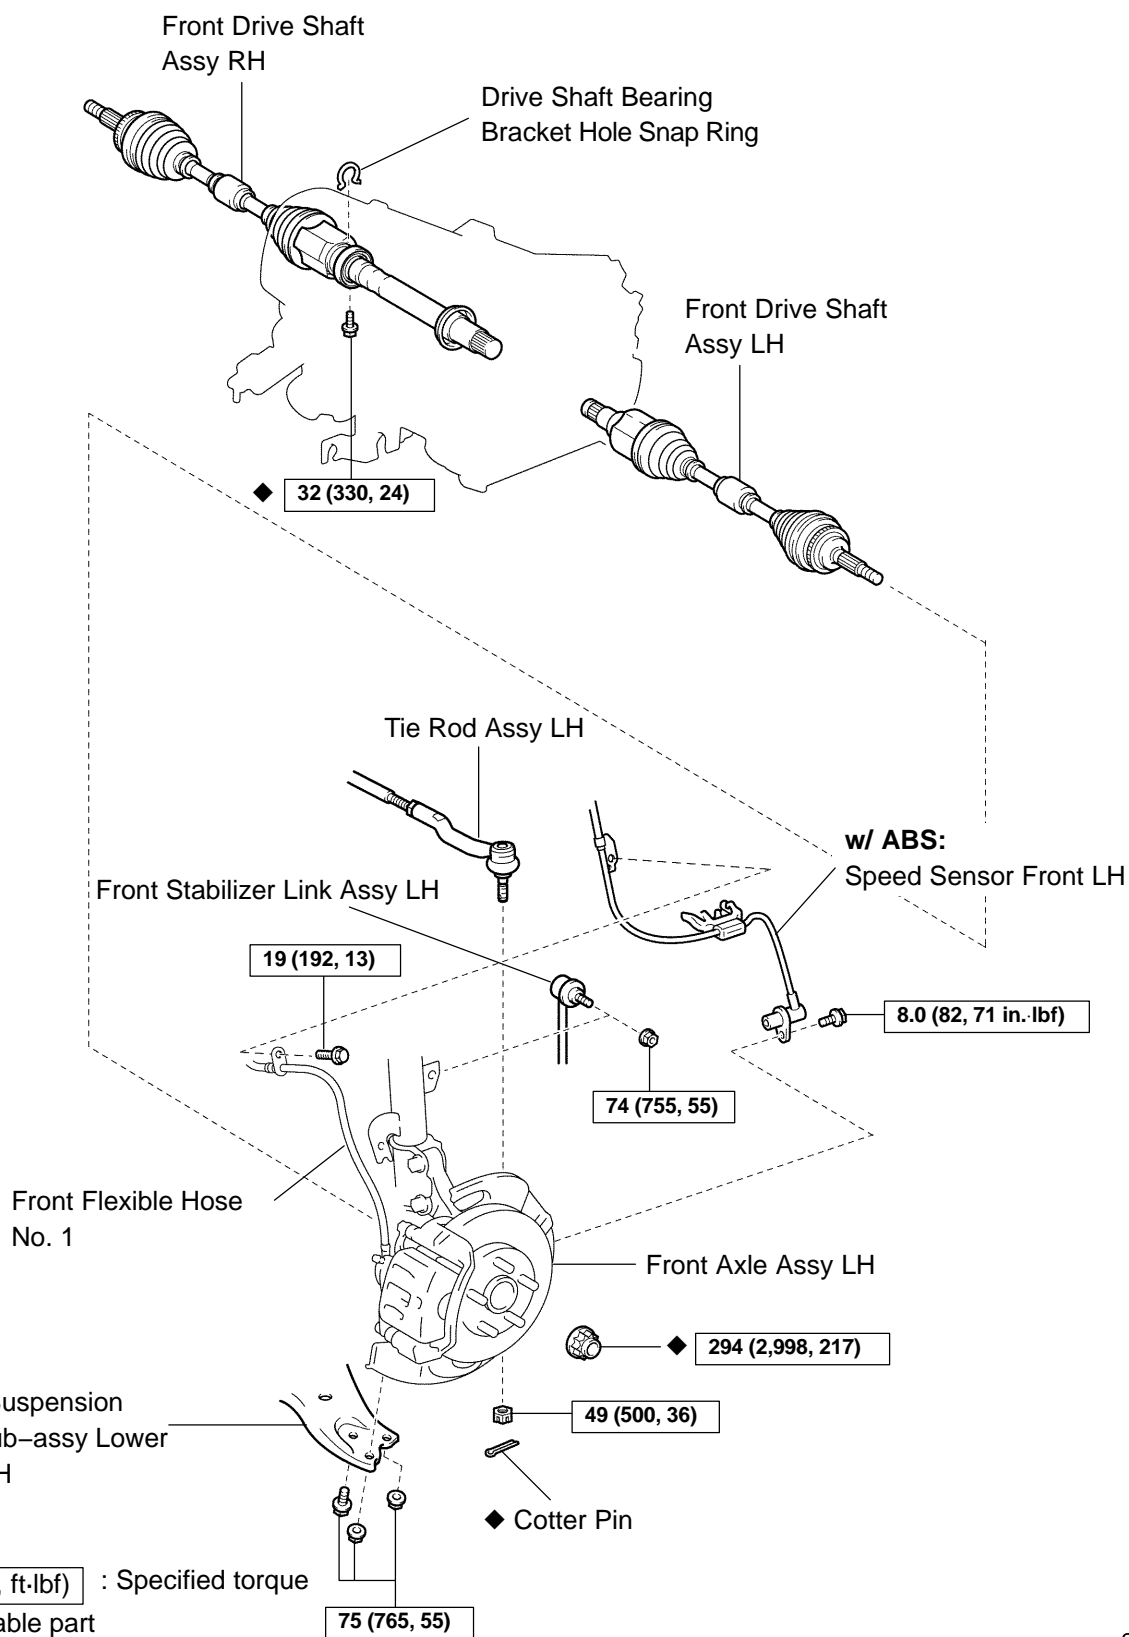

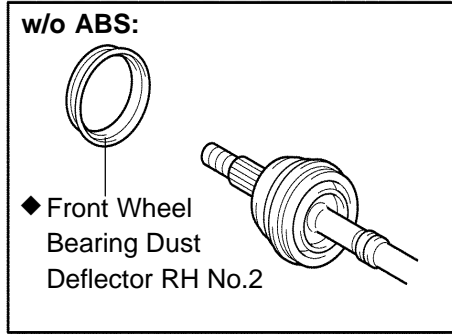

Front Drive Outboard Joint Shaft Assy RH

◆ Front Axle Outboard Joint Boot RH No.2 Clamp

◆ Front Axle Outboard Joint Boot RH Clamp

◆ Outboard Joint Boot

LH Side: Except MT
RH Side: Except 1MZ-FE

◆ Front Drive Shaft Damper RH

◆ Front Drive Shaft Damper RH Clamp

◆ Front Axle Inboard Joint Boot

◆ Front Axle Inboard Joint Boot RH No.2 Clamp


Front Drive Inboard Joint Assy RH

◆ Front Axle Inboard Joint Boot RH Clamp

◆ Front Drive Inner Shaft Inner RH Shaft Snap Ring

◆ Front Drive Shaft Bearing

◆ Front Drive Shaft Hole Snap Ring RH

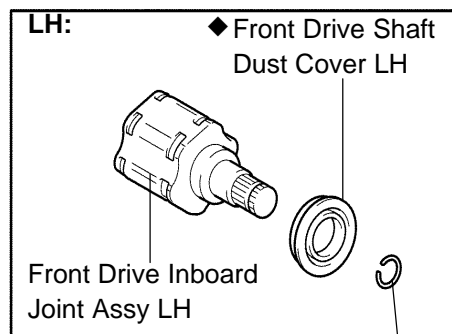

◆ Front Drive Shaft Dust Cover

◆ Front Drive Shaft Dust Cover RH

◆ Non-reusable part

