



## VOICE GUIDANCE DOES NOT FUNCTION

### INSPECTION PROCEDURE

#### 1 CHECK NAVIGATION SYSTEM SETTING

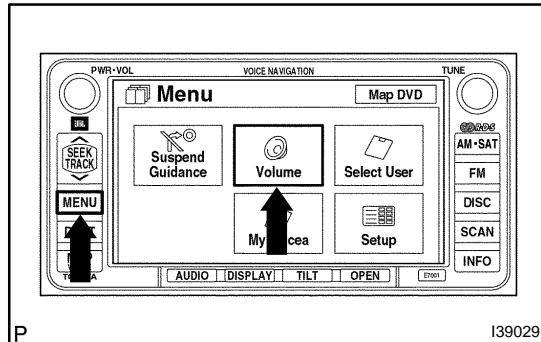


- (a) Enter the "MENU" screen by pressing the "MENU" switch.
- (b) Enter the volume adjustment screen by pressing the "Volume" switch.

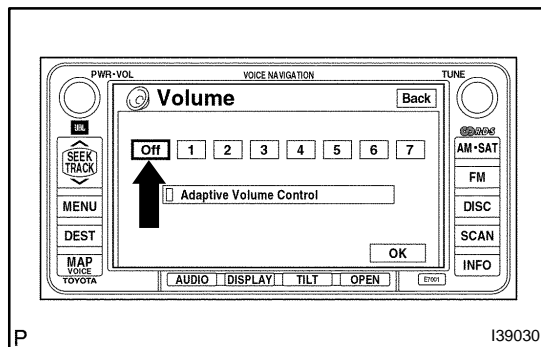


- (c) Check that "OFF" is not selected.  
**Standard: OFF is not selected.**

**NG****TURN VOICE GUIDANCE VOLUME UP TO 4  
USING VOICE ADJUSTMENT SWITCHES****OK**

## 2 CHECK NAVIGATION SETTING

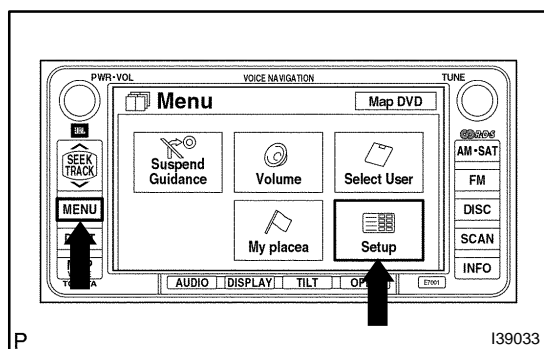

- (a) Enter the "MENU" screen by pressing the "MENU" switch.
- (b) Enter the "Setup" screen by pressing the "Setup" switch.

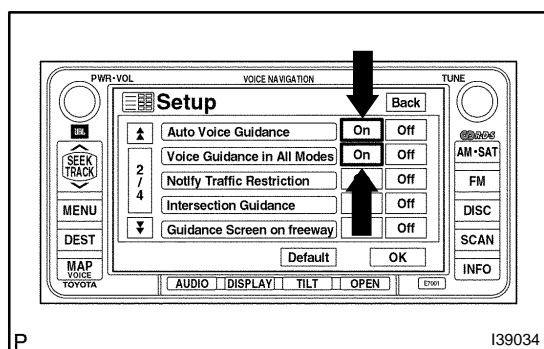


- (c) Check that "Auto Voice Guidance" is not OFF.  
**Standard: Auto voice guidance is not OFF.**
- (d) Check if "Voice Guidance in All Modes" is ON.  
**Standard: Voice guidance in all modes is ON.**

NG

TURN AUTO VOICE GUIDANCE TO "ON"

OK

## 3 CHECK THE MAP DISC

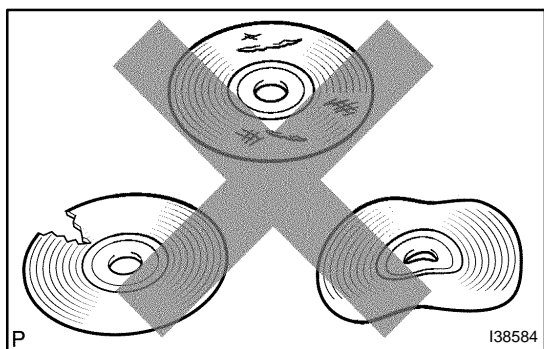

- (a) Check that the map disc is not deformed or cracked.  
**Standard: No deformations or cracks appear on the map disc.**

NG

REPLACE THE MAP DISC

OK

**4 CHECK RADIO AND NAVIGATION ASSY**

- (a) Check if audio sound can be heard from the driver's side speaker.

**Standard: Audio sound can be heard.**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION  
SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE [05-1914](#))**

**OK**

**REPLACE RADIO AND NAVIGATION ASSY (SEE PAGE [67-5](#))**