


POOR SOUND QUALITY IN ALL MODES (LOW VOLUME)

INSPECTION PROCEDURE

1 CHECK AUDIO SETTINGS

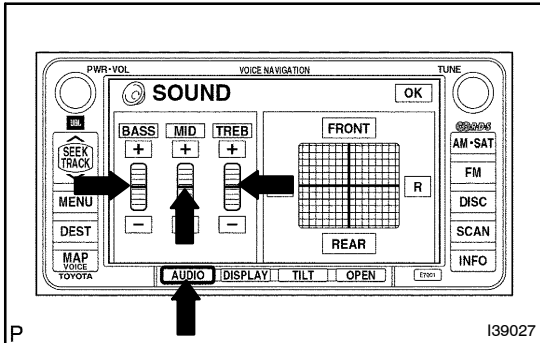

- Enter the sound adjustment screen by pressing the "SOUND" switch on the AUDIO display.
- Set "BASS", "MID" and "TREB" to the initial values and check if sound is normal.

Standard: Returns to normal.

HINT:

Sound quality adjustment items vary depending on the type of the amplifier.

OK END

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-46)