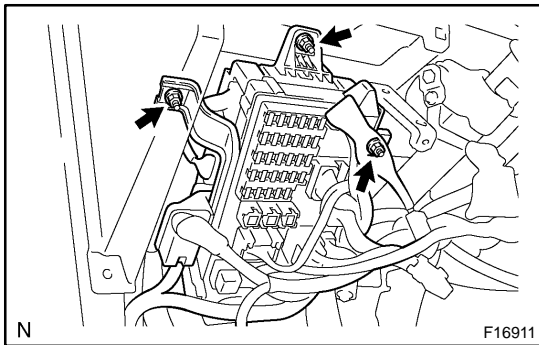


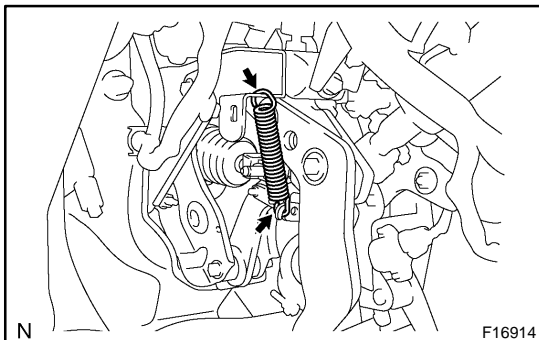
OVERHAUL

1. PRECAUTION (See page 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL
3. REMOVE STEERING WHEEL COVER LOWER NO.2
4. REMOVE STEERING WHEEL COVER LOWER NO.2 (W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
5. REMOVE POWER WINDOW LOCK SWITCH BULB (W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See page 50-6)
6. REMOVE STEERING WHEEL COVER LOWER NO.3 (3 SPOKE STEERING WHEEL ASSY)
(See page 50-6)
7. INSPECT PLACE FRONT WHEELS FACING STRAIGHT AHEAD
8. REMOVE HORN BUTTON ASSY (See page 60-25)
9. REMOVE STEERING WHEEL ASSY (See page 50-9)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
10. REMOVE INSTRUMENT CLUSTER FINISH PANEL (See page 71-16)
11. REMOVE STEERING COLUMN COVER (See page 50-9)
12. DISCONNECT FLOOR SHIFT PARKING LOCK CABLE ASSY (See page 50-9)
13. REMOVE FRONT DOOR SCUFF PLATE LH (See page 71-16)
14. REMOVE COWL SIDE TRIM SUB-ASSY LH (See page 71-16)
15. REMOVE INSTRUMENT PANEL COIN BOX SUB-ASSY (See page 71-16)
16. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER (See page 71-16)
17. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (See page 71-16)
18. REMOVE DUCT, FR VENTILATOR, LH (See page 71-16)
19. DISCONNECT STEERING INTERMEDIATE SHAFT SUB-ASSY (See page 50-9)
20. REMOVE STEERING COLUMN ASSY (See page 50-9)

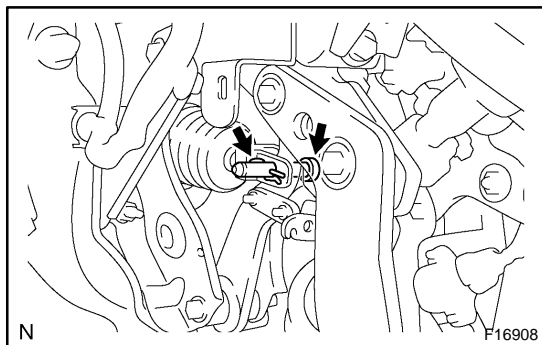


21. REMOVE INSTRUMENT PANEL JUNCTION BLOCK ASSY

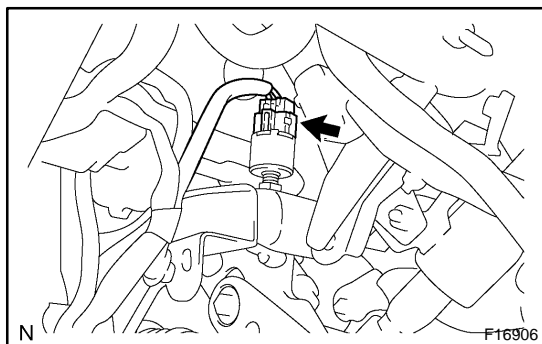
- (a) Remove the 3 nuts and junction block assy, then disconnect the connector.



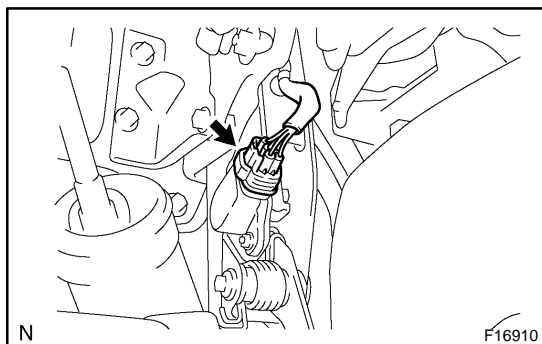
22. REMOVE BRAKE PEDAL RETURN SPRING

**23. REMOVE PUSH ROD PIN**

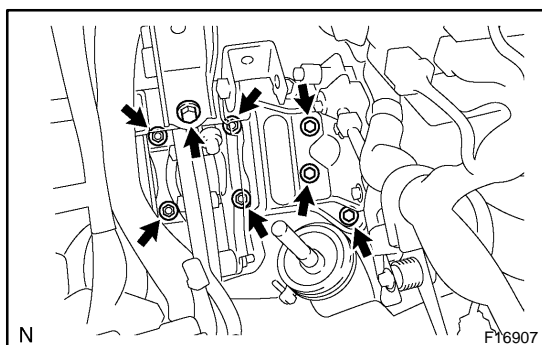
- (a) Remove the clip and push rod pin.

**24. REMOVE ACCELERATOR & BRAKE PEDAL ASSY**

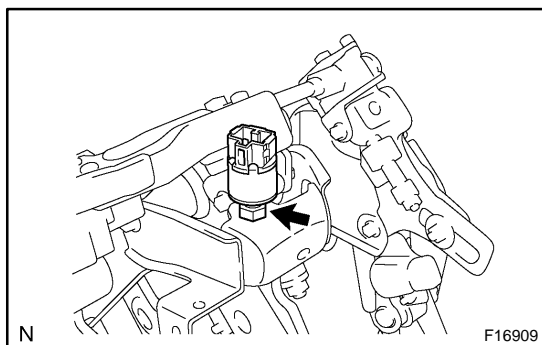
- (a) Disconnect the stop lamp switch connector.



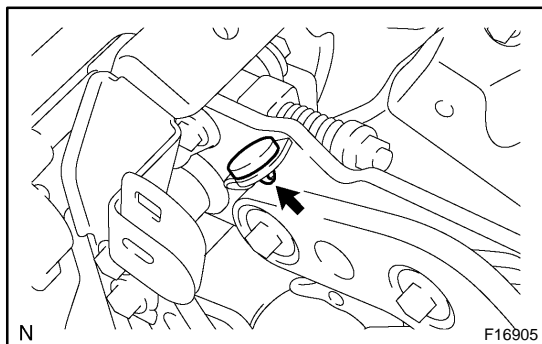
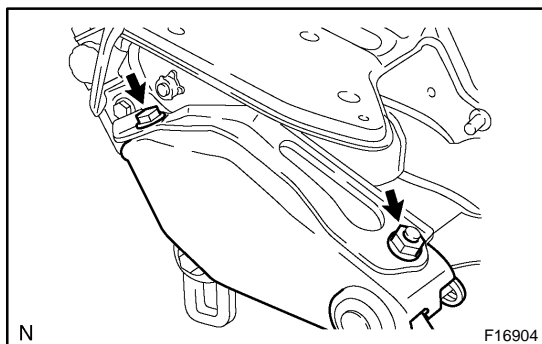
- (b) Disconnect the accel position sensor connector.



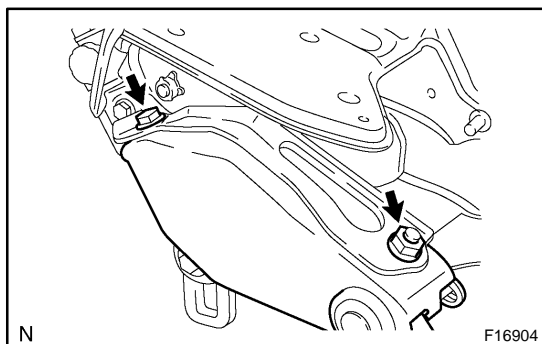
- (c) Remove the 4 bolts, 4 nuts and accelerator & brake pedal assy.

**25. REMOVE STOP LAMP SWITCH ASSY**

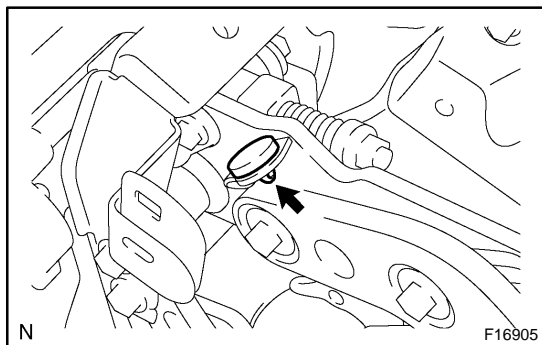
- (a) Loosen the nut and remove the stop lamp switch assy.

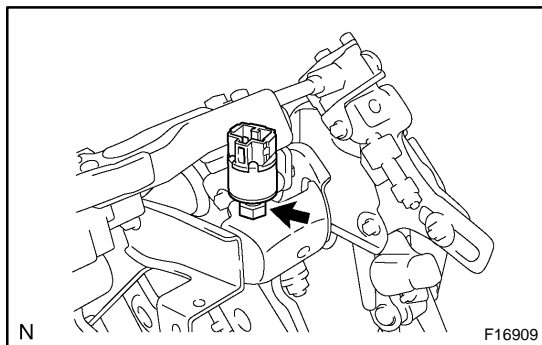
26. REMOVE BRAKE PEDAL PAD**27. REMOVE STOP LAMP SWITCH CUSHION****28. REMOVE ACCELERATOR PEDAL ASSY**

- (a) Remove the bolt, nut and accelerator pedal assy.

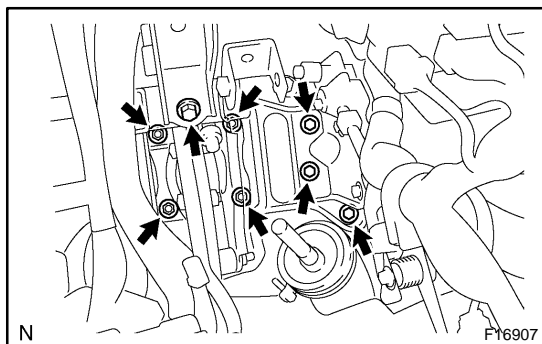
**29. INSTALL ACCELERATOR PEDAL ASSY**

- (a) Install the accelerator pedal assy with nut and bolt.
Torque: 12 N·m (122 kgf·cm, 8.8 ft·lbf)

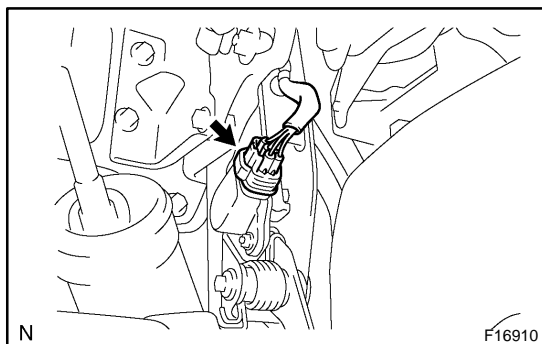
**30. INSTALL STOP LAMP SWITCH CUSHION****31. INSTALL BRAKE PEDAL PAD**

**32. INSTALL STOP LAMP SWITCH ASSY**

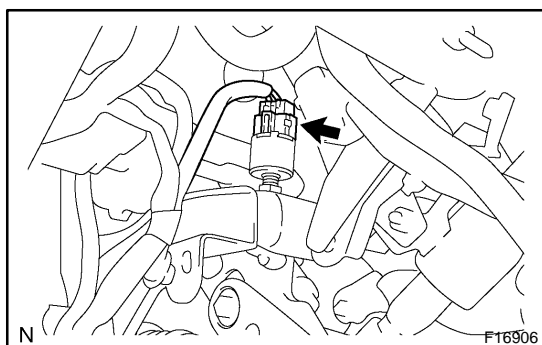
- (a) Install the stop lamp switch assy with a nut.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**33. INSTALL ACCELERATOR & BRAKE PEDAL ASSY**

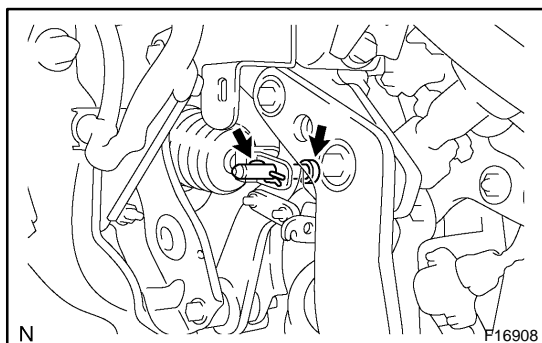
- (a) Install the accelerator & brake pedal assy with the 4 nuts and 4 bolts.

Torque:**Nut: 13 N·m (130 kgf·cm, 9 ft·lbf)****Bolt: 19.1 N·m (194 kgf·cm, 14 ft·lbf)**

- (b) Connect the accel position sensor connector.

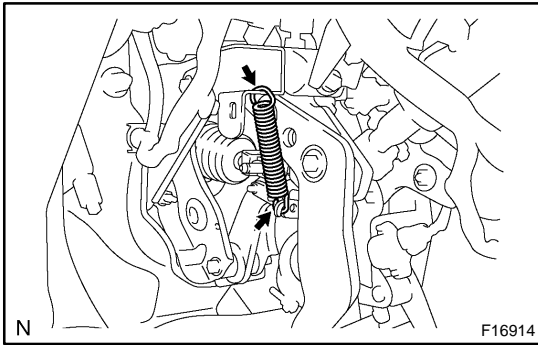


- (c) Connect the stop lamp switch connector.

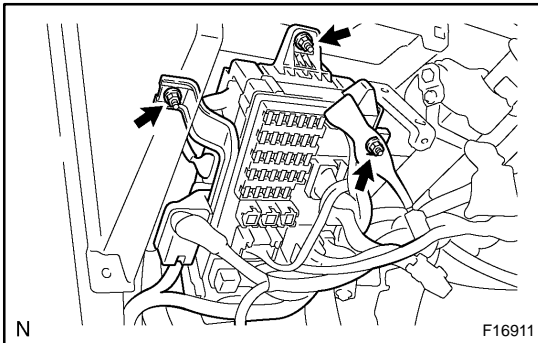
**34. INSTALL PUSH ROD PIN**

- (a) Install the push rod pin and clip.

HINT:Apply the lithium soap base glycol grease to the parts indicated by arrows (See page [32-16](#)).



35. INSTALL BRAKE PEDAL RETURN SPRING



36. INSTALL INSTRUMENT PANEL JUNCTION BLOCK ASSY

- (a) Install the junction block assy with the 3 nuts, then connect the each connector.

37. INSTALL STEERING COLUMN ASSY (See page [50-9](#))
38. CONNECT STEERING INTERMEDIATE SHAFT SUB-ASSY (See page [50-9](#))
39. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
40. CONNECT FLOOR SHIFT PARKING LOCK CABLE ASSY (See page [50-9](#))
41. CHECK KEY INTERLOCK OPERATION
42. INSTALL STEERING COLUMN COVER (See page [50-9](#))
43. INSTALL INSTRUMENT CLUSTER FINISH PANEL (See page [71-16](#))
44. INSTALL DUCT, FR VENTILATOR, LH (See page [71-16](#))
45. INSTALL INSTRUMENT PNL INSERT SUB-ASSY LWR LH (See page [71-16](#))
46. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER (See page [71-16](#))
47. INSTALL INSTRUMENT PANEL COIN BOX SUB-ASSY (See page [71-16](#))
48. INSTALL COWL SIDE TRIM SUB-ASSY LH (See page [71-16](#))
49. INSTALL FRONT DOOR SCUFF PLATE LH (See page [71-16](#))
50. CENTER SPIRAL CABLE (See page [60-34](#))
51. INSTALL STEERING WHEEL ASSY (See page [50-9](#))
52. INSPECT HORN BUTTON ASSY (See page [60-25](#))
53. INSTALL HORN BUTTON ASSY (See page [60-25](#))
54. INSTALL STEERING WHEEL COVER LOWER NO.2
55. INSTALL STEERING WHEEL COVER LOWER NO.3 (W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
56. INSTALL POWER WINDOW LOCK SWITCH BULB (W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
57. INSTALL STEERING WHEEL COVER LOWER NO.3 (3 SPOKE STEERING WHEEL ASSY)
58. INSPECT STEERING WHEEL CENTER POINT
59. INSPECT SRS WARNING LIGHT (See page [05-1464](#))