


REPLACEMENT

HINT:


COMPONENTS: See page 60-60

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **REMOVE ENGINE UNDER COVER LH** (See page 72-32)

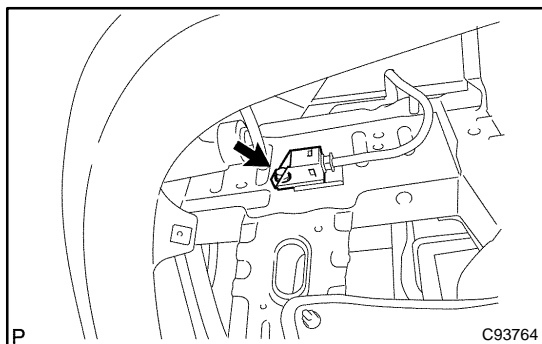

4. REMOVE AIR BAG SENSOR FRONT LH

- (a) Remove the bolt and front airbag sensor LH.

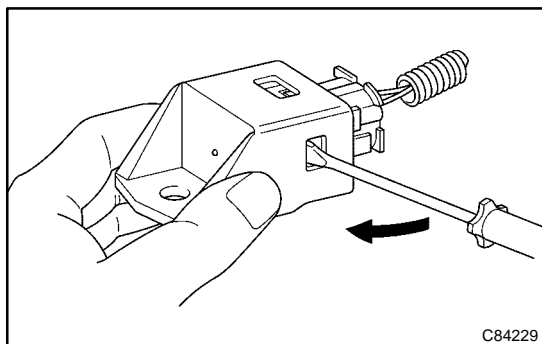

- (b) Disconnect the connector from the front airbag sensor LH.

HINT:

Insert a screw driver in any of the three opening sections of the sensor and slide the sensor to disconnect it from the connector.

5. **INSPECT AIR BAG SENSOR FRONT LH** (See page 60-17)
6. **INSTALL AIR BAG SENSOR FRONT LH**

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Install the front airbag sensor LH with the bolt.
Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)
- (d) Connect the connector to the front airbag sensor LH.
- (e) Check that no play is identified.

7. **INSPECT SRS WARNING LIGHT** (See page 05-1456)