


INSPECTION

TMMK made

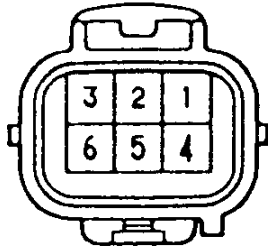

B75448

1. TMMK made:

INSPECT FRONT SEAT INNER BELT ASSY LH

- (a) Check the buckle switch.
- (1) Fasten the seat belt.
 - (2) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
3 - 6	1 MΩ or higher


- (3) Release the seat belt.
- (4) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
3 - 6	Below 1 Ω

If the result is not as specified, replace the inner belt assy.

TMC made

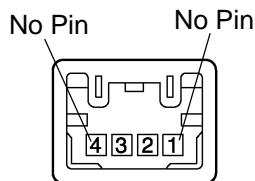

B75863

2. TMC made:

INSPECT FRONT SEAT INNER BELT ASSY LH

- (a) Check the buckle switch.
- (1) Fasten the seat belt.
 - (2) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
2 - 3	1 MΩ or higher

- (3) Release the seat belt.
- (4) Check the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
2 - 3	Below 1 Ω

If the result is not as specified, replace the inner belt assy.