


FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT REPLACEMENT

4105B-01

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY
(See page 71-10)
2. REMOVE AIR CONDITIONING RADIATOR ASSY
(See page 55-21)
3. REMOVE AIR BAG SENSOR ASSY CENTER
(See page 60-54)
4. REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT
 - (a) Remove the clip and washer and separate the top of the shift cable from the transaxle.
 - (b) Remove the clip and shift cable from the control cable bracket.
 - (c) Turn the lock and separate the shift cable from the shift lever retainer.
 - (d) Separate the top of the shift cable from the shift lever assy.

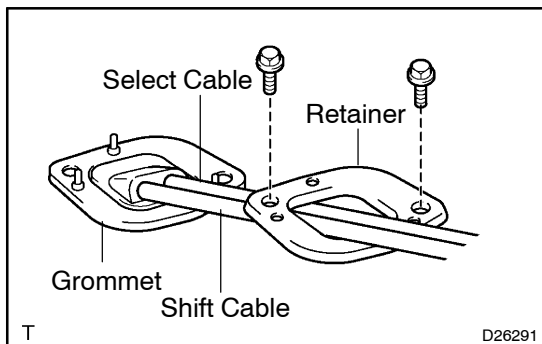

- (e) Remove the 2 retainer set bolts from the floor.
- (f) Separate the retainer from the grommet.
- (g) Remove the select cable from the grommet.
- (h) Remove the shift cable through the floor hole and retainer.

5. INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


- (a) Put the shift cable through the floor hole and retainer.
- (b) Install the select cable to the grommet.
- (c) Install the retainer to the grommet.


NOTICE:

Fit 3 projections of the grommet into 3 holes of the retainer.

- (d) Install the 2 retainer set bolts.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

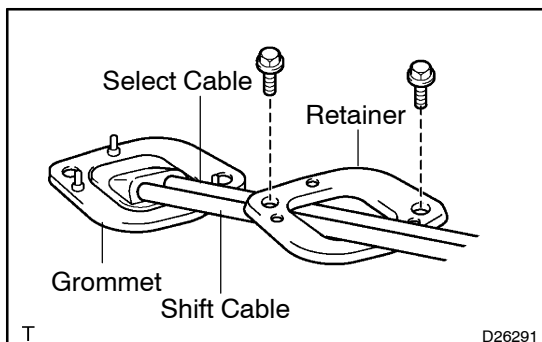

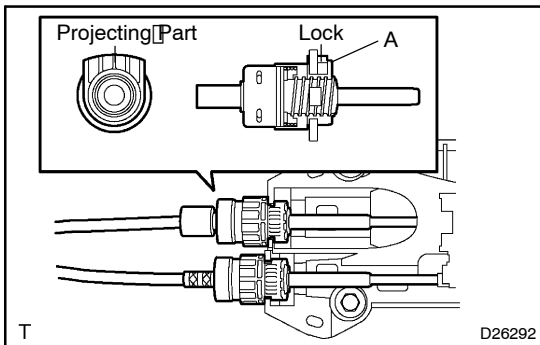

(e) Connect the shift cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the shift cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.

(f) Install the top of the shift cable to the shift lever assy.

(g) Connect the shift cable to the control cable bracket and install a new clip.

(h) Connect the shift cable to the transaxle and install the washer and clip.

6. INSTALL AIR BAG SENSOR ASSY CENTER

(See page 60-54)

7. INSTALL AIR CONDITIONING RADIATOR ASSY

(See page 55-21)

8. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY

(See page 71-10)

9. INSPECT SRS WARNING LIGHT (See page 05-758)