


## REPLACEMENT

HINT:


COMPONENTS: See page 60-60

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **REMOVE ENGINE UNDER COVER RH** (See page 14-29)

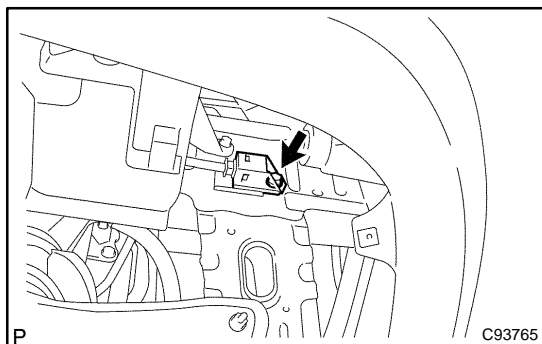

### 4. REMOVE AIR BAG FRONT RH SENSOR

- (a) Remove the bolt and front airbag sensor RH.

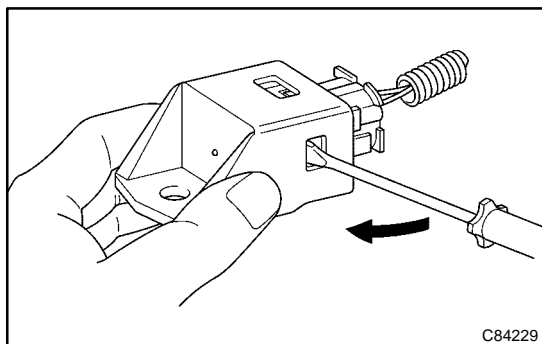

- (b) Disconnect the connector from the front airbag sensor RH.

HINT:

Insert a screw driver in any of the three opening sections of the sensor and slide the sensor to disconnect it from the connector.

5. **INSPECT AIR BAG FRONT RH SENSOR** (See page 60-17)
6. **INSTALL AIR BAG FRONT RH SENSOR**
  - (a) Check that the ignition switch is OFF.
  - (b) Check that the battery negative (-) terminal is disconnected.

**NOTICE:**

**Do not start the operation for 90 seconds after removing the terminal.**

- (c) Install the front airbag sensor RH with the bolt.  
**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**
- (d) Connect the connector to the front airbag sensor RH.
- (e) Check that no play is identified.
7. **INSPECT SRS WARNING LIGHT** (See page 05-1456)