


COMBINATION METER LOCATION

05MBQ-03

1MZ-FE, 3MZ-FE, w/ ABS Only:
ABS & Traction Actuator Assy

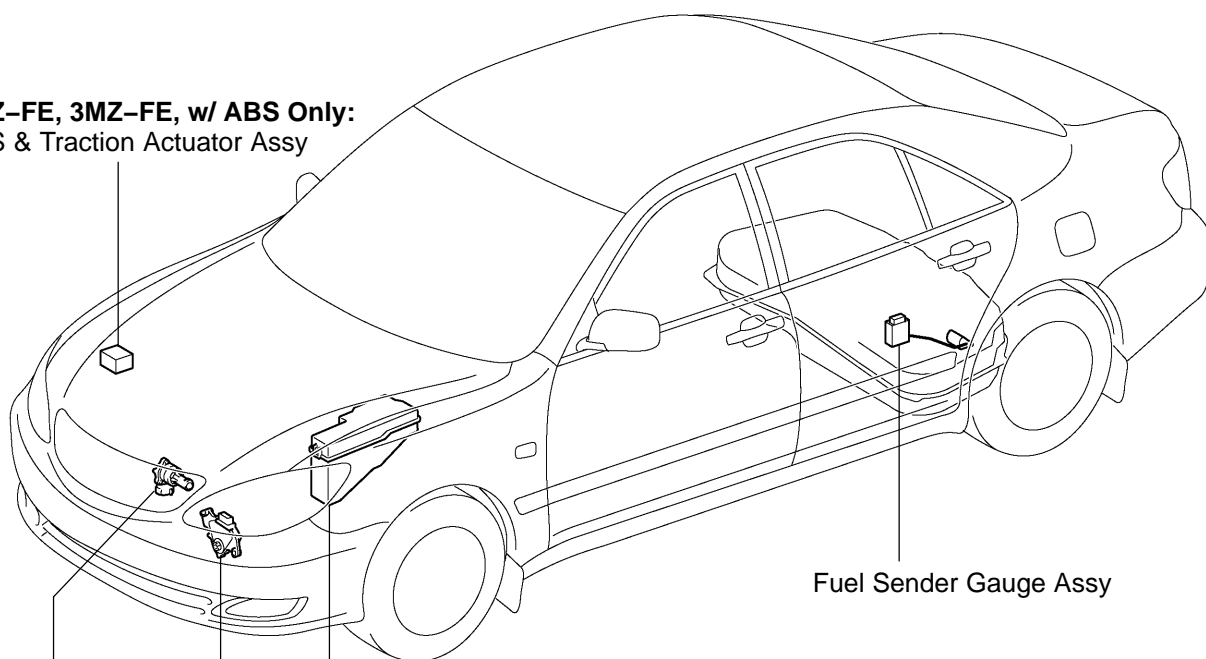


2AZ-FE:
Vehicle Speed Sensor



Park/Neutral
Position Switch



Engine Room J/B
● IG2 Fuse
● IGN Fuse


4 Spoke Type:

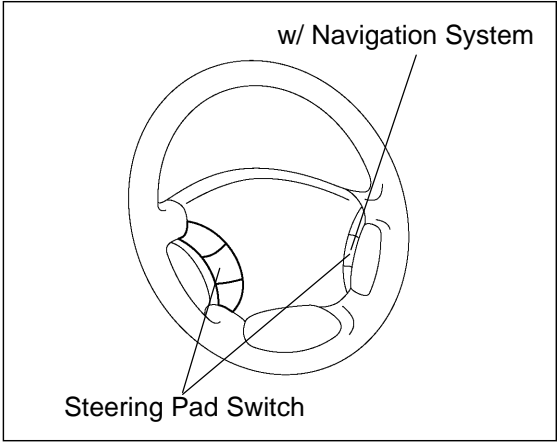



3 Spoke Type:

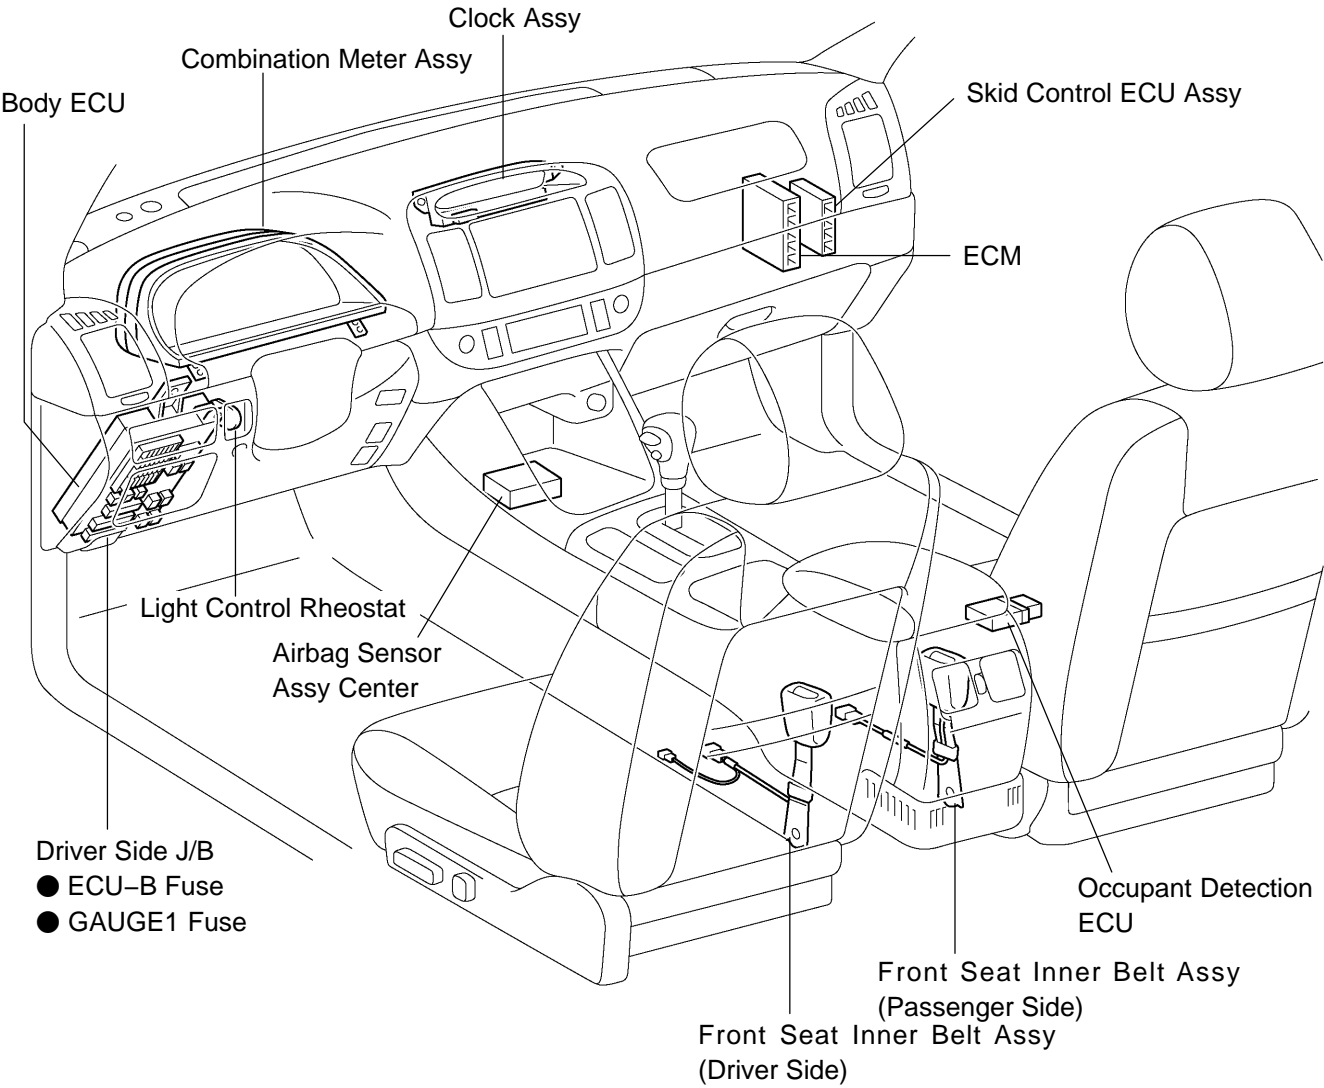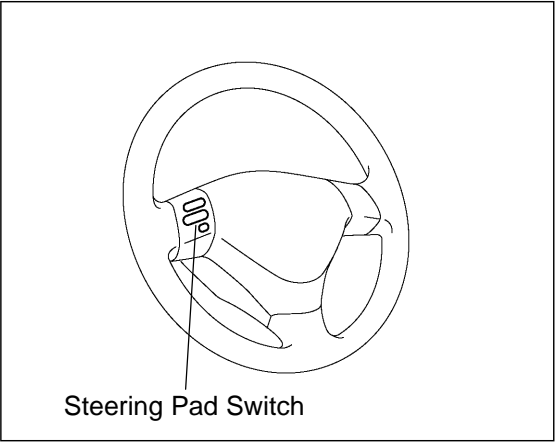

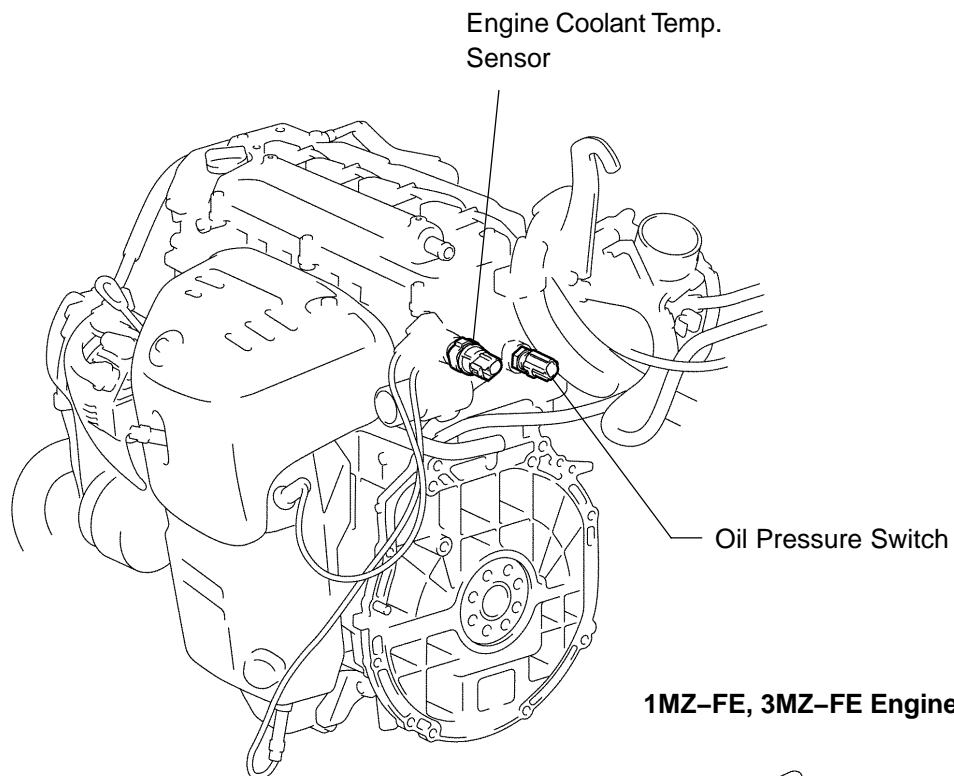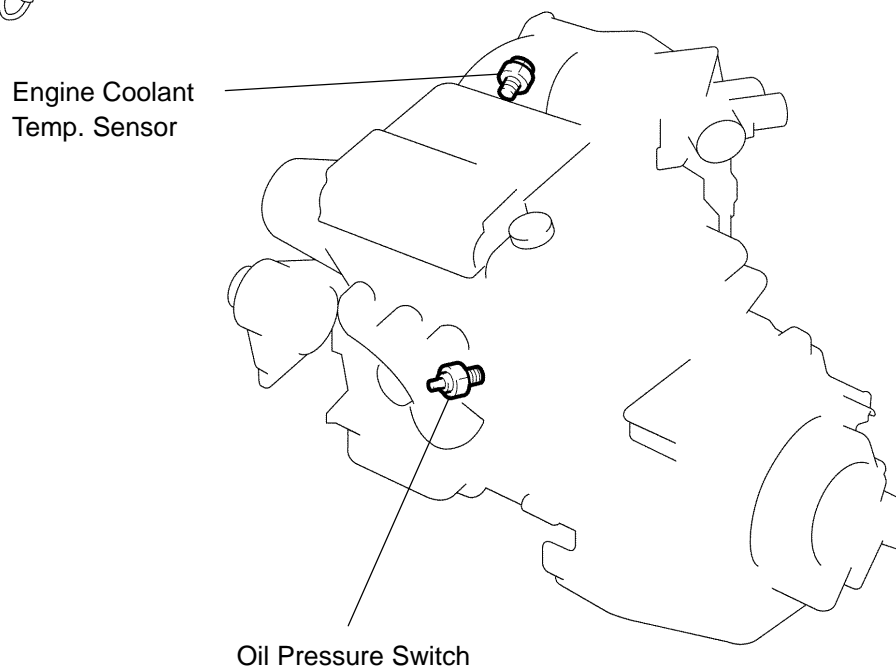2AZ-FE Engine:**1MZ-FE, 3MZ-FE Engine:**

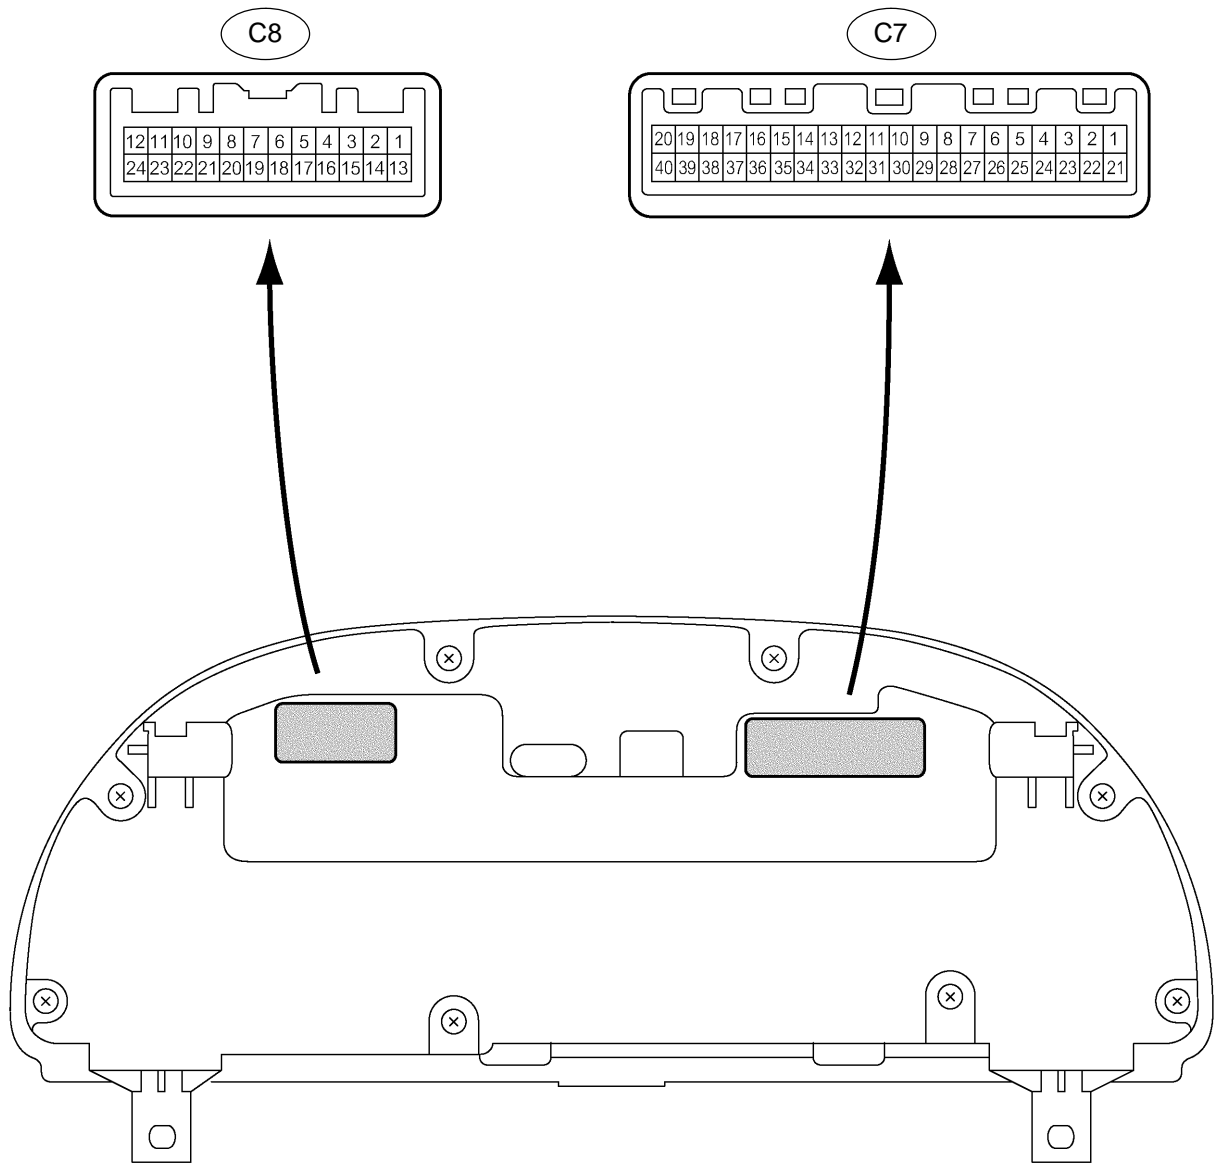

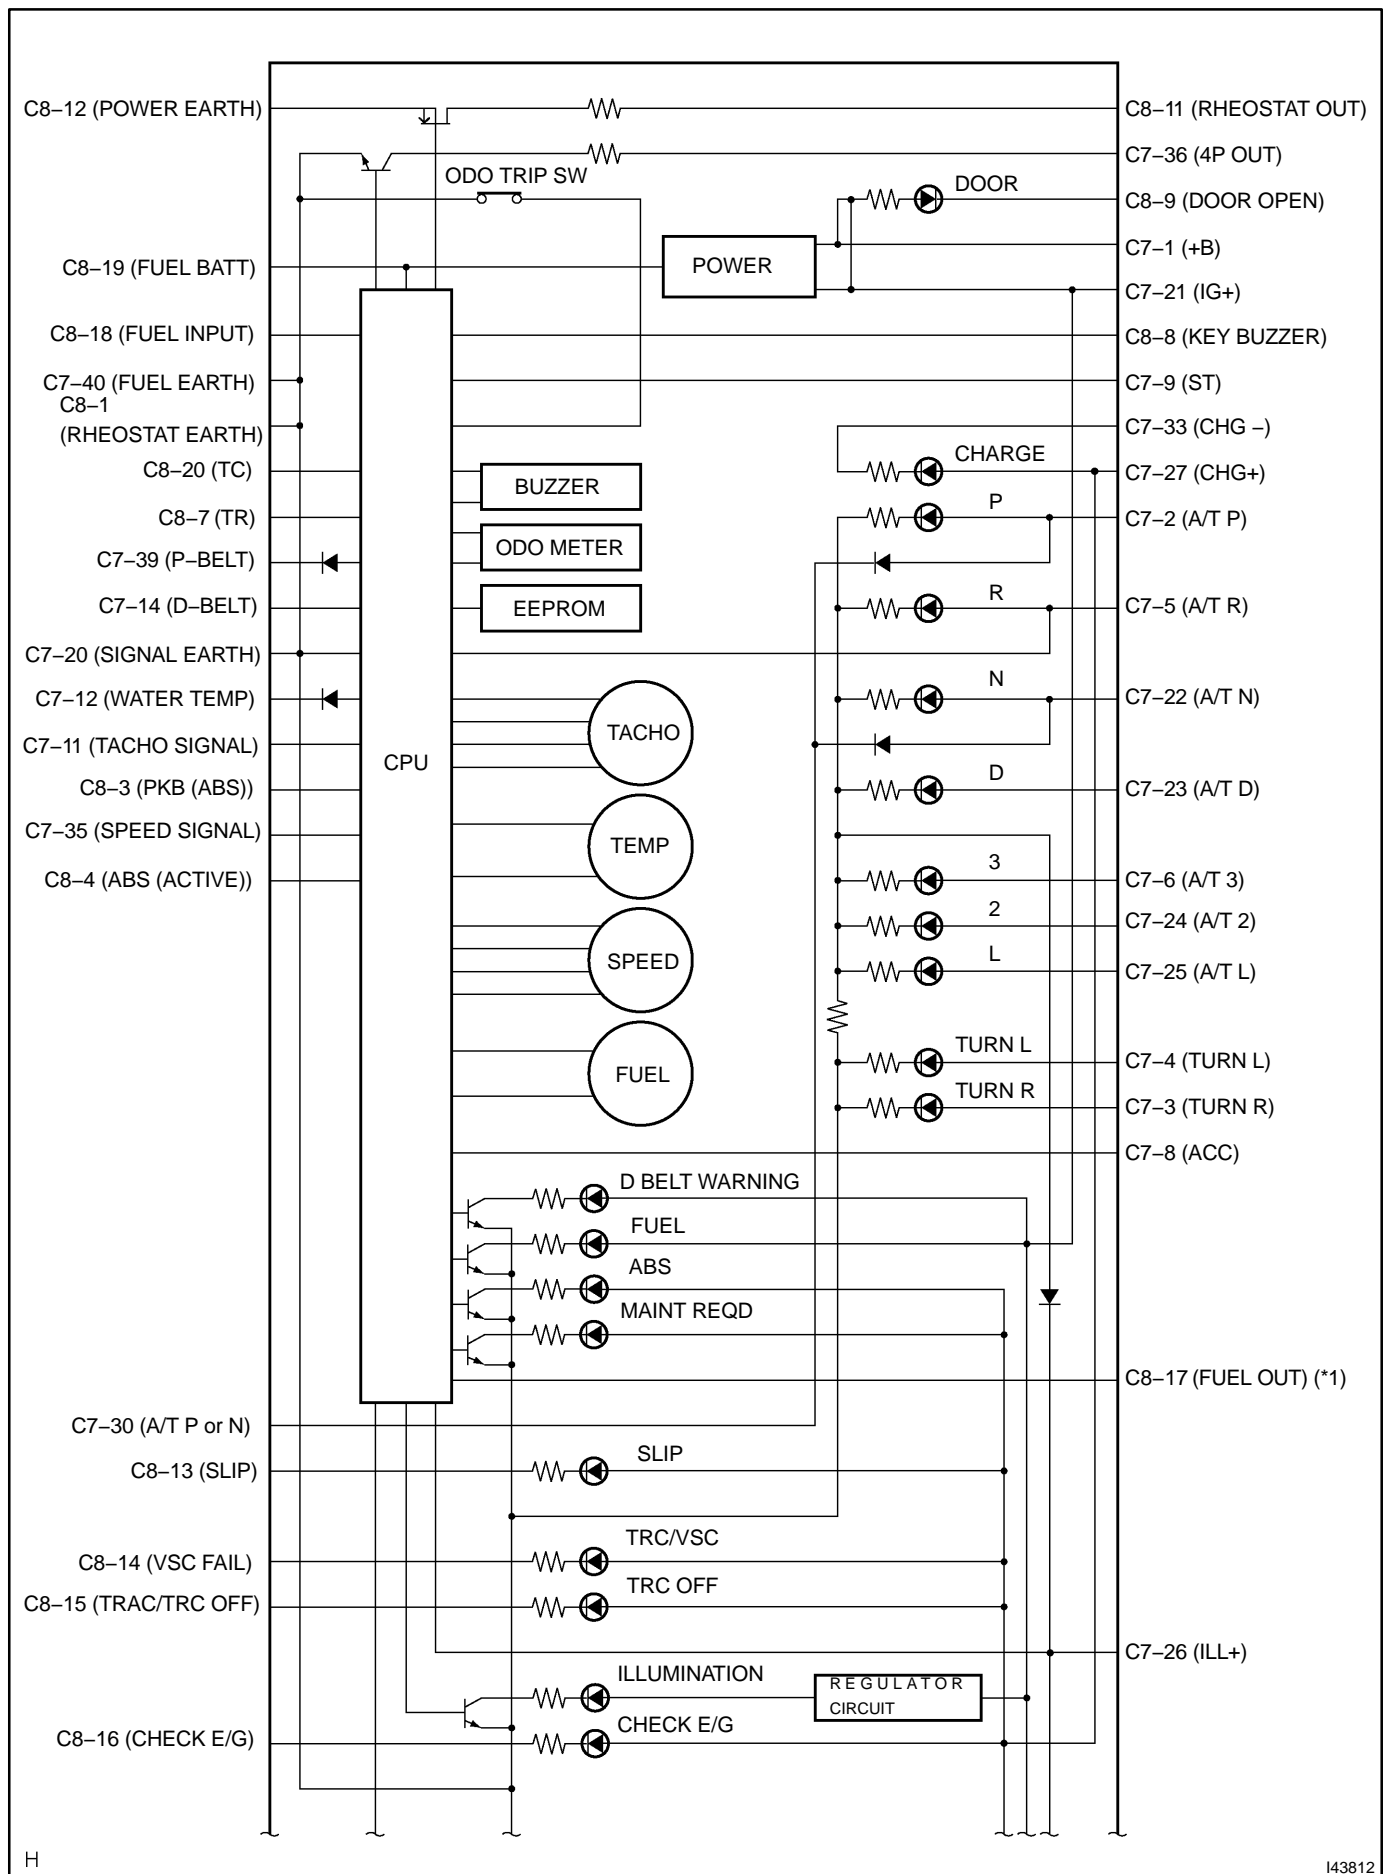

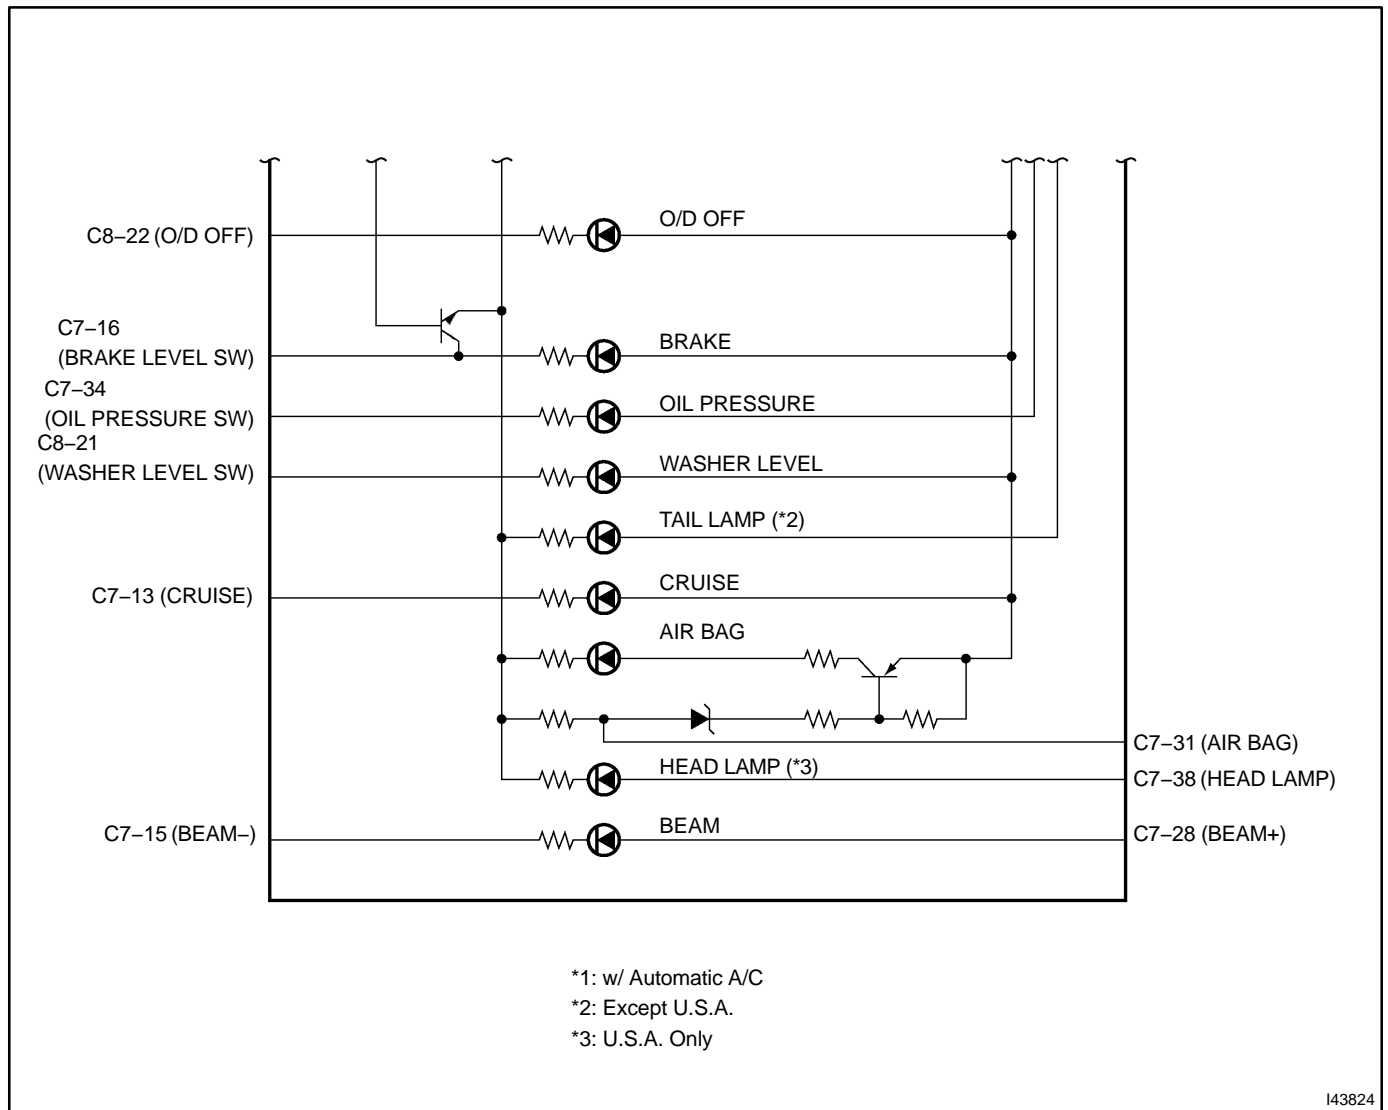

Terminals No.	Wire Harness Side
C7	1 ECU-B Fuse
	2 Park/Neutral Position Switch (P)
	3 Turn Signal Flasher (R)
	4 Turn Signal Flasher (L)
	5 Park/Neutral Position Switch (R)
	6 Park/Neutral Position Switch (3)
	8 ECU-ACC Fuse
	9 ST Fuse
	11 ECM (Tacho)
	12 ECM (Water Temp.)
	13 ECM (Cruise Control)
	14 Front Seat Inner Belt Assy (Driver Side)
	15 Ground
	16 Brake Fluid Level Warning Switch
	20 Ground (Signal Ground)
	21 GAUGE Fuse
	22 Park/Neutral Position Switch (N)
	23 Park/Neutral Position Switch (D)
	24 Park/Neutral Position Switch (2)
	25 Park/Neutral Position Switch (L)
	26 Combination Switch
	27 IG2 Fuse
	28 Headlight Dimmer Relay
	30 ECM
	31 Airbag Sensor Assy Center
	33 Generator
	34 Oil Pressure Switch
	35 ECM
	36 ECM
	38 Head Light Dimmer Relay (*1)
	39 Front Seat Inner Belt Assy (Passneger Side)
	40 Ground (Fuel Ground)
C8	1 Ground (Rheostat Grond)
	3 ECM (PKB)
	4 ECM (ABS)
	7 Light Control Rheostat
	8 ECM (Key buzzer)
	9 ECM (Door open)
	11 Light Control Rheostat Output
	12 Ground (Power Ground)
	13 ECM (SLIP)
	14 ECM (VSC)
	15 ECM (VSC OFF)
	16 ECM (Check E/G)
	17 Clock Assy (Fuel Output) (*2)
	18 Fuel Sender Gauge Assy
	19 Fuel Sender Gauge Assy
	20 Light Control Rheostat
	21 Washer Level Switch
	22 O/D Off Switch

*1: U.S.A Only

*2: Automatic A/C