

PANEL SWITCH DOES NOT FUNCTION**INSPECTION PROCEDURE****1 CHECK THE PANEL SWITCH**

- (a) Check for foreign matter around the switch that might prevent operation.

Standard: No foreign matter is found.


NG

REMOVE ANY FOREIGN MATTER FOUND

OK

2 DISPLAY CHECK MODE (PANEL SWITCH CHECK MODE)

- (a) Enter the "Display Check" mode (Panel Switch Check Mode) (see page 05-53).

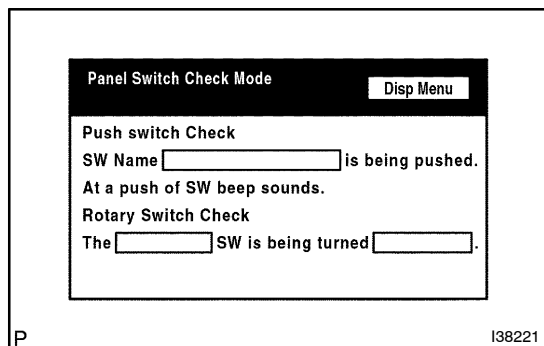

- (b) Operate the abnormal switch and check if the switch name and status are correctly displayed.

Standard: The switch name and status are correctly displayed as operated.

OK

**REPLACE RADIO AND NAVIGATION ASSY
(SEE PUB. NO. RM915E, PAGE 67-4)**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-46)**