

SKID CONTROL ECU ASSY

REPLACEMENT


320DT-01

1. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1

(See page 71-10)


2. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER

(See page 71-10)

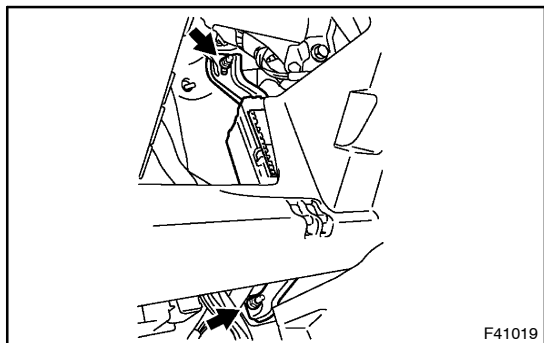

3. REMOVE SKID CONTROL ECU ASSY

- (a) Remove the 2 nuts and disconnect the skid control ECU from the reinforcement.
- (b) Disconnect the skid control ECU connectors and remove the skid control ECU assy.

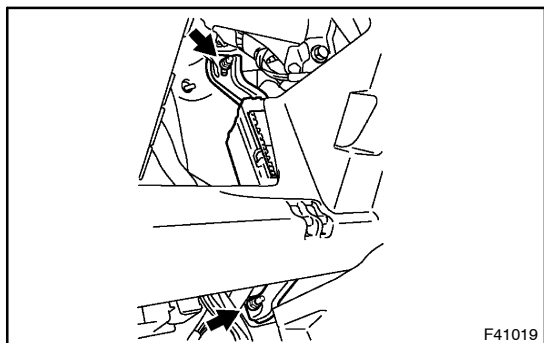

4. INSTALL SKID CONTROL ECU ASSY

- (a) Connect the skid control ECU connectors.
- (b) Install the skid control ECU to the reinforcement with the 2 nuts.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

5. INSTALL INSTRUMENT PANEL SUB-ASSY LOWER

(See page 71-10)

6. INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1

(See page 71-10)

7. ☐ PERFORM YAW RATE SENSOR ZERO POINT CALIBRATION (W/ VSC) (See page 05-511)

8. ☐ PERFORM DECELERATION SENSOR ZERO POINT CALIBRATION (W/ VSC) (See page 05-511)

9. ☐ CHECK VSC SENSOR SIGNAL (W/ VSC) (See page 05-511)