


DTC	44	LIGHT SENSOR CIRCUIT MALFUNCTION
-----	----	----------------------------------

CIRCUIT DESCRIPTION

This DTC is output when failure in the light sensor circuit is detected.

DTC No.	DTC Detecting Condition	Trouble Area
44	<ul style="list-style-type: none"> Malfunction of light sensor Open or short of light sensor circuit 	<ul style="list-style-type: none"> Automatic light control sensor Wire harness Instrument panel J/B assy

WIRING DIAGRAM

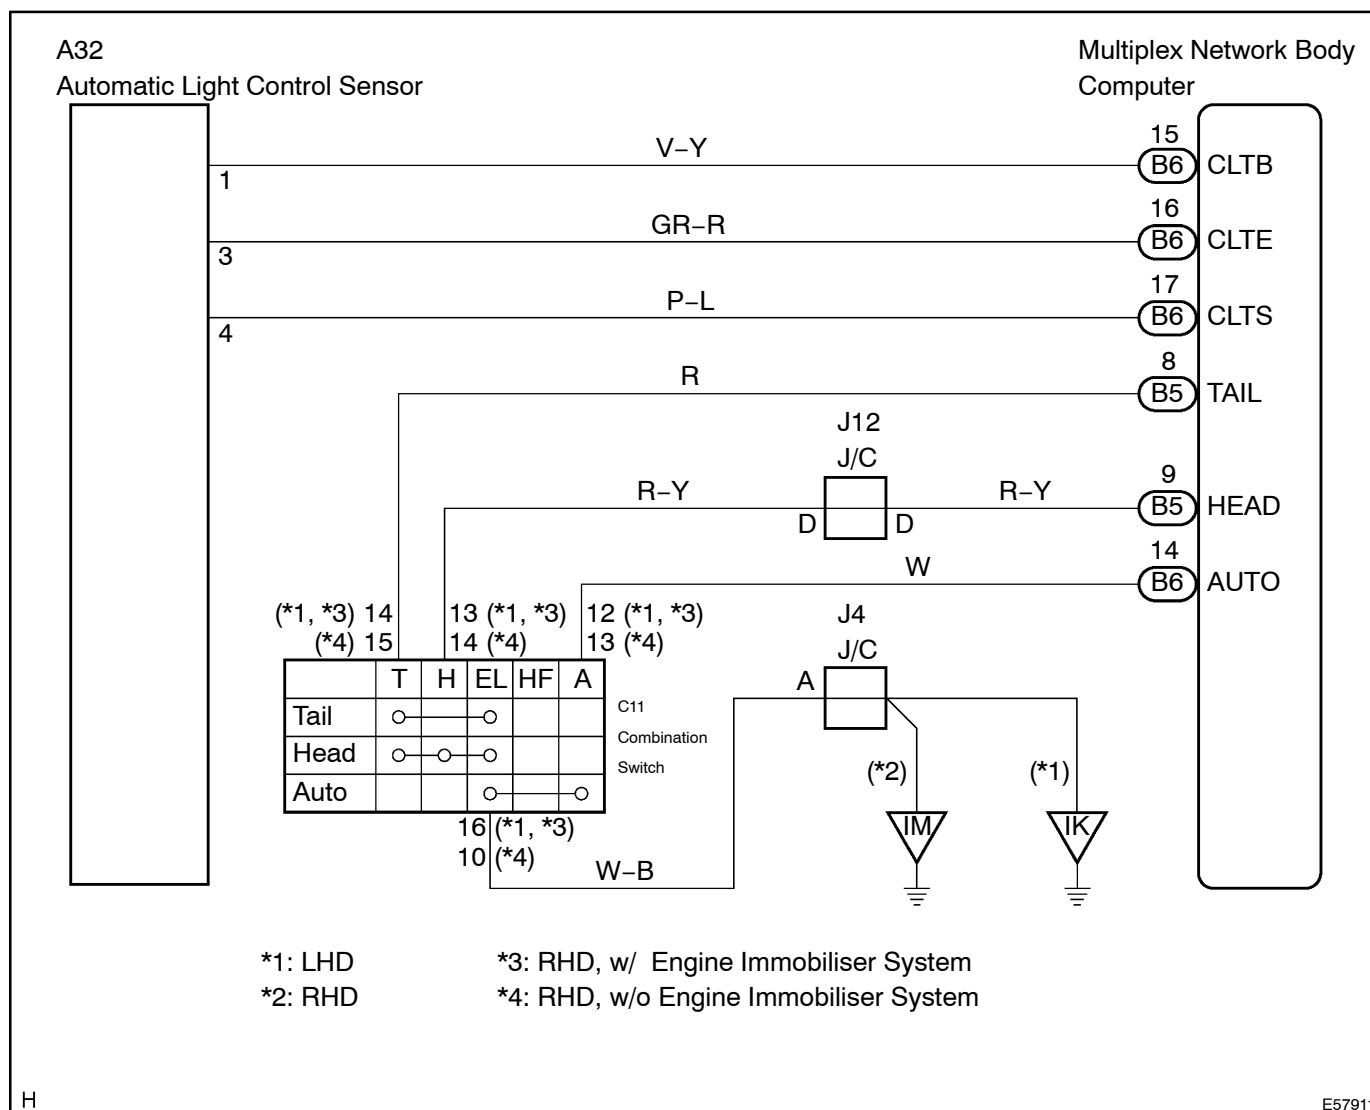

INSPECTION PROCEDURE

1 CHECK LIGHT


- (a) Check that tail light and head light light up.

NG

FLOW CHART(GO TO FLOW CHART OF HEAD LIGHT OR TAIL LIGHT)

OK

2 INSPECT HEADLAMP DIMMER SWITCH ASSY(AUTO)

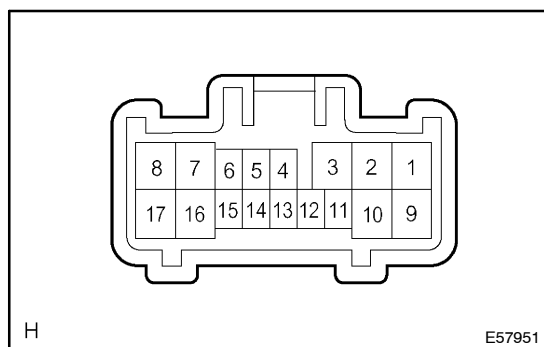

- (a) Inspect light control switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.


Switch operation	Tester connection	Specified condition
OFF	-	No continuity
AUTO	12 - 16	Continuity

NG

REPLACE HEADLAMP DIMMER SWITCH ASSY

OK

3 CHECK AUTOMATIC LIGHT CONTROL SENSOR

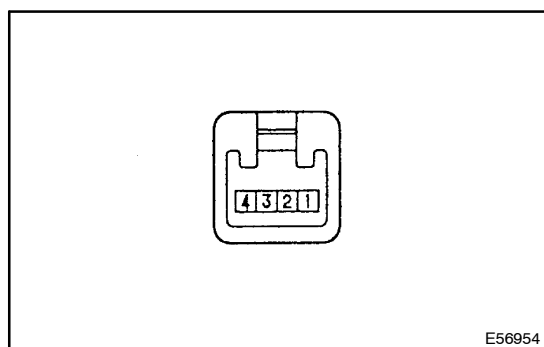

- (a) Check the continuity between terminal 3 (+) and body ground as shown in the chart below.
- (b) Measure voltage between terminals as shown in the chart below.
- (c) Using an oscilloscope, check that signal waveform appears between terminals.

Standard:

Terminal No. (Symbol)	Tester connection	Condition	Specified condition
1 (CLTB)	1 - 3	Constant	10 - 14 V
3 (CLTE)	3 - Body ground	Constant	Continuity
4 (CLTS)	4 - 3	IG SW ON Dimmer SW AUTO	Signal waveform appears depending on outside brightness

OK

FLOW CHART(GO TO FLOW CHART OF HEAD LIGHT OR TAIL LIGHT)

NG

4 CHECK HARNESS AND CONNECTOR(BETWEEN INSTRUMENT PANEL J/B ASSY AND AUTOMATIC LIGHT CONTROL SENSOR)

- (a) Check that signal waveform appears between terminal B6 - 17 (CLTS) and body ground.
Standard: Bar appears.

OK**CHECK AND REPLACE INSTRUMENT PANEL JUNCTION BLOCK ASSY****NG****5 CHECK HARNESS AND CONNECTOR(BETWEEN INSTRUMENT PANEL J/B ASSY AND AUTOMATIC LIGHT CONTROL SENSOR)**

- (a) Measure voltage between terminal B6 - 15 (CLTB) and body ground.
Standard: 10 - 14 V

OK**CHECK AND REPLACE INSTRUMENT PANEL JUNCTION BLOCK ASSY****NG****6 CHECK HARNESS AND CONNECTOR(BETWEEN INSTRUMENT PANEL J/B ASSY AND AUTOMATIC LIGHT CONTROL SENSOR)**

- (a) Check the continuity between terminal B6 - 16 (CLTE) of instrument panel J/B and 3 (CLTE) of automatic light control sensor.
Standard: There is continuity.

OK**CHECK AND REPLACE INSTRUMENT PANEL JUNCTION BLOCK ASSY****NG****REPLACE AUTOMATIC LIGHT CONTROL SENSOR**