

AUTOMATIC TRANSAXLE FLUID (ATM)

ON-VEHICLE INSPECTION


4005R-10

1. CHECK FLUID LEVEL

HINT:

Drive the vehicle so that the engine and transaxle are at the normal operating temperature.

Fluid temperature: 70 to 80 °C (158 to 176 °F)

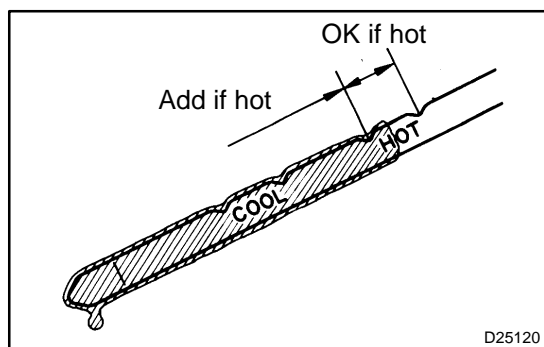

- Park the vehicle on a level surface and set the parking brake.
- With the engine idling and the brake pedal depressed, shift the lever into all positions from the P to the L position, and return to the P position.
- Pull out the dipstick and wipe it clean.
- Push it back fully into the pipe.
- Pull it out and check that the fluid level is within the HOT range.

If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs or other parts.