


IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8001U-01

1. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER

(See page 71-10)

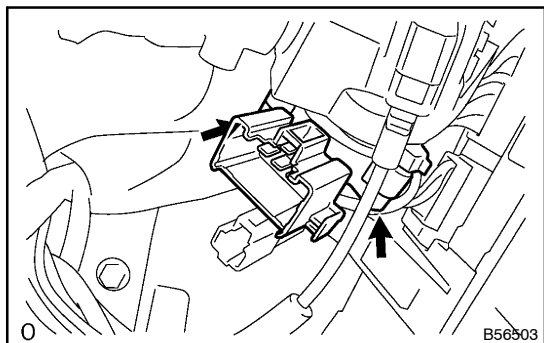

2. REMOVE IGNITION OR STARTER SWITCH ASSY

- (a) Disconnect the ignition switch connector and unlock warning switch connector.
- (b) Remove the clamp.
- (c) Remove the 2 screws and ignition switch.