


## ILLUMINATION FOR PANEL SWITCH DOES NOT COME ON WITH TAIL SWITCH ON

### INSPECTION PROCEDURE

#### 1 DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE)

(a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-1924).

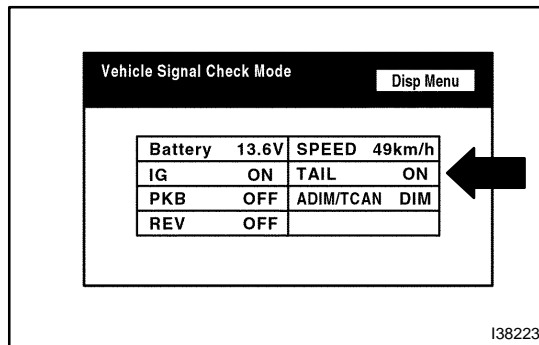

(b) Turn the light control switch to TAIL, ON or OFF.

#### Standard:

Light Control Switch	Display
TAIL or ON	ON
OFF	OFF

#### HINT:

This display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK

**REPLACE RADIO AND NAVIGATION ASSY  
(SEE PAGE 67-5)**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1914)**