



RADIATOR SIDE SUPPORT (ASSY) REPLACEMENT

1. REMOVE RADIATOR UPPER SUPPORT ([See page BP-1](#))
2. REMOVE RADIATOR SIDE SUPPORT

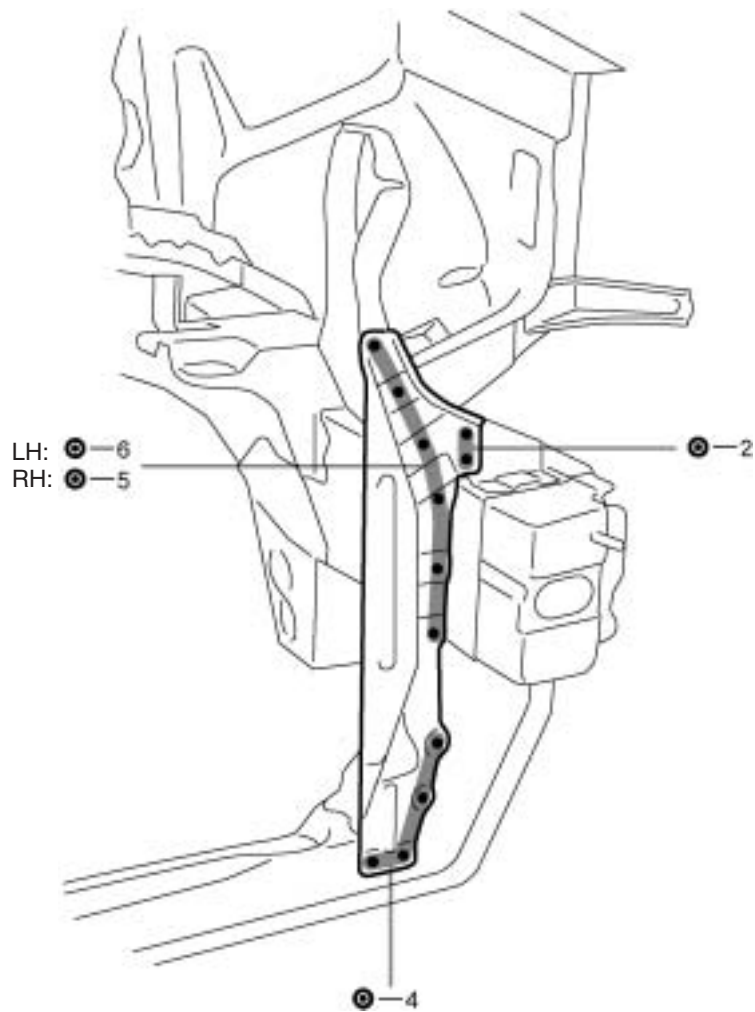

3. INSTALL RADIATOR SIDE SUPPORT

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

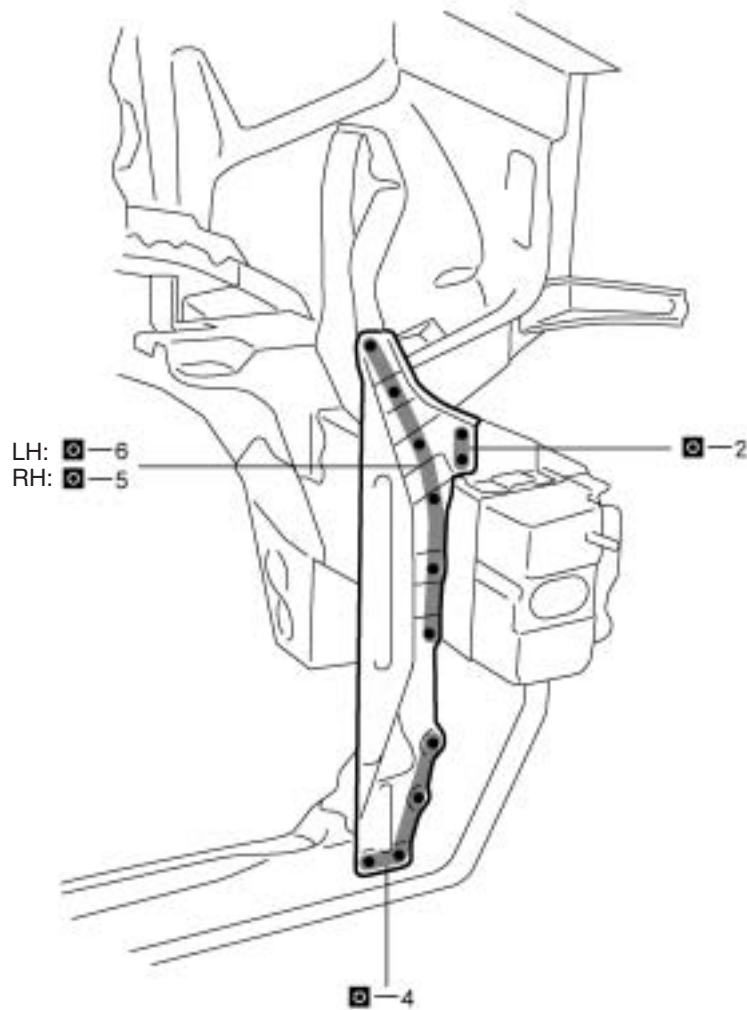

4. **INSTALL RADIATOR UPPER SUPPORT** ([See page BP-1](#))
5. **APPLYING ANTI-RUST AGENT**
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.