


REPLACEMENT

NOTICE:

Before changing the starter, check these items again:

- Connector connection
 - Accessory installation
1. REMOVE BATTERY
 2. REMOVE BATTERY TRAY
 3. REMOVE AIR CLEANER ASSY

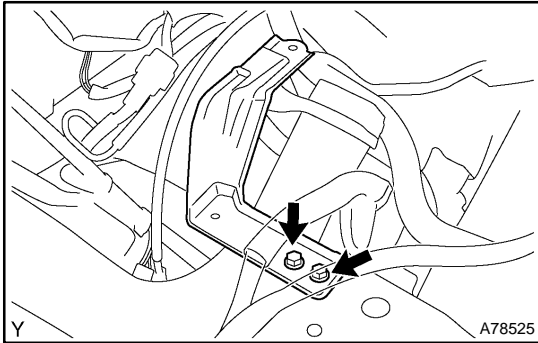


4. REMOVE AIR CLEANER BRACKET

- (a) Remove the 2 bolts and air cleaner bracket.

5. REMOVE AIR CLEANER INLET ASSY

- (a) Remove the 2 bolts and air cleaner inlet.

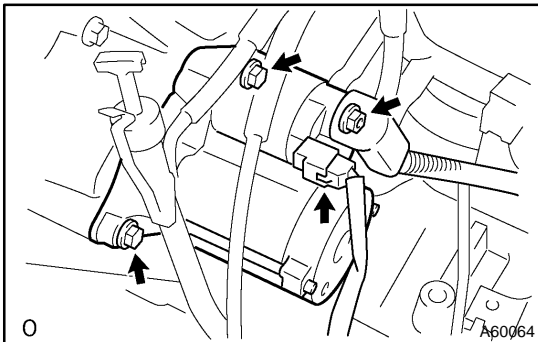

6. REMOVE STARTER ASSY


- (a) Disconnect the starter connector.
- (b) Remove the nut and disconnect the starter wire.
- (c) Remove the 2 bolts and starter.

7. INSTALL STARTER ASSY

- (a) Install the and starter with the 2 bolts.
Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)
- (b) Install the starter wire and the nut.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- (c) Connect the starter connector.

8. INSTALL AIR CLEANER BRACKET

- (a) Install the air cleaner bracket with the 2 bolts.
Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

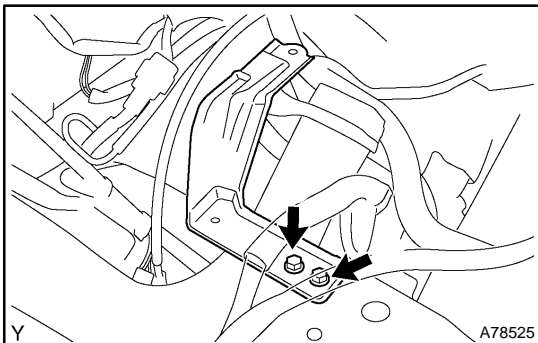

9. INSTALL AIR CLEANER ASSY

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

10. INSTALL AIR CLEANER INLET ASSY

- (a) Install the air cleaner inlet with the 2 bolts.
Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)

11. CHECK CONNECTION OF VACUUM HOSE**12. INSTALL BATTERY TRAY****13. INSTALL BATTERY**

- (a) Install the battery clamp with the bolt and nut.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

- (b) Connect the wires to the battery terminals.

Torque: 3.5 N·m (36 kgf·cm, 31 in·lbf)