

REPLACEMENT

HINT:

Installation is in the reverse order of the removal. But the installation is indicated only when it has a point.


1. REMOVE ROOF HEADLINING ASSY

(See page 76-21)

2. REMOVE ROOF SIDE RAIL GARNISH PAD RH(W/O CURTAIN SHIELD AIR BAG)

- (a) Remove the 7 screws and roof side rail garnish pad.
- (b) Employ the same manner described above to the other side.

3. REMOVE ROOF SIDE RAIL GARNISH PAD LH(W/O CURTAIN SHIELD AIR BAG)

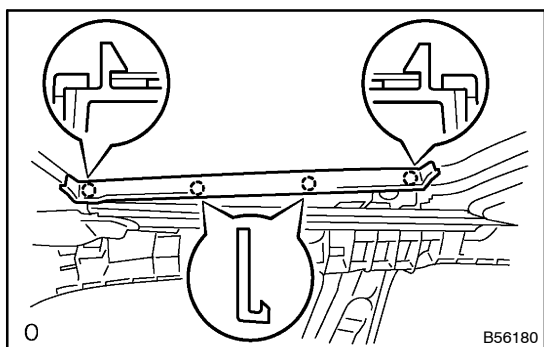

4. REMOVE SLIDING ROOF SIDE GARNISH RH

- (a) Using a screwdriver, remove the sliding roof side garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

5. REMOVE SLIDING ROOF SIDE GARNISH LH

6. REMOVE SLIDING ROOF GLASS SUB-ASSY

- (a) Using a torx wrench (T25), remove the 4 screws and sliding roof glass.


7. REMOVE SLIDING ROOF WEATHERSTRIP

8. REMOVE SLIDING ROOF DRIVE GEAR SUB-ASSY

- (a) Remove the 2 bolts.
- (b) Disconnect the clamp and then remove the sliding roof drive gear.


9. REMOVE SLIDING ROOF HOUSING SUB-ASSY

- (a) Disconnect the 4 drain hoses from the housing.
- (b) w/o curtain shield airbag:
Remove the 6 nuts and 4 bolts, then remove the housing as shown in the illustration.
- (c) w/ curtain shield airbag:
Remove the 6 nuts and 8 bolts, then remove the housing as shown in the illustration.

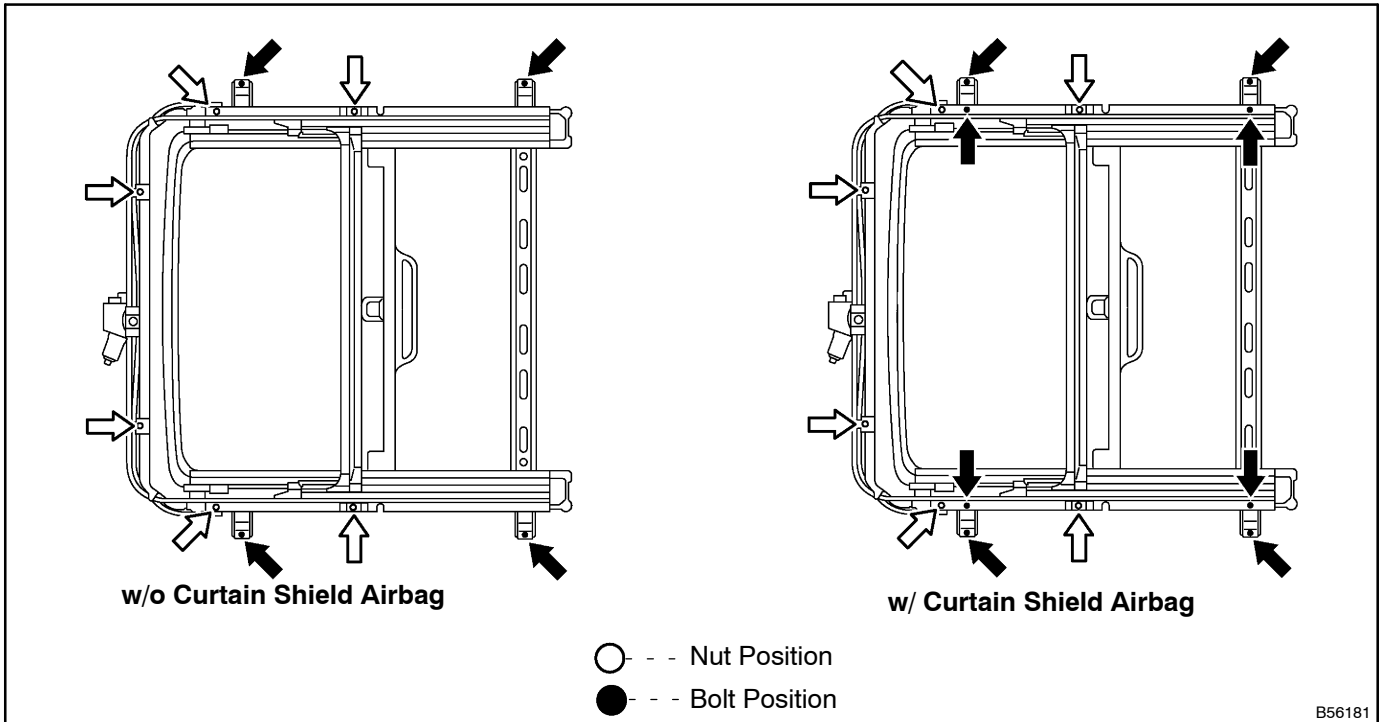


10. REMOVE SUNSHADE TRIM SUB-ASSY

- (a) Remove the 2 screws and 2 stoppers.
- (b) Remove the sunshade trim.
- (c) Employ the same manner described above to the other side.

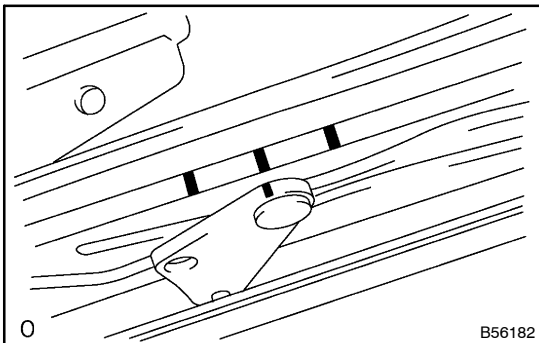

11. ADJUST THE FULLY CLOSED POSITION

- (a) By using a screwdriver which tip is taped around, slide the drive cable of the sliding roof to align the matchmarks.

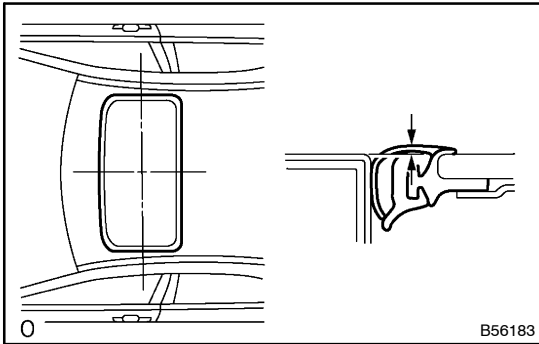


12. INSTALL SLIDING ROOF GLASS SUB-ASSY

- (a) Check for a difference in level between the sliding roof (weatherstrip) and roof panel.

Corner of rear side:

$0 \pm 1.5 \text{ mm} (0 \pm 0.059 \text{ in.})$

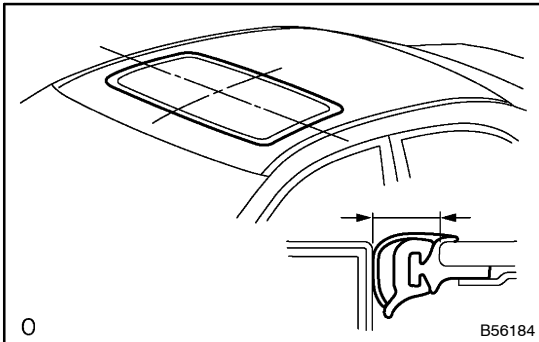

- (b) Check for a difference in level between the sliding roof (glass) and roof panel.

NOTICE:

The clearance should be thoroughly even.

- (c) Adjustment the roof panel.

- (1) Using a Torx driver T25, loosen a screw to adjust the sliding roof panel position.

When the adjustment has done, tighten the screw there.

13. RESET THE SLIDING ROOF POSITION (See page 74-6)

14. INSPECT FOR LEAK

- (a) Adjusting the sliding roof, check there is no water leak.
(b) In case of water leak, readjust the sliding roof.